

In-line Pump

Etaline

Installation/Operating Manual



Legal information/Copyright

Installation/Operating Manual Etaline

Original operating manual

All rights reserved. The contents provided herein must neither be distributed, copied, reproduced, edited or processed for any other purpose, nor otherwise transmitted, published or made available to a third party without the manufacturer's express written consent.

Subject to technical modification without prior notice.

© KSB SE & Co. KGaA, Frankenthal 22/06/2022

Contents

	Glossary	5
1	General.....	6
1.1	Principles	6
1.2	Installation of partly completed machinery.....	6
1.3	Target group.....	6
1.4	Other applicable documents.....	6
1.5	Symbols	6
1.6	Key to safety symbols/markings.....	7
2	Safety	8
2.1	General.....	8
2.2	Intended use	8
2.3	Personnel qualification and training.....	8
2.4	Consequences and risks caused by non-compliance with this manual	9
2.5	Safety awareness	9
2.6	Safety information for the operator/user	9
2.7	Safety information for maintenance, inspection and installation	9
2.8	Unauthorised modes of operation	10
2.9	Explosion protection	10
2.9.1	Marking	10
2.9.2	Temperature limits.....	10
2.9.3	Monitoring equipment.....	11
2.9.4	Operating limits	11
3	Transport/Storage/Disposal	12
3.1	Checking the condition upon delivery	12
3.2	Transport.....	12
3.3	Storage/preservation	13
3.4	Return to supplier.....	14
3.5	Disposal	14
4	Description of the Pump (Set)	15
4.1	General.....	15
4.2	Product information.....	15
4.2.1	Product information as per Regulation No. 1907/2006 (REACH)	15
4.2.2	Product information as per Ecodesign for Energy-Related Products Regulations 2010.....	15
4.3	Designation.....	15
4.4	Name plate.....	17
4.5	Design details.....	17
4.6	Configuration and function.....	19
4.7	Noise characteristics	20
4.8	Scope of supply.....	20
4.9	Dimensions and weights	20
5	Installation at Site	21
5.1	Checks to be carried out prior to installation.....	21
5.2	Installing the pump set	21
5.3	Piping	22
5.3.1	Connecting the piping.....	22
5.3.2	Permissible forces and moments at the pump nozzles.....	24
5.3.3	Vacuum balance line.....	24
5.3.4	Auxiliary connections.....	25
5.4	Enclosure/insulation	26
5.5	Electrical connection	26
5.5.1	Setting the time relay	27
5.5.2	Earthing	27

5.5.3	Connecting the motor	27
5.6	Checking the direction of rotation.....	27
6	Commissioning/Start-up/Shutdown	29
6.1	Commissioning/Start-up	29
6.1.1	Prerequisites for commissioning/start-up	29
6.1.2	Filling in lubricants.....	29
6.1.3	Checking the shaft seal.....	29
6.1.4	Priming and venting the pump.....	29
6.1.5	Start-up.....	31
6.1.6	Shutdown	32
6.2	Operating limits.....	32
6.2.1	Ambient temperature.....	33
6.2.2	Frequency of starts.....	33
6.2.3	Fluid handled	34
6.3	Shutdown/storage/preservation	34
6.3.1	Measures to be taken for shutdown	34
6.4	Returning to service	35
7	Servicing/Maintenance	36
7.1	Safety regulations.....	36
7.2	Servicing/Inspection.....	37
7.2.1	Supervision of operation	37
7.2.2	Inspection work.....	39
7.3	Drainage/cleaning	40
7.4	Dismantling the pump set.....	40
7.4.1	General information/Safety regulations.....	40
7.4.2	Preparing the pump set.....	41
7.4.3	Dismantling the complete pump set	41
7.4.4	Removing the motor.....	41
7.4.5	Removing the back pull-out unit	42
7.4.6	Removing the impeller	42
7.4.7	Removing the mechanical seal	42
7.5	Reassembling the pump set.....	43
7.5.1	General information/Safety regulations.....	43
7.5.2	Installing the mechanical seal	44
7.5.3	Fitting the impeller	45
7.5.4	Installing the back pull-out unit	45
7.5.5	Mounting the motor.....	45
7.6	Tightening torques.....	47
7.7	Spare parts stock.....	48
7.7.1	Ordering spare parts.....	48
7.7.2	Recommended spare parts stock	48
7.7.3	Interchangeability of Etaline and Etabloc pump components	49
8	Trouble-shooting.....	51
9	Related Documents	53
9.1	Installation types	53
9.2	Exploded view and list of components	56
9.2.1	Variant with bolted casing cover	56
9.2.2	Variant with clamped casing cover	58
9.2.3	Variant with pump feet for vertical installation	59
9.3	General assembly drawing with list of components	60
10	UK Declaration of Conformity.....	62
11	Certificate of Decontamination.....	63
	Index	64

Glossary

ACS

French drinking water regulations (ACS = Attestation de Conformité Sanitaire)

WRAS

Approved by all water suppliers in the UK (WRAS = Water Regulations Advisory Scheme)

Back pull-out unit

Pump without pump casing; partly completed machinery

Certificate of decontamination

A certificate of decontamination is enclosed by the customer when returning the product to the manufacturer to certify that the product has been properly drained to eliminate any environmental and health hazards arising from components in contact with the fluid handled.

Close-coupled design

Motor directly fitted to the pump via a flange or a drive lantern

Discharge line

The pipeline which is connected to the discharge nozzle

Hydraulic system

The part of the pump in which the kinetic energy is converted into pressure energy

IE3

Efficiency class to IEC 60034-30: 3 = Premium Efficiency (IE = International Efficiency)

In-line design

A pump whose suction and discharge nozzle are arranged opposite each other and have the same nominal diameter.

Pool of pumps

Customers/operators' pumps which are purchased and stored regardless of their later use.

Pump

Machine without drive, additional components or accessories

Suction lift line/suction head line

The pipeline which is connected to the suction nozzle

UBA

German drinking water regulations to German Environment Agency

1 General

1.1 Principles

This operating manual is valid for the type series and variants indicated on the front cover.

The operating manual describes the proper and safe use of this equipment in all phases of operation.

The name plate indicates the type series and size, the main operating data, the order number and the order item number. The order number and order item number clearly identify the pump set and serve as identification for all further business processes.

In the event of damage, immediately contact your nearest KSB service facility to maintain the right to claim under warranty.

1.2 Installation of partly completed machinery

To install partly completed machinery supplied by KSB refer to the sub-sections under Servicing/Maintenance.

1.3 Target group

This operating manual is aimed at the target group of trained and qualified specialist technical personnel. (⇒ Section 2.3, Page 8)

1.4 Other applicable documents

Table 1: Overview of other applicable documents

Document	Contents
Data sheet	Description of the technical data of the pump (set)
General arrangement drawing / outline drawing	Description of mating dimensions and installation dimensions for the pump (set), weights
Drawing of auxiliary connections	Description of auxiliary connections
Hydraulic characteristic curve	Characteristic curves showing head, NPSH required, efficiency and power input
General assembly drawing ¹⁾	Sectional drawing of the pump
Sub-supplier product literature ¹⁾	Operating manuals and other product literature describing accessories and integrated machinery components
Spare parts lists ¹⁾	Description of spare parts
Piping layout ¹⁾	Description of auxiliary piping
List of components ¹⁾	Description of all pump components
Assembly drawing ¹⁾	Sectional drawing of the installed shaft seal


For accessories and/or integrated machinery components, observe the relevant manufacturer's product literature.

1.5 Symbols

Table 2: Symbols used in this manual








Symbol	Description
✓	Conditions which need to be fulfilled before proceeding with the step-by-step instructions
▷	Safety instructions
⇒	Result of an action
⇔	Cross-references

¹ If included in agreed scope of supply

Symbol	Description
1. 2.	Step-by-step instructions
	Note Recommendations and important information on how to handle the product

1.6 Key to safety symbols/markings

Table 3: Definition of safety symbols/markings

Symbol	Description
 DANGER	DANGER This signal word indicates a high-risk hazard which, if not avoided, will result in death or serious injury.
 WARNING	WARNING This signal word indicates a medium-risk hazard which, if not avoided, could result in death or serious injury.
 CAUTION	CAUTION This signal word indicates a hazard which, if not avoided, could result in damage to the machine and its functions.
	Explosion protection This symbol identifies information about avoiding explosions in potentially explosive atmospheres in accordance with the UK regulation. <i>Equipment and Protective Systems Intended for Use in Potentially Explosive Atmospheres Regulations 2016.</i>
	General hazard In conjunction with one of the signal words this symbol indicates a hazard which will or could result in death or serious injury.
	Electrical hazard In conjunction with one of the signal words this symbol indicates a hazard involving electrical voltage and identifies information about protection against electrical voltage.
	Machine damage In conjunction with the signal word CAUTION this symbol indicates a hazard for the machine and its functions.



2 Safety

All the information contained in this section refers to hazardous situations.

In addition to the present general safety information the action-related safety information given in the other sections must be observed.

2.1 General

- This operating manual contains general installation, operating and maintenance instructions that must be observed to ensure safe operation of the system and prevent personal injury and damage to property.
- Comply with all the safety instructions given in the individual sections of this operating manual.
- The operating manual must be read and understood by the responsible specialist personnel/operators prior to installation and commissioning.
- The contents of this operating manual must be available to the specialist personnel at the site at all times.
- Information and markings attached directly to the product must always be complied with and kept in a perfectly legible condition at all times. This applies to, for example:
 - Arrow indicating the direction of rotation
 - Markings for connections
 - Name plate
- The operator is responsible for ensuring compliance with all local regulations not taken into account.

2.2 Intended use

- The pump (set) must only be operated in the fields of application and within the use limits specified in the other applicable documents.
- Only operate pumps/pump sets which are in perfect technical condition.
- Do not operate the pump (set) in partially assembled condition.
- Only use the pump (set) to handle the fluids described in the data sheet or product literature of the pump variant.
- Never operate the pump (set) without the fluid to be handled.
- Observe the minimum flow rate and maximum flow rate indicated in the data sheet or product literature (to prevent overheating, mechanical seal damage, cavitation damage, bearing damage, etc).
- Always operate the pump (set) in the direction of rotation it is intended for.
- Do not throttle the flow rate on the suction side of the pump (to prevent cavitation damage).
- Consult the manufacturer about any use or mode of operation not described in the data sheet or product literature.

2.3 Personnel qualification and training

All personnel involved must be fully qualified to transport, install, operate, maintain and inspect the machinery this manual refers to.

The responsibilities, competence and supervision of all personnel involved in transport, installation, operation, maintenance and inspection must be clearly defined by the operator.

Deficits in knowledge must be rectified by means of training and instruction provided by sufficiently trained specialist personnel. If required, the operator can commission the manufacturer/supplier to train the personnel.

Training on the pump (set) must always be supervised by technical specialist personnel.

2.4 Consequences and risks caused by non-compliance with this manual

- Non-compliance with these operating instructions will lead to forfeiture of warranty cover and of any and all rights to claims for damages.
- Non-compliance can, for example, have the following consequences:
 - Hazards to persons due to electrical, thermal, mechanical and chemical effects and explosions
 - Failure of important product functions
 - Failure of prescribed maintenance and servicing practices
 - Hazard to the environment due to leakage of hazardous substances

2.5 Safety awareness

In addition to the safety information contained in this operating manual and the intended use, the following safety regulations shall be complied with:

- Accident prevention, health regulations and safety regulations
- Explosion protection regulations
- Safety regulations for handling hazardous substances
- Applicable standards, directives and laws

2.6 Safety information for the operator/user

- Fit protective equipment (e.g. contact guards) supplied by the operator for hot, cold or moving parts, and check that the equipment functions properly.
- Do not remove any protective equipment (e.g. contact guards) during operation.
- Provide the personnel with protective equipment and make sure it is used.
- Contain leakages (e.g. at the shaft seal) of hazardous fluids handled (e.g. explosive, toxic, hot) so as to avoid any danger to persons and the environment. Adhere to all relevant laws.
- Eliminate all electrical hazards. (In this respect refer to the applicable national safety regulations and/or regulations issued by the local energy supply companies.)
- If stopping the pump does not increase potential risk, fit an emergency-stop control device in the immediate vicinity of the pump (set) during pump set installation.

2.7 Safety information for maintenance, inspection and installation

- Modifications or alterations of the pump (set) are only permitted with the manufacturer's prior consent.
- Use only original spare parts or parts/components authorised by the manufacturer. The use of other parts/components can invalidate any liability of the manufacturer for resulting damage.
- The operator ensures that maintenance, inspection and installation are performed by authorised, qualified specialist personnel who are thoroughly familiar with the manual.
- Only carry out work on the pump (set) during standstill of the pump.
- Only perform work on the pump set when it has been disconnected from the power supply (de-energised).
- The pump (set) must have cooled down to ambient temperature.
- Pump pressure must have been released and the pump must have been drained.

- When taking the pump set out of service always adhere to the procedure described in the manual. (⇒ Section 6.1.6, Page 32) (⇒ Section 6.3, Page 34)
- Decontaminate pumps which handle fluids posing a health hazard. (⇒ Section 7.3, Page 40)
- As soon as the work has been completed, re-install and re-activate any safety-relevant devices and protective devices. Before returning the product to service, observe all instructions on commissioning. (⇒ Section 6.1, Page 29)

2.8 Unauthorised modes of operation

Never operate the pump (set) outside the limits stated in the data sheet and in this operating manual.

The warranty relating to the operating reliability and safety of the pump (set) supplied is only valid if the equipment is used in accordance with its intended use. (⇒ Section 2.2, Page 8)

2.9 Explosion protection



Always observe the information on explosion protection given in this section when operating the product in potentially explosive atmospheres.

Pumps/Pump sets must not be used in potentially explosive atmospheres unless marked as explosion-proof **and** identified as such in the data sheet.

Special conditions apply to the operation of explosion-proof pump sets in accordance with the UK's *Equipment and Protective Systems Intended for Use in Potentially Explosive Atmospheres Regulations 2016*.

Especially adhere to the sections in this manual marked with the Ex symbol and the following sections, (⇒ Section 2.9.1, Page 10) to (⇒ Section 2.9.4, Page 11)

The explosion-proof status of the pump is only assured if the pump is used in accordance with its intended use.

Never operate the product outside the limits stated in the data sheet and on the name plate.

Prevent impermissible modes of operation at all times.

2.9.1 Marking

Pump The marking on the pump refers to the pump part only.

Example of such marking:

II 2G Ex h IIC T5-T1 Gb

Refer to the Temperature limits table for the maximum temperatures permitted for the individual pump variants. (⇒ Section 2.9.2, Page 10)

The pump complies with the requirements of type of protection constructional safety "c" to ISO 80079-37.

Shaft coupling An EC manufacturer's declaration is required for the shaft coupling; the shaft coupling must be marked accordingly.

Motor The motor has its own marking. The marking is maintained on the condition that the temperatures the pump causes to develop at the motor flange and motor shaft are permitted by the motor manufacturer.

The motors fitted by KSB on pumps certified for potentially explosive atmospheres meet this condition.

Misuse, malfunctions or non-compliance with the instructions may result in substantially higher temperatures.

2.9.2 Temperature limits

In normal pump operation, the highest temperatures are to be expected on the surface of the pump casing and at the shaft seal.

The surface temperature at the pump casing corresponds to the temperature of the fluid handled. If the pump is heated in addition, the operator of the system is responsible for observing the specified temperature class and fluid temperature (operating temperature).

The table (⇒ Table 4) lists the temperature classes and the resulting maximum permissible fluid temperatures. The values shown correspond to the theoretical limits. They include only a general safety margin for the mechanical seal. For single mechanical seals, the safety margin required for specific operating conditions and mechanical seal designs may be substantially higher. If operating conditions differ from those stated on the data sheet, or if different mechanical seals are used, the actual safety margin required needs to be determined individually. If in doubt please contact the manufacturer.

The temperature class specifies the maximum permissible temperature at the surface of the pump set during operation. For the permissible operating temperature of the pump in question refer to the data sheet.

Table 4: Temperature limits

Temperature class to ISO 80079-36	Maximum permissible fluid temperature ²⁾
T1	Temperature limit of the pump
T2	280 °C
T3	185 °C
T4	120 °C
T5	85 °C
T6	Only after consultation with the manufacturer

If the pump is to be operated at a higher temperature, the data sheet is missing or if the pump is part of a pool of pumps, contact KSB for the maximum permissible operating temperature.

Motor supplied by the operator

If a pump is supplied without motor (as part of a pool of pumps), the motor specified in the pump data sheet must meet the following conditions:

- The permissible temperature limits at the motor flange and motor shaft must be higher than the temperatures generated by the pump.
- Contact the manufacturer for the actual pump temperatures.

2.9.3 Monitoring equipment

The pump (set) must only be operated within the limits specified in the data sheet and on the name plate.

If the system operator cannot warrant compliance with these operating limits, appropriate monitoring devices must be used.

Check whether monitoring equipment is required to ensure that the pump set functions properly.

Contact KSB for further information about monitoring equipment.

2.9.4 Operating limits

The minimum flow rates indicated in (⇒ Section 6.2.3.1, Page 34) refer to water and water-like fluids handled. Longer operating periods with these fluids and at the flow rates indicated will not cause an additional increase in the temperatures at the pump surface. However, if the physical properties of the fluids handled are different from water, it is essential to check whether an additional heat build-up may occur and if the minimum flow rate must therefore be increased. The calculation formula in (⇒ Section 6.2.3.1, Page 34) can be used to check whether an additional heat build-up may lead to a dangerous temperature increase at the pump surface.


² Subject to further limitations for mechanical seal temperature rise

3 Transport/Storage/Disposal

3.1 Checking the condition upon delivery

1. On transfer of goods, check each packaging unit for damage.
2. In the event of in-transit damage, assess the exact damage, document it and notify KSB or the supplying dealer and the insurer about the damage in writing immediately.

3.2 Transport

	<div style="background-color: #e67e22; color: white; padding: 5px;">! DANGER</div> <p>The pump (set) could slip out of the suspension arrangement Danger to life from falling parts!</p> <ul style="list-style-type: none"> ▷ Always transport the pump (set) in the specified position. ▷ Never attach the suspension arrangement to the free shaft end or the motor eyebolt. ▷ Observe the information about weights, centre of gravity and fastening points. ▷ Observe the applicable local accident prevention regulations. ▷ Use suitable, permitted lifting accessories, e.g. self-tightening lifting tongs.
---	--

To transport the pump / pump set suspend it from the lifting tackle as shown.

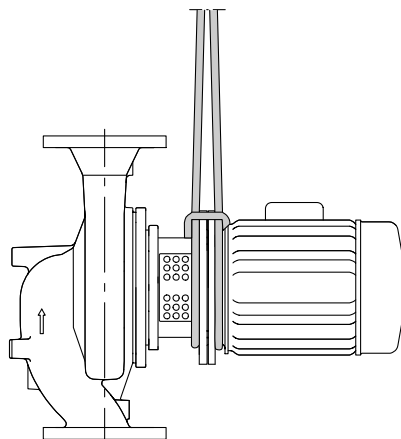



Fig. 1: Transporting the pump set

	<div style="background-color: #f1c40f; color: white; padding: 5px;">! WARNING</div> <p>Failure to re-install or re-activate protective devices Risk of injury from moving parts!</p> <ul style="list-style-type: none"> ▷ Dismantle the contact guards before transporting the back pull-out unit. ▷ Secure the dismantled contact guards to the unit to prevent loss. ▷ Fit the contact guards again immediately after transport.
---	--

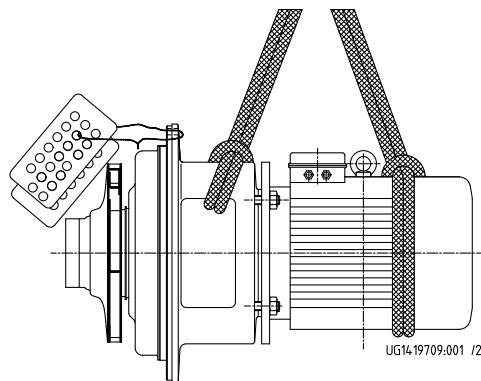



Fig. 2: Transporting the back pull-out unit

	<p style="background-color: yellow; margin-bottom: 5px;">CAUTION</p> <p>Incorrect transport of the pump Damage to the shaft seal!</p> <p>▷ For transport, lock the pump shaft with a suitable transport lock to prevent any movement of the shaft.</p>
---	--

When transporting the pump without motor, shaft 210 must be locked.

1. Remove the screws on cover plates 68-3, press the cover plates slightly together and remove from drive lantern 341.
2. Insert lock washer 931.95 into the shaft groove.
3. Tighten hexagon head bolt 901.50.

To transport the pump / pump set suspend it from the lifting tackle as shown.

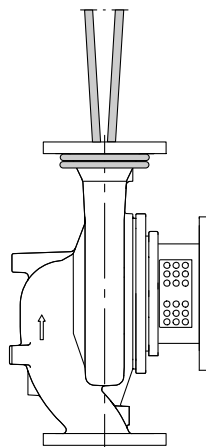




Fig. 3: Transporting the pump

3.3 Storage/preservation

	<p style="background-color: yellow; margin-bottom: 5px;">CAUTION</p> <p>Damage during storage due to humidity, dirt or vermin Corrosion/contamination of the pump (set)!</p> <p>▷ For outdoor storage cover the pump (set) or the packaged pump (set) and accessories with waterproof material.</p>
---	---

	<div style="background-color: #FFD700; padding: 5px;">CAUTION</div> <p>Wet, contaminated or damaged openings and connections</p> <p>Leakage or damage to the pump!</p> <ul style="list-style-type: none"> ▷ Clean and cover pump openings and connections as required prior to putting the pump into storage.
---	--

If commissioning is to take place some time after delivery, we recommend that the following measures be taken for pump (set) storage.

- Store the pump (set) in a dry, protected room where the atmospheric humidity is as constant as possible.
- Rotate the shaft by hand once a month, e.g. via the motor fan.

If properly stored indoors, the pump set is protected for a maximum of 12 months. New pumps/pump sets are supplied by our factory duly prepared for storage.


For storing a pump (set) which has already been operated, the shutdown measures must be adhered to. (⇒ Section 6.3.1, Page 34)

3.4 Return to supplier

1. Drain the pump as per operating instructions. (⇒ Section 7.3, Page 40)
2. Flush and clean the pump, particularly if it has been used for handling noxious, explosive, hot or other hazardous fluids.
3. If the pump has handled fluids whose residues could lead to corrosion damage in the presence of atmospheric humidity or could ignite upon contact with oxygen, the pump must also be neutralised, and anhydrous inert gas must be blown through the pump to ensure drying.
4. Always complete and enclose a certificate of decontamination when returning the pump.
Indicate any safety measures and decontamination measures taken.
(⇒ Section 11, Page 63)

	<div style="background-color: #0070C0; color: white; padding: 5px;">NOTE</div> <p>If required, a blank certificate of decontamination can be downloaded from the following web site: www.ksb.com/certificate_of_decontamination</p>
---	--

3.5 Disposal

	<div style="background-color: #FFA500; padding: 5px;">WARNING</div> <p>Fluids handled, consumables and supplies which are hot and/or pose a health hazard</p> <p>Hazard to persons and the environment!</p> <ul style="list-style-type: none"> ▷ Collect and properly dispose of flushing fluid and any fluid residues. ▷ Wear safety clothing and a protective mask if required. ▷ Observe all legal regulations on the disposal of fluids posing a health hazard.
---	--

1. Dismantle the pump (set).
Collect greases and other lubricants during dismantling.
2. Separate and sort the pump materials, e.g. by:
 - Metals
 - Plastics
 - Electronic waste
 - Greases and other lubricants
3. Dispose of materials in accordance with local regulations or in another controlled manner.

4 Description of the Pump (Set)

4.1 General

- Non-self-priming in-line pump
- Handling clean or aggressive fluids not chemically and mechanically aggressive to the pump materials.

4.2 Product information

4.2.1 Product information as per Regulation No. 1907/2006 (REACH)

For information as per chemicals Regulation (EC) No. 1907/2006 (REACH), see <https://www.ksb.com/ksb-en/About-KSB/Corporate-responsibility/reach/>.

4.2.2 Product information as per Ecodesign for Energy-Related Products Regulations 2010

- Minimum efficiency index: see name plate, key to name plate
- The benchmark for the most efficient water pumps is $MEI \geq 0.70$.
- Year of construction: see name plate, key to name plate
- Manufacturer's name or trade mark, commercial registration number and place of manufacture: see data sheet or order documentation
- Product's type and size identifier: see name plate, key to name plate
- Hydraulic pump efficiency (%) with trimmed impeller: see data sheet
- Pump performance curves, including efficiency characteristics: see documented characteristic curve
- The efficiency of a pump with a trimmed impeller is usually lower than that of a pump with full impeller diameter. Trimming of the impeller will adapt the pump to a fixed duty point, leading to reduced energy consumption. The minimum efficiency index (MEI) is based on the full impeller diameter.
- Operation of this water pump with variable duty points may be more efficient and economic when controlled, for example, by the use of a variable speed drive that matches the pump duty to the system.
- Information on dismantling, recycling and disposal after decommissioning: (⇒ Section 3.5, Page 14)
- Information on benchmark efficiency or benchmark efficiency graph for $MEI = 0.70$ (0.40) for the pump based on the model shown in the Figure are available at: <http://www.europump.org/efficiencycharts>

4.3 Designation

Table 5: 1st designation example

Position																																											
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44
E	T	L	-	0	3	2	-	0	3	2	-	1	6	0	-	G	G	S	A	V	0	1	D	2	1	1	0	0	2	e	x	B	K	S	B	I	E	3	P	D	2	E	M
See name plate and data sheet																									See data sheet																		

Table 6: Designation key

Position	Code	Description
1-4	Pump type	
	ETL	Etaline
	ETLZ	Etaline Z (Refer to Etaline to select back pull-out unit)
5-16	Size [mm], e.g.	
	032	Nominal suction nozzle diameter
	032	Nominal discharge nozzle diameter
	160	Nominal impeller diameter

Position	Code	Description			
17	Pump casing material				
	G	Cast iron	EN-GJL-250 / A48CL35		
18	Impeller material				
	B	Bronze	CC480K-GS / B30 C90700		
	C	Stainless steel	1.4408 / A743CF8M		
	G	Cast iron	EN-GJL-250 / A48CL35		
19	Design				
	H	Approved for drinking water to ACS			
	K	Approved for drinking water to KSB standard			
	S	Standard			
	U	Approved for drinking water to UBA			
	W	Approved for drinking water to WRAS			
	X	Non-standard (BT3D, BT3)			
20	Casing cover connections				
	A	Conical seal chamber			
21	Shaft seal type				
	V	Single mechanical seal with vented chamber (A-type cover)			
22-23	Seal code, single mechanical seal				
	01	Q1Q1VGG	1 (ZN1181)	≥ -20 - ≤ +110 [°C]	
	06	U3BEGG (shaft units 25, 35)	RMG13G606	≥ -30 - ≤ +140 [°C]	
	07	Q1Q1EGG	1A (ZN1181)	≥ -30 - ≤ +140 [°C]	
	09	U3U3VGG	MG13G60	≥ -20 - ≤ +110 [°C]	
	10	Q1Q1X4GG	1 (ZN1181)	≥ -20 - ≤ +110 [°C]	
	11	BQ1EGG-WA (WA = drinking water)	1 (ZN1181)	≥ -30 - ≤ +110 [°C]	
	22	AQ1EGG (shaft unit 55)	M32N69	≥ -30 - ≤ +140 [°C]	
	66	Q7Q7EGG	MG13G6	≥ -30 - ≤ +120 [°C]	
24	Scope of supply				
	A	Pump only (Fig. 0)			
	D	Pump, motor			
	E	Back pull-out unit			
25	Shaft unit				
	2	Shaft unit 25			
	3	Shaft unit 35			
	5	Shaft unit 55			
26-29	Motor rating P _N [kW]				
	0002	0,25			
			
	0550	55,00			
30	Number of motor poles				
31-32	Explosion protection				
	ex	With explosion-proof motor			
	--	Without explosion-proof motor			
33	Product generation				
	B	Etaline / Etaline Z			
34-36	Motor manufacturer				
	KSB	KSB / KSB's choice			
	SIE	Siemens			
	LOH	Loher			
	HAL	Halter			

Position	Code	Description
37-39	Efficiency class	
40-43	PumpDrive	
	PD2	PumpDrive 2
	PD2E	PumpDrive 2 Eco
	IFS	MyFlow Drive
44	PumpMeter	
	M	PumpMeter

4.4 Name plate

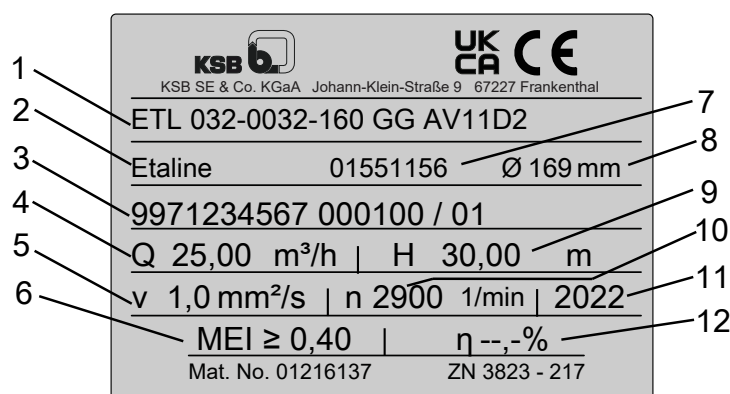


Fig. 4: Name plate (example)

1	Type series code, size and version	2	Type series
3	KSB order No., order item No. and consecutive No.	4	Flow rate
5	Kinematic viscosity of the fluid handled	6	Minimum efficiency index
7	Material number (if applicable)	8	Impeller diameter
9	Head	10	Speed
11	Year of construction	12	Efficiency (see data sheet)

4.5 Design details

Design

- Volute casing pump
- Close-coupled design / in-line design
- Single-stage
- Horizontal installation / vertical installation
- Pump and motor on a common shaft
- Rigid connection between pump and motor

Pump casing

- Radially split volute casing
- Replaceable casing wear rings
- In-line design

Impeller type

- Closed radial impeller with multiply curved vanes

Shaft seal

- Single mechanical seals and double mechanical seals to EN 12756
- Shaft equipped with replaceable shaft protecting sleeve in the shaft seal area

Bearings

- Radial ball bearings in the motor housing

Drive

- Efficiency class IE3 to IEC 60034-30

Standard design:

- KSB surface-cooled IEC three-phase current squirrel-cage motor
- Rated voltage (50 Hz) 220-240 V / 380-420 V \leq 2.20 kW
- Rated voltage (50 Hz) 380-420 V / 660 - 725 V \geq 3.00 kW
- Rated voltage (60 Hz) 440-480 V \leq 2.60 kW
- Rated voltage (60 Hz) 440-480 V \geq 3.60 kW
- Type of construction IM V1 \leq 4.00 kW
- Type of construction IM V15 \geq 5.50 kW
- Enclosure IP55
- Duty type: continuous duty S1
- Thermal class F with temperature sensor, 3 PTC thermistors

Explosion-proof design:

- KSB surface-cooled IEC three-phase current squirrel-cage motor
- Rated voltage (50 Hz) 220 - 240 V / 380 - 420 V \leq 1.85 kW
- Rated voltage (50 Hz) 380 - 420 V / 660 - 725 V \geq 2.50 kW
- Type of construction IM V1 \leq 3.30 kW
- Type of construction IM V15 \geq 4.60 kW
- Enclosure IP55 or IP54
- Duty type: continuous duty S1
- Type of protection EEx eb II
- Temperature class T3

4.6 Configuration and function

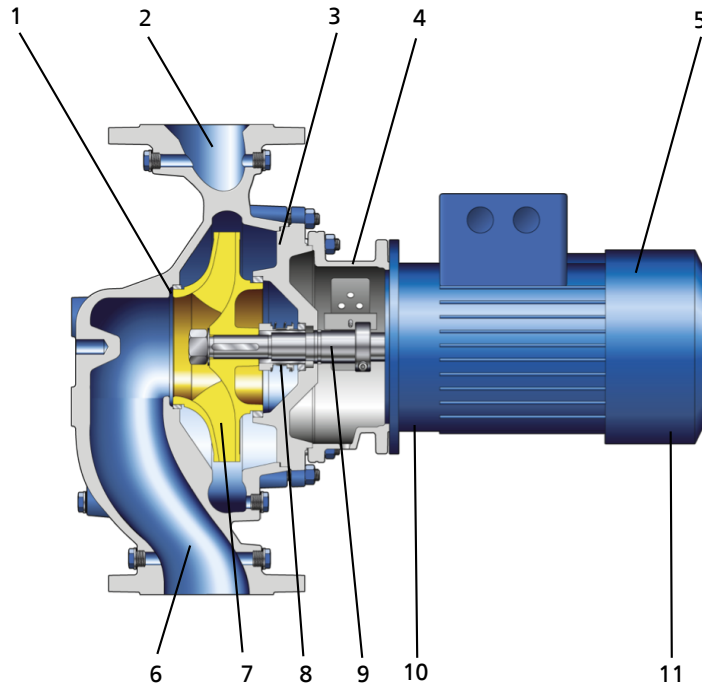


Fig. 5: Sectional drawing

1	Clearance gap	2	Discharge nozzle
3	Casing cover	4	Drive lantern
5	Motor housing	6	Suction nozzle
7	Impeller	8	Shaft seal
9	Shaft	10	Rolling element bearing
11	Rolling element bearing		

Design The pump is designed with a radial fluid inlet (suction nozzle) and a radial outlet (discharge nozzle) arranged on the same axis. The hydraulic system is rigidly connected to the motor by a shaft coupling.

Function The fluid enters the pump via the suction nozzle (6) and is accelerated outward by the rotating impeller (7). In the flow passage of the pump casing the kinetic energy of the fluid is converted into pressure energy. The fluid is pumped to the discharge nozzle (2), where it leaves the pump. The clearance gap (1) prevents any fluid from flowing back from the casing to the suction nozzle. At the rear side of the impeller, the shaft (9) enters the hydraulic system through the casing cover (3). The shaft passage through the cover is sealed to atmosphere with a shaft seal (8). The shaft runs in rolling element bearings (10 and 11), which are supported by a motor housing (5) linked with the pump casing and/or casing cover via the drive lantern (4).

Sealing The pump is sealed by a standardised mechanical seal.

4.7 Noise characteristics

Table 7: Surface sound pressure level L_{pA} ^{3) 4)}

Rated power input P_N (kW)	Pump set	
	1450 rpm	2900 rpm
	[dB]	
0,25	53	-
0,37	54	-
0,55	55	-
0,75	57	64
1,1	60	64
1,5	60	69
2,2	64	69
3	64	71
4	62	73
5,5	68	72
7,5	68	72
11	69	75
15	69	75
18,5	70	75
22	72	78
30	71	79
37	71	79
45	73	79
55	74	-

4.8 Scope of supply

Depending on the model, the following items are included in the scope of supply:

- Pump

Drive

- Surface-cooled IEC three-phase current squirrel-cage motor

Accessories

- Pump foot for vertical installation of the drive
- Y-pipe for twin pumps (DN 40 to DN 100)
- Switchgears for single and twin pumps

4.9 Dimensions and weights

For dimensions and weights refer to the general arrangement drawing/outline drawing of the pump/pump set.


³⁾ Surface sound pressure level as per ISO 3744 and DIN EN ISO 20361 ; valid for a pump operating range of $Q/Q_{BEP} = 0.8 - 1.1$ and non-cavitating operation. If noise levels are to be guaranteed: Add +3 dB for measuring and constructional tolerance.

⁴⁾ Increase for 60 Hz operation: 3500 rpm +3 dB, 1750 rpm +1 dB

5 Installation at Site


5.1 Checks to be carried out prior to installation


Place of installation

	WARNING
	<p>Installation on a mounting surface which is unsecured and cannot support the load Personal injury and damage to property!</p> <ul style="list-style-type: none"> ▷ Use a concrete of compressive strength class C12/15 which meets the requirements of exposure class XS1 to BS 206 . ▷ The mounting surface must be set, even, and level. ▷ Observe the weights indicated.


1. Check the structural requirements.
All structural work required must have been prepared in accordance with the dimensions stated in the outline drawing/general arrangement drawing.

5.2 Installing the pump set

	DANGER
	<p>Electrostatic charging due to insufficient potential equalisation Explosion hazard!</p> <ul style="list-style-type: none"> ▷ Make sure that the connection between pump and baseplate is electrically conductive.

	CAUTION
	<p>Ingress of leakage into the motor Damage to the pump!</p> <ul style="list-style-type: none"> ▷ Never install the pump set with the "motor below".

The pump set may be flanged directly into the piping. (⇒ Section 9.1, Page 53)

	NOTE
	<p>On pump sets with horizontal motor axis, support motors of size 160 (11 kW) and above without transmitting any stresses or strains. Use the foot fastening holes at the motor housing for this purpose.</p>

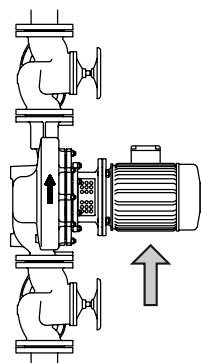





Fig. 6: Supporting the motor


1. Position the pump set on the foundation or in the piping and fasten it.
2. Place a spirit level on the discharge nozzle to align the pump set.
3. Change the position of the plugs for the condensation drain holes (if any) at the motor, depending on the installation position.

5.3 Piping

5.3.1 Connecting the piping

	<div style="background-color: #f4a460; padding: 5px;">⚠ DANGER</div> <p>Impermissible loads acting on the pump nozzles Danger to life from leakage of hot, toxic, corrosive or flammable fluids!</p> <ul style="list-style-type: none"> ▷ Do not use the pump as an anchorage point for the piping. ▷ Anchor the pipelines in close proximity to the pump and connect them properly without transmitting any stresses or strains. ▷ Observe the permissible forces and moments at the pump nozzles. (⇒ Section 5.3.2, Page 24) ▷ Take appropriate measures to compensate for thermal expansion of the piping.
	<div style="background-color: #f4d03f; padding: 5px;">CAUTION</div> <p>Incorrect earthing during welding work at the piping Destruction of rolling element bearings (pitting effect)!</p> <ul style="list-style-type: none"> ▷ Never earth the electric welding equipment on the pump or baseplate. ▷ Prevent current flowing through the rolling element bearings.
	<div style="background-color: #2980b9; color: white; padding: 5px;">NOTE</div> <p>Installing check and shut-off elements in the system is recommended, depending on the type of plant and pump. However, such elements must not obstruct proper drainage or hinder disassembly of the pump.</p>

- ✓ Suction lift lines have been laid with a rising slope, suction head lines with a downward slope towards the pump.
- ✓ A flow stabilisation section having a length equivalent to at least twice the diameter of the suction flange has been provided upstream of the suction flange.
- ✓ The nominal diameters of the pipelines are at least equal to the nominal diameters of the pump nozzles.
- ✓ Adapters to larger diameters have a diffuser angle of approximately 8° to prevent excessive pressure losses.
- ✓ The pipelines have been anchored in close proximity to the pump and connected without transmitting any stresses or strains.

	<div style="background-color: #FFD700; padding: 5px;">CAUTION</div> <p>Welding beads, scale and other impurities in the piping</p> <p>Damage to the pump!</p> <ul style="list-style-type: none"> ▷ Remove any impurities from the piping. ▷ If necessary, install a filter. ▷ Observe the information in (⇒ Section 7.2.2.2, Page 39) .
---	--

1. Thoroughly clean, flush and blow through all vessels, pipelines and connections (especially of new installations).
2. Before installing the pump in the piping, remove the flange covers on the suction and discharge nozzles of the pump.
3. Check that the inside of the pump is free from any foreign objects. Remove any foreign objects.
4. If required, install a filter in the piping (see figure: Filter in the piping).

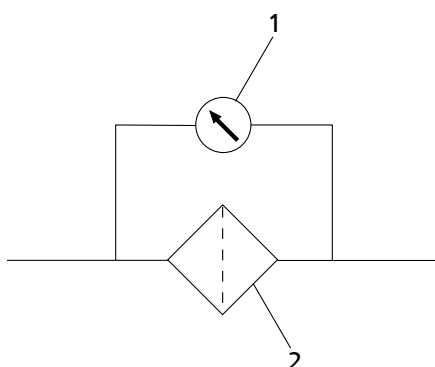




Fig. 7: Filter in the piping

1	Differential pressure gauge	2	Filter
---	-----------------------------	---	--------

	<div style="background-color: #0070C0; color: white; padding: 5px;">NOTE</div> <p>Use a filter with laid-in wire mesh (mesh width 0.5 mm, wire diameter 0.25 mm) of corrosion-resistant material.</p> <p>Use a filter with a filter area three times the cross-section of the piping.</p> <p>Conical filters have proved suitable.</p>
---	---

5. Connect the pump nozzles to the piping.

	<div style="background-color: #FFD700; padding: 5px;">CAUTION</div> <p>Aggressive flushing liquid and pickling agent</p> <p>Damage to the pump!</p> <ul style="list-style-type: none"> ▷ Match the cleaning operation mode and duration of flushing and pickling to the casing materials and seal materials used.
---	--

5.3.2 Permissible forces and moments at the pump nozzles

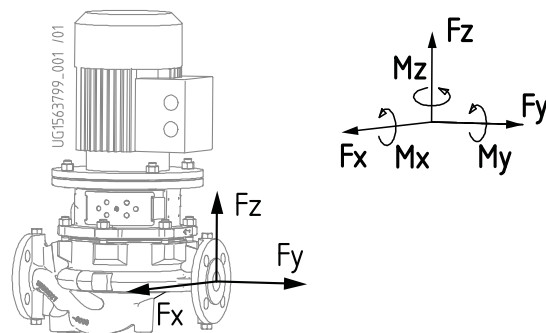


Fig. 8: Forces and moments at the pump nozzles

The data on forces and moments apply to static piping loads only. The values are only applicable if the pump is installed on a baseplate and bolted to a rigid and level foundation.

Table 8: Forces and moments at the pump nozzles

Size	DN	F_x	F_y	F_z	ΣF	M_x	M_y	M_z
		[N]	[N]	[N]	[N]	[Nm]	[Nm]	[Nm]
032-032-160	32	320	370	300	574	390	265	300
032-032-200	32	320	370	300	574	390	265	300
040-040-160	40	400	450	350	696	450	320	370
040-040-250	40	400	450	350	696	450	320	370
050-050-160	50	530	580	470	916	500	350	400
050-050-250	50	530	580	470	916	500	350	400
065-065-160	65	650	740	600	1153	530	390	420
065-065-250	65	650	740	600	1153	530	390	420
080-080-160	80	790	880	720	1385	560	400	460
080-080-200	80	790	880	720	1385	560	400	460
080-080-250	80	790	880	720	1385	560	400	460
100-100-125	100	1050	1180	950	1843	620	440	510
100-100-160	100	1050	1180	950	1843	620	440	510
100-100-200	100	1050	1180	950	1843	620	440	510
100-100-250	100	1050	1180	950	1843	620	440	510
125-125-160	125	1250	1400	1120	2186	740	530	670
125-125-200	125	1250	1400	1120	2186	740	530	670
125-125-250	125	1250	1400	1120	2186	740	530	670
150-150-200	150	1600	1750	1400	2754	880	610	720
150-150-250	150	1600	1750	1400	2754	880	610	720
200-200-250	200	2100	2350	1900	3680	1150	800	930
200-200-315	200	2100	2350	1900	3680	1150	800	930

5.3.3 Vacuum balance line



NOTE

Where fluid has to be pumped out of a vessel under vacuum, installing a vacuum balance line is recommended.

The following rules apply to vacuum balance lines:

- Minimum nominal line diameter 25 mm.
- The line extends above the highest permissible fluid level in the vessel.

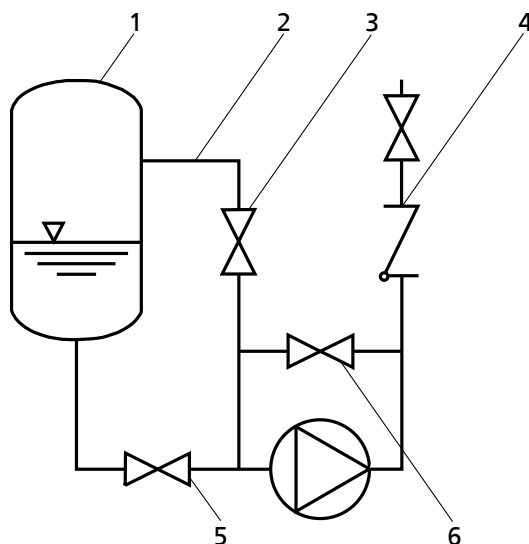


Fig. 9: Vacuum balance system

1	Vessel under vacuum	2	Vacuum balance line
3	Shut-off element	4	Swing check valve
5	Main shut-off element	6	Vacuum-tight shut-off element



NOTE

An additional line fitted with a shut-off valve (from the pump discharge nozzle to the balance line) facilitates venting of the pump before start-up.

5.3.4 Auxiliary connections



DANGER

Risk of potentially explosive atmosphere by incompatible fluids mixing in the auxiliary piping

Risk of burns!

Explosion hazard!

- ▷ Make sure that the barrier fluid or quench liquid are compatible with the fluid handled.



WARNING

Failure to use or incorrect use of auxiliary connections (e.g. barrier fluid, flushing liquid, etc.)







Risk of injury from escaping fluid!

Risk of burns!






Malfunction of the pump!

- ▷ Refer to the general arrangement drawing, the piping layout and pump markings (if any) for the quantity, dimensions and locations of auxiliary connections.
- ▷ Use the auxiliary connections provided.

5.4 Enclosure/insulation

	<div data-bbox="507 232 683 280"> DANGER</div> <p>Explosive atmosphere forming due to insufficient venting Explosion hazard!</p> <ul style="list-style-type: none"> ▷ Make sure the space between the casing cover/discharge cover and the motor flange is sufficiently vented. ▷ Do not cover the perforations of the contact guards at the drive lantern (e.g. by insulation).
	<div data-bbox="507 539 703 586"> WARNING</div> <p>The volute casing and casing/discharge cover take on the same temperature as the fluid handled Risk of burns!</p> <ul style="list-style-type: none"> ▷ Insulate the volute casing. ▷ Fit protective equipment.
	<div data-bbox="507 819 639 855">CAUTION</div> <p>Heat build-up inside the drive lantern Damage to the bearing!</p> <ul style="list-style-type: none"> ▷ Never insulate the casing cover and the drive lantern.
	<div data-bbox="507 1021 587 1059">NOTE</div> <p>Pump casings handling fluids at temperatures below freezing point may be insulated at the site, subject to the manufacturer's prior approval.</p>

5.5 Electrical connection

	<div data-bbox="507 1256 683 1303"> DANGER</div> <p>Electrical connection work by unqualified personnel Danger of death from electric shock!</p> <ul style="list-style-type: none"> ▷ Always have the electrical connections installed by a trained electrician. ▷ Observe regulations IEC 60364 and, for explosion-proof versions, BS 60079 .
	<div data-bbox="507 1503 703 1550"> WARNING</div> <p>Incorrect connection to the mains Damage to the power supply network, short circuit!</p> <ul style="list-style-type: none"> ▷ Observe the technical specifications of the local energy supply companies.
	<div data-bbox="507 1794 587 1832">NOTE</div> <p>Installing a motor protection device is recommended.</p>

1. Check the available mains voltage against the data on the motor name plate.
2. Select an appropriate starting method.

5.5.1 Setting the time relay



	<div style="background-color: #FFD700; padding: 5px;">CAUTION</div> <p>Switchover between star and delta on three-phase motors with star-delta starting takes too long.</p> <p>Damage to the pump (set)!</p> <ul style="list-style-type: none"> ▷ Keep switch-over intervals between star and delta as short as possible.
---	--


Table 9: Time relay settings for star-delta starting:

Motor rating	Y time to be set
[kW]	[s]
≤ 30	< 3
> 30	< 5

5.5.2 Earthing



	<div style="background-color: #FF4500; padding: 5px;">⚠ DANGER</div> <p>Electrostatic charging</p> <p>Explosion hazard!</p> <p>Fire hazard!</p> <p>Damage to the pump set!</p> <ul style="list-style-type: none"> ▷ Connect the PE conductor to the earthing terminal provided.
---	--



5.5.3 Connecting the motor

	<div style="background-color: #0070C0; color: white; padding: 5px;">NOTE</div> <p>In compliance with IEC 60034-8, three-phase motors are always wired for clockwise rotation (looking at the motor shaft stub).</p> <p>The pump's direction of rotation is indicated by an arrow on the pump.</p>
---	--

1. Match the motor's direction of rotation to that of the pump.
2. Observe the manufacturer's product literature supplied with the motor.

5.6 Checking the direction of rotation

	<div style="background-color: #FF4500; padding: 5px;">⚠ DANGER</div> <p>Temperature increase resulting from contact between rotating and stationary components</p> <p>Explosion hazard!</p> <p>Damage to the pump set!</p> <ul style="list-style-type: none"> ▷ Never check the direction of rotation by starting up the unfilled pump.
	<div style="background-color: #FFA500; padding: 5px;">⚠ WARNING</div> <p>Hands inside the pump casing</p> <p>Risk of injuries, damage to the pump!</p> <ul style="list-style-type: none"> ▷ Always disconnect the pump set from the power supply and secure it against unintentional start-up before inserting your hands or other objects into the pump.

	<p>CAUTION</p> <p>Incorrect direction of rotation with non-reversible mechanical seal</p> <p>Damage to the mechanical seal and leakage!</p> <ul style="list-style-type: none"> ▸ Check the direction of rotation by starting the pump set and stopping it again immediately.
	<p>CAUTION</p> <p>Drive and pump running in the wrong direction of rotation</p> <p>Damage to the pump!</p> <ul style="list-style-type: none"> ▸ Refer to the arrow indicating the direction of rotation on the pump. ▸ Check the direction of rotation. If required, check the electrical connection and correct the direction of rotation.

The correct direction of rotation of motor and pump is clockwise (seen from the motor end).

1. Start the pump set and stop it again immediately to determine the motor's direction of rotation.
2. Check the direction of rotation.
The motor's direction of rotation must match the arrow indicating the direction of rotation on the pump.
3. If the pump runs in the wrong direction of rotation, check the electrical connection of the motor and the control system, if necessary.

6 Commissioning/Start-up/Shutdown

6.1 Commissioning/Start-up

6.1.1 Prerequisites for commissioning/start-up

Before commissioning/starting up the pump set, make sure that the following conditions are met:

- The pump set has been properly connected to the power supply and is equipped with all protection devices. (⇒ Section 5.5, Page 26)
- The pump has been primed with the fluid to be handled. The pump has been vented. (⇒ Section 6.1.4, Page 29)
- The direction of rotation has been checked. (⇒ Section 5.6, Page 27)
- All auxiliary connections required are connected and operational.
- The lubricants have been checked. (⇒ Section 6.1.2, Page 29)
- After prolonged shutdown of the pump (set), the activities required for returning the equipment to service have been carried out. (⇒ Section 6.4, Page 35)
- The lock washers, if any, have been removed from the shaft groove.



6.1.2 Filling in lubricants

Grease-lubricated bearings have been packed with grease at the factory.



6.1.3 Checking the shaft seal










Mechanical seal The mechanical seal only leaks slightly or invisibly (as vapour) during operation. Mechanical seals are maintenance-free.

Double mechanical seal





	<div style="background-color: #e67e22; color: white; padding: 5px;"> DANGER</div> <p>Excessive temperature of barrier fluid (pumps with double mechanical seal) Explosion hazard! Excessive surface temperature</p> <ul style="list-style-type: none"> ▸ For pumps with double mechanical seal, make sure that the barrier fluid's temperature does not exceed 60 °C.
---	---

6.1.4 Priming and venting the pump

	<div style="background-color: #e67e22; color: white; padding: 5px;"> DANGER</div> <p>Risk of potentially explosive atmosphere inside the pump Explosion hazard!</p> <ul style="list-style-type: none"> ▸ The pump internals in contact with the fluid to be handled, including the seal chamber and auxiliary systems, must be filled with the fluid to be handled at all times. ▸ Provide sufficient inlet pressure. ▸ Provide an appropriate monitoring system.
---	---

 	<div data-bbox="507 190 683 235"> DANGER</div> <p>Risk of potentially explosive atmosphere by incompatible fluids mixing in the auxiliary piping</p> <p>Risk of burns!</p> <p>Explosion hazard!</p> <ul style="list-style-type: none"> ▷ Make sure that the barrier fluid or quench liquid are compatible with the fluid handled.
	<div data-bbox="507 492 683 537"> DANGER</div> <p>Shaft seal failure caused by insufficient lubrication</p> <p>Hot or toxic fluid could escape!</p> <p>Damage to the pump!</p> <ul style="list-style-type: none"> ▷ Before starting up the pump set, vent the pump and suction line and prime both with the fluid to be handled.
	<div data-bbox="507 766 638 810">CAUTION</div> <p>Increased wear due to dry running</p> <p>Damage to the pump set!</p> <ul style="list-style-type: none"> ▷ Never operate the pump set without liquid fill. ▷ Never close the shut-off element in the suction line and/or supply line during pump operation.
<ol style="list-style-type: none"> 1. Vent the pump and suction line and prime both with the fluid to be handled. Connection 6D can be used for venting (see drawing of auxiliary connections). For vertical installation with the motor on top use connection 5B (if any) for venting (see drawing of auxiliary connections). 2. Fully open the shut-off element in the suction line. 3. Fully open all auxiliary feed lines (barrier fluid, flushing liquid, etc.), if any. 4. Open the shut-off valve (3), if any, in the vacuum balance line (2) and close the vacuum-tight shut-off valve (6), if any. (⇒ Section 5.3.3, Page 24) 	
	<div data-bbox="507 1328 702 1373"> WARNING</div> <p>Hot water escaping under pressure when the vent plug is opened</p> <p>Risk of electric shock!</p> <p>Risk of scalding!</p> <ul style="list-style-type: none"> ▷ Protect the electric components against escaping fluid. ▷ Wear protective clothing (e.g. gloves).
	<div data-bbox="507 1606 587 1650">NOTE</div> <p>For design-inherent reasons some unfilled volume in the hydraulic system cannot be excluded after the pump has been primed for commissioning/start-up. However, once the motor is started up the pumping effect will immediately fill this volume with the fluid handled.</p>


6.1.5 Start-up


	<div data-bbox="507 232 683 277">! DANGER</div> <p>Non-compliance with the permissible pressure and temperature limits if the pump is operated with the suction and/or discharge line closed.</p> <p>Explosion hazard! Hot or toxic fluids escaping!</p> <ul style="list-style-type: none"> ▷ Never operate the pump with the shut-off elements in the suction line and/or discharge line closed. ▷ Only start up the pump set with the discharge-side shut-off element slightly or fully open.
	<div data-bbox="507 595 683 640">! DANGER</div> <p>Excessive temperatures due to dry running or excessive gas content in the fluid handled</p> <p>Explosion hazard! Damage to the pump set!</p> <ul style="list-style-type: none"> ▷ Never operate the pump set without liquid fill. ▷ Prime the pump as per operating instructions. ▷ Always operate the pump within the permissible operating range.
	<div data-bbox="507 954 639 999">CAUTION</div> <p>Abnormal noises, vibrations, temperatures or leakage</p> <p>Damage to the pump!</p> <ul style="list-style-type: none"> ▷ Switch off the pump (set) immediately. ▷ Eliminate the causes before returning the pump set to service.
	<div data-bbox="507 1357 639 1402">CAUTION</div> <p>Start-up against open discharge line</p> <p>Motor overload!</p> <ul style="list-style-type: none"> ▷ Make sure the motor has sufficient power reserves. ▷ Use a soft starter. ▷ Use speed control.

- ✓ The system piping has been cleaned.
- ✓ The pump, suction line and inlet tank, if any, have been vented and primed with the fluid to be pumped.
- ✓ The lines for priming and venting have been closed.


1. Fully open the shut-off element in the suction head/suction lift line.
2. Close or slightly open the shut-off element in the discharge line.
3. Start up the motor.
4. Immediately after the pump has reached full rotational speed, slowly open the shut-off element in the discharge line and adjust it to comply with the duty point.

6.1.6 Shutdown

	CAUTION
	<p>Heat build-up inside the pump Damage to the shaft seal!</p> <ul style="list-style-type: none"> ▷ Depending on the type of installation, the pump set requires sufficient after-run time – with the heat source switched off – until the fluid handled has cooled down.


	CAUTION
	<p>Backflow of fluid handled is not permitted Motor or winding damage! Mechanical seal damage!</p> <ul style="list-style-type: none"> ▷ Close the shut-off elements.

- ✓ The shut-off element in the suction line is and remains open.
- 1. Close the shut-off element in the discharge line.
- 2. Switch off the motor and make sure the pump set runs down smoothly to a standstill.


	NOTE
	<p>If the discharge line is equipped with a non-return or check valve, the shut-off element may remain open provided that the system conditions and system regulations are considered and observed.</p>


For prolonged shutdown periods:

- 1. Close the shut-off element in the suction line.
 - 2. Close any auxiliary lines.
- If the fluid to be handled is fed in under vacuum, also supply the shaft seal with barrier fluid during standstill.


	CAUTION
	<p>Risk of freezing during prolonged pump shutdown periods Damage to the pump!</p> <ul style="list-style-type: none"> ▷ Drain the pump and the cooling/heating chambers (if any) or otherwise protect them against freezing.

6.2 Operating limits

	⚠ DANGER
	<p>Non-compliance with operating limits for pressure, temperature, fluid handled and speed Explosion hazard! Hot or toxic fluid could escape!</p> <ul style="list-style-type: none"> ▷ Comply with the operating data specified in the data sheet. ▷ Never use the pump for handling fluids it is not designed for. ▷ Avoid prolonged operation against a closed shut-off element. ▷ Never operate the pump at temperatures, pressures or rotational speeds exceeding those specified in the data sheet or on the name plate unless the written consent of the manufacturer has been obtained.

	⚠ DANGER
	Formation of a potentially explosive atmosphere inside the pump Explosion hazard! <p>▷ When draining tanks take suitable measures to prevent dry running of the pump (e.g. fill level monitoring).</p>

6.2.1 Ambient temperature


	CAUTION
	Operation outside the permissible ambient temperature Damage to the pump (set)! <p>▷ Observe the specified limits for permissible ambient temperatures.</p>

Observe the following parameters and values during operation:

Table 10: Permissible ambient temperatures

Permissible ambient temperature	Value
Maximum	40 °C
Minimum	See data sheet.


6.2.2 Frequency of starts

	⚠ DANGER
	Excessive surface temperature of the motor Explosion hazard! Damage to the motor! <p>▷ In case of explosion-proof motors, observe the frequency of starts specified in the manufacturer's product literature.</p>

The frequency of starts is determined by the maximum temperature increase of the motor. The frequency of starts depends on the power reserves of the motor in steady-state operation and on the starting conditions (DOL starting, star-delta starting, moments of inertia, etc). If the start-ups are evenly spaced over the period indicated, the following limits serve as orientation for start-up with the discharge-side shut-off valve slightly open:

Table 11: Frequency of starts

Impeller material	Maximum frequency of starts
	[Start-ups/hour]
G (JL1040/ A48CL35B)	15
B (CC480K-GS/B30 C90700)	6
C (1.4408/ A743 GR CF8M)	

	CAUTION
	Re-starting while motor is still running down Damage to the pump (set)! <p>▷ Do not re-start the pump set before the pump rotor has come to a standstill.</p>

6.2.3 Fluid handled

6.2.3.1 Flow rate

Table 12: Flow rate

Temperature range (t)	Minimum flow rate	Maximum flow rate
-30 to +70 °C	≈ 15 % of Q _{BEP} ⁵⁾	See hydraulic characteristic curves
> 70 to +140 °C	≈ 25 % of Q _{BEP} ⁵⁾	

The calculation formula below can be used to check if an additional heat build-up could lead to a dangerous temperature increase at the pump surface.

$$T_O = T_f + \Delta \vartheta$$


$$\Delta \vartheta = \frac{g \times H}{c \times \eta} \times (1 - \eta)$$

Table 13: Key

Symbol	Description	Unit
c	Specific heat capacity	J/kg K
g	Acceleration due to gravity	m/s ²
H	Pump discharge head	m
T _f	Fluid temperature	°C
T _O	Temperature at the casing surface	°C
η	Pump efficiency at duty point	-
Δϑ	Temperature difference	K

6.2.3.2 Density of the fluid handled

The power input of the pump set will change in proportion to the density of the fluid handled.

	CAUTION
	Impermissibly high density of the fluid handled Motor overload! <ul style="list-style-type: none"> ▷ Observe the information about fluid density in the data sheet. ▷ Make sure the motor has sufficient power reserves.

6.2.3.3 Abrasive fluids

When the pump handles fluids containing abrasive substances, increased wear of the hydraulic system and the shaft seal are to be expected. In this case, reduce the commonly recommended inspection intervals.

The fluid handled may contain abrasive particles up to a maximum content of 5 g/dm³ and a maximum particle size of 0.5 mm.

6.3 Shutdown/storage/preservation

6.3.1 Measures to be taken for shutdown

The pump (set) remains installed

✓ Sufficient fluid is supplied for the functional check run of the pump.

1. For prolonged shutdown periods, start up the pump (set) regularly between once a month and once every three months for approximately five minutes.

⁵⁾ Best efficiency point

⇒ This will prevent the formation of deposits within the pump and the pump intake area.

The pump (set) is removed from the pipe and stored




- ✓ The pump has been properly drained. (⇒ Section 7.3, Page 40)
 - ✓ The safety instructions for dismantling the pump have been observed. (⇒ Section 7.4.1, Page 40)
 - ✓ The permissible ambient temperature for storing the pump is observed.
 1. Spray-coat the inside wall of the pump casing and, in particular, the impeller clearance areas with a preservative.
 2. Spray the preservative through the suction nozzle and discharge nozzle. It is advisable to then close the pump nozzles (e.g. with plastic caps)
 3. Oil or grease all exposed machined parts and surfaces of the pump (with silicone-free oil or grease, food-approved, if required) to protect them against corrosion.
- Observe the additional instructions on preservation. (⇒ Section 3.3, Page 13)

If the pump set is to be stored temporarily, only preserve the wetted components made of low-alloy materials. Commercially available preservatives can be used for this purpose. Observe the manufacturer's instructions for application/removal.

6.4 Returning to service












For returning the equipment to service observe the sections on commissioning/start-up and the operating limits. (⇒ Section 6.1, Page 29) (⇒ Section 6.2, Page 32)


In addition, carry out all servicing/maintenance operations before returning the pump (set) to service. (⇒ Section 7, Page 36)

	 WARNING
	<p>Failure to re-install or re-activate protective devices</p> <p>Risk of injury from moving parts or escaping fluid!</p> <ul style="list-style-type: none"> ▷ As soon as the work is completed, properly re-install and re-activate any safety-relevant devices and protective devices.
	NOTE
	<p>If the equipment has been out of service for more than one year, replace all elastomer seals.</p>

7 Servicing/Maintenance

7.1 Safety regulations

	<div data-bbox="507 315 683 360"> DANGER</div> <div data-bbox="496 383 991 412">Improper cleaning of coated pump surfaces</div> <div data-bbox="496 416 991 445">Explosion hazard by electrostatic discharge!</div> <div data-bbox="517 456 1406 517"> <ul style="list-style-type: none"> ▷ When cleaning coated pump surfaces in atmospheres of Explosion group IIC, use suitable anti-static equipment. </div>
	<div data-bbox="507 553 683 598"> DANGER</div> <div data-bbox="496 620 943 649">Sparks produced during servicing work</div> <div data-bbox="496 654 699 683">Explosion hazard!</div> <div data-bbox="517 694 1437 795"> <ul style="list-style-type: none"> ▷ Observe the safety regulations in force at the place of installation! ▷ Always perform maintenance work at an explosion-proof pump (set) outside of potentially explosive atmospheres. </div>
 	<div data-bbox="507 833 683 878"> DANGER</div> <div data-bbox="496 900 836 929">Improperly serviced pump set</div> <div data-bbox="496 934 699 963">Explosion hazard!</div> <div data-bbox="496 967 788 996">Damage to the pump set!</div> <div data-bbox="517 1008 1430 1108"> <ul style="list-style-type: none"> ▷ Service the pump set regularly. ▷ Prepare a maintenance schedule with special emphasis on lubricants, shaft seal and coupling. </div>
<p>The operator ensures that maintenance, inspection and installation are performed by authorised, qualified specialist personnel who are thoroughly familiar with the manual.</p>	
	<div data-bbox="507 1249 703 1294"> WARNING</div> <div data-bbox="496 1317 940 1346">Unintentional starting of the pump set</div> <div data-bbox="496 1350 1139 1379">Risk of injury by moving components and shock currents!</div> <div data-bbox="517 1391 1414 1491"> <ul style="list-style-type: none"> ▷ Ensure that the pump set cannot be started unintentionally. ▷ Always make sure the electrical connections are disconnected before carrying out work on the pump set. </div>
	<div data-bbox="507 1527 703 1572"> WARNING</div> <div data-bbox="496 1594 1378 1648">Fluids handled, consumables and supplies which are hot and/or pose a health hazard</div> <div data-bbox="496 1659 652 1688">Risk of injury!</div> <div data-bbox="517 1700 1430 1839"> <ul style="list-style-type: none"> ▷ Observe all relevant laws. ▷ When draining the fluid take appropriate measures to protect persons and the environment. ▷ Decontaminate pumps which handle fluids posing a health hazard. </div>

	⚠ WARNING
	Insufficient stability Risk of crushing hands and feet! <ul style="list-style-type: none"> ▷ During assembly/dismantling, secure the pump (set)/pump parts to prevent tilting or tipping over.


A regular maintenance schedule will help avoid expensive repairs and contribute to trouble-free, reliable operation of the pump, pump set and pump parts with a minimum of servicing/maintenance expenditure and work.



	NOTE
	All maintenance work, service work and installation work can be carried out by KSB Service or authorised workshops. For contact details refer to the enclosed "Addresses" booklet or visit " www.ksb.com/contact " on the Internet.



Never use force when dismantling and reassembling the pump set.



7.2 Servicing/Inspection

7.2.1 Supervision of operation

	⚠ DANGER
	Risk of potentially explosive atmosphere inside the pump Explosion hazard! <ul style="list-style-type: none"> ▷ The pump internals in contact with the fluid to be handled, including the seal chamber and auxiliary systems, must be filled with the fluid to be handled at all times. ▷ Provide sufficient inlet pressure. ▷ Provide an appropriate monitoring system.



 	⚠ DANGER
	Incorrectly serviced shaft seal Explosion hazard! Hot, toxic fluid escaping! Damage to the pump set! Risk of burns! Fire hazard! <ul style="list-style-type: none"> ▷ Regularly service the shaft seal.

 	⚠ DANGER
	Excessive temperatures as a result of bearings running hot or defective bearing seals Explosion hazard! Fire hazard! Damage to the pump set! <ul style="list-style-type: none"> ▷ Regularly check the rolling element bearings for running noises.



	<p>CAUTION</p> <p>Increased wear due to dry running Damage to the pump set!</p> <ul style="list-style-type: none"> ▷ Never operate the pump set without liquid fill. ▷ Never close the shut-off element in the suction line and/or supply line during pump operation.
	<p>CAUTION</p> <p>Impermissibly high temperature of fluid handled Damage to the pump!</p> <ul style="list-style-type: none"> ▷ Prolonged operation against a closed shut-off element is not permitted (heating up of the fluid). ▷ Observe the temperature limits in the data sheet and in the section on operating limits. (⇒ Section 6.2, Page 32)

While the pump is in operation, observe and check the following:

- The pump must run quietly and free from vibrations at all times.
- Check the shaft seal. (⇒ Section 6.1.3, Page 29)
- Check the static sealing elements for leakage.
- Check the rolling element bearings for running noises.
Vibrations, noise and an increase in current input occurring during unchanged operating conditions indicate wear.
- Monitor the correct functioning of any auxiliary connections.
- Monitor the stand-by pump.
To make sure that stand-by pumps are ready for operation, start them up once a week.
- Monitor the bearing temperature.
The bearing temperature must not exceed 90 °C (measured on the motor housing).

	<p>CAUTION</p> <p>Operation outside the permissible bearing temperature Damage to the pump!</p> <ul style="list-style-type: none"> ▷ The bearing temperature of the pump (set) must never exceed 90 °C (measured on the outside of the motor housing).
	<p>NOTE</p> <p>After commissioning, increased temperatures may occur at grease-lubricated rolling element bearings due to the running-in process. The final bearing temperature is only reached after a certain period of operation (up to 48 hours depending on the conditions).</p>

7.2.2 Inspection work

	<p>⚠ DANGER</p> <p>Excessive temperatures caused by friction, impact or frictional sparks Explosion hazard! Fire hazard! Damage to the pump set!</p> <ul style="list-style-type: none"> ▸ Regularly check the cover plates, plastic components and other guards of rotating parts for deformation and sufficient distance from rotating parts.
	<p>⚠ DANGER</p> <p>Electrostatic charging due to insufficient potential equalisation Explosion hazard!</p> <ul style="list-style-type: none"> ▸ Make sure that the connection between pump and baseplate is electrically conductive.

7.2.2.1 Checking the clearances

For checking the clearances remove the impeller, if required.


If the clearance is larger than permitted (see the following table), fit new casing wear ring 502.01 and, if applicable, 502.02.

The clearances given refer to the diameter.


Table 14: Clearances between impeller and casing and/or between impeller and casing cover

Impeller material	Permissible clearance	
	New	Maximum
G (JL1040/ A48CL35B) B (CC480K-GS/B30 C90700)	0.3 mm	0.9 mm
C (1.4408/ A743 GR CF8M)	0.5 mm	1.5 mm

7.2.2.2 Cleaning filters

	<p>CAUTION</p> <p>Insufficient inlet pressure due to clogged filter in the suction line Damage to the pump!</p> <ul style="list-style-type: none"> ▸ Monitor contamination of filter with suitable means (e.g. differential pressure gauge). ▸ Clean filter at appropriate intervals.
---	--





7.3 Drainage/cleaning

	⚠ WARNING
	<p>Fluids handled, consumables and supplies which are hot and/or pose a health hazard</p> <p>Hazard to persons and the environment!</p> <ul style="list-style-type: none"> ▷ Collect and properly dispose of flushing fluid and any fluid residues. ▷ Wear safety clothing and a protective mask if required. ▷ Observe all legal regulations on the disposal of fluids posing a health hazard.

1. Use connection 6B to drain the fluid handled (see drawing of auxiliary connections).
2. Always flush the system if it has been used for handling noxious, explosive, hot or other hazardous fluids.
Always flush and clean the pump before transporting it to the workshop.
Provide a certificate of decontamination for the pump. (⇒ Section 11, Page 63)

7.4 Dismantling the pump set

7.4.1 General information/Safety regulations

	⚠ DANGER
	<p>Insufficient preparation of work on the pump (set)</p> <p>Risk of injury!</p> <ul style="list-style-type: none"> ▷ Properly shut down the pump set. (⇒ Section 6.1.6, Page 32) ▷ Close the shut-off elements in the suction line and discharge line. ▷ Drain the pump and release the pump pressure. (⇒ Section 7.3, Page 40) ▷ Shut off any auxiliary feed lines. ▷ Allow the pump set to cool down to ambient temperature.
	⚠ WARNING
	<p>Unqualified personnel performing work on the pump (set)</p> <p>Risk of injury!</p> <ul style="list-style-type: none"> ▷ Always have repair work and maintenance work performed by specially trained, qualified personnel.
	⚠ WARNING
	<p>Hot surface</p> <p>Risk of injury!</p> <ul style="list-style-type: none"> ▷ Allow the pump set to cool down to ambient temperature.
	⚠ WARNING
	<p>Improper lifting/moving of heavy assemblies or components</p> <p>Personal injury and damage to property!</p> <ul style="list-style-type: none"> ▷ Use suitable transport devices, lifting equipment and lifting tackle to move heavy assemblies or components.


Always observe the safety instructions and information. (⇒ Section 7.1, Page 36)

For any work on the motor, observe the instructions of the relevant motor manufacturer.

For dismantling and reassembly observe the exploded views and the general assembly drawing.

In the event of damage you can always contact our service departments.


	<p>NOTE</p> <p>All maintenance work, service work and installation work can be carried out by KSB Service or authorised workshops. For contact details refer to the enclosed "Addresses" booklet or visit "www.ksb.com/contact" on the Internet.</p>
---	--

	<p>NOTE</p> <p>After a prolonged period of operation the individual components may be hard to pull off the shaft. If this is the case, use a brand name penetrating agent and/or - if possible - an appropriate puller.</p>
---	--

7.4.2 Preparing the pump set


1. De-energise the pump set and secure it against unintentional start-up.
2. Reduce pressure in the piping by opening a consumer installation.
3. Disconnect and remove all auxiliary pipework.

7.4.3 Dismantling the complete pump set


	<p>NOTE</p> <p>The pump casing can remain installed in the piping for further dismantling.</p>
--	---

- ✓ The notes and steps stated in (⇒ Section 7.4.1, Page 40) to (⇒ Section 7.4.2, Page 41) have been observed/carried out.
1. Disconnect the discharge nozzle and suction nozzle from the piping.
 2. Depending on the pump/motor size, remove the supports from the pump set.
 3. Remove the complete pump set from the piping.

7.4.4 Removing the motor

	<p>WARNING</p> <p>Motor tipping over Risk of crushing hands and feet!</p> <p>▷ Suspend or support the motor to prevent it from tipping over.</p>
---	--



- ✓ The notes and steps stated in (⇒ Section 7.4.1, Page 40) to (⇒ Section 7.4.3, Page 41) have been observed/carried out.
1. Remove the screws on cover plates 68-3, press the cover plates slightly together and remove from drive lantern 341.
 2. Undo hexagon nuts 920.11.
 3. Undo hexagon head bolts 901.50.

	<p>CAUTION</p> <p>Back pull-out unit knocking against the pump casing Damage to the shaft/back pull-out unit!</p> <p>▷ With the motor removed, push lock washers 931.95 into the shaft groove.</p>
---	--

4. Insert both lock washers 931.95 into the groove in shaft 210.

5. Tighten hexagon head bolts 901.50.
6. Undo socket head cap screw 914.24.
7. Remove the motor.

7.4.5 Removing the back pull-out unit

	<div style="background-color: #f4a460; padding: 5px; border: 1px solid black;">  WARNING </div> <p>Back pull-out unit tilting Risk of squashing hands and feet!</p> <p>▸ Suspend or support the back pull-out unit at the pump end.</p>
---	--

- ✓ The notes and steps stated in (⇒ Section 7.4.1, Page 40) to (⇒ Section 7.4.4, Page 41) have been observed/carried out.
1. If required, suspend or support the back pull-out unit to prevent it from tipping over.
 2. Undo hexagon nut 920.15 (on variant with bolted discharge cover) or 920.01 (on variant with clamped discharge cover) at the volute casing.
 3. Pull the back pull-out unit out of the volute casing.
 4. Remove and dispose of gasket 400.10.
 5. Place the back pull-out unit on a clean and level surface.

7.4.6 Removing the impeller




- ✓ The notes and steps stated in (⇒ Section 7.4.1, Page 40) to (⇒ Section 7.4.5, Page 42) have been observed/carried out.
 - ✓ The back pull-out unit has been placed in a clean and level assembly area.
1. Undo impeller nut 920.95 (right-hand thread).
Take washer 930.95 and disc 550.95 off the impeller hub.
 2. Remove impeller 230 with an impeller removal tool.
 3. Place impeller 230 on a clean and level surface.
 4. Remove key 940.01 from shaft 210.

7.4.7 Removing the mechanical seal

- ✓ The notes and steps stated in (⇒ Section 7.4.1, Page 40) to (⇒ Section 7.4.6, Page 42) have been observed/carried out.
 - ✓ The back pull-out unit has been placed in a clean and level assembly area.
1. Remove shaft sleeve 523 with the rotating assembly of the mechanical seal (primary ring) from shaft 210.
 2. Remove the rotating assembly of the mechanical seal (primary ring) from shaft sleeve 523.
 3. Undo hexagon nuts 920.15 and socket head cap screw 914.22, if any, on drive lantern 341.
 4. Remove casing cover 161 from drive lantern 341.
 5. Remove the stationary assembly of the mechanical seal (mating ring) from casing cover 161.
 6. Remove and dispose of gasket 400.75.

7.5 Reassembling the pump set

7.5.1 General information/Safety regulations

	<div style="background-color: #f4a460; padding: 5px;">⚠ DANGER</div> <p>Wrong selection of motor Explosion hazard!</p> <ul style="list-style-type: none"> ▷ Use an original motor or a motor of identical design from the same manufacturer. ▷ The permissible temperature limits at the motor flange and motor shaft must be higher than the temperatures generated by the pump. (Contact KSB for temperatures).
	<div style="background-color: #f4a460; padding: 5px;">⚠ WARNING</div> <p>Improper lifting/moving of heavy assemblies or components Personal injury and damage to property!</p> <ul style="list-style-type: none"> ▷ Use suitable transport devices, lifting equipment and lifting tackle to move heavy assemblies or components.
	<div style="background-color: #f4d03f; padding: 5px;">CAUTION</div> <p>Improper reassembly Damage to the pump!</p> <ul style="list-style-type: none"> ▷ Reassemble the pump (set) in accordance with the general rules of sound engineering practice. ▷ Use original spare parts only.

Sequence Always re-assemble the pump in accordance with the corresponding general assembly drawing or exploded view.

Sealing elements Check O-rings for any damage and replace by new O-rings, if required.
Always use new gaskets. Make sure that new gaskets have the same thickness as the old ones.

Always fit gaskets of asbestos-free materials or graphite without using lubricants (e.g. copper grease, graphite paste).

Assembly adhesives Avoid the use of assembly adhesives, if possible.

Should an assembly adhesive be required after all, use a commercially available contact adhesive (e.g. Pattex) or sealant (e.g. HYLOMAR or Eppl 33).

Only apply adhesive at selected points and in thin layers.

Never use quick-setting adhesives (cyanoacrylate adhesives).

Coat the locating surfaces of the individual components with graphite or similar before reassembly.


Tightening torques For reassembly, tighten all screws and bolts as specified in this manual.

7.5.2 Installing the mechanical seal


Installing the mechanical seal

The following rules must be observed when installing the mechanical seal:

- Work cleanly and accurately.
- Only remove the protective wrapping of the contact faces immediately before installation takes place.
- Prevent any damage to the sealing surfaces or O-rings.
- ✓ The notes and steps stated in (⇒ Section 7.5.1, Page 43) have been observed/ carried out.
- ✓ The bearing assembly as well as the individual parts are kept in a clean and level assembly area.
- ✓ All dismantled parts have been cleaned and checked for wear.
- ✓ Any damaged or worn parts have been replaced by original spare parts.
- ✓ The sealing surfaces have been cleaned.
 1. Clean shaft sleeve 523, and touch up any score marks or scratches with a polishing cloth, if necessary.
If score marks or scratches are still visible, fit new shaft sleeve 523.
 2. Slide shaft sleeve 523 with new gasket 400.75 onto shaft 210.
 3. Clean the mating ring location in casing cover 161.

	CAUTION
	<p>Elastomers in contact with oil/grease Shaft seal failure!</p> <ul style="list-style-type: none"> ▷ Use water as assembly lubricant. ▷ Never use oil or grease as assembly lubricant.

4. Carefully insert the mating ring. Make sure to apply pressure evenly.
5. **On variants with a bolted casing cover** undo forcing screws 901.31 without removing them.
6. Place casing cover 161 into the locating fit of drive lantern 341.
7. Fit and tighten hexagon nuts 920.01 and/or 920.15, if any.

	NOTE
	<p>To reduce friction forces when assembling the seal, wet the shaft sleeve and the location of the stationary ring with water.</p>

8. Fit the rotating assembly of the mechanical seal (primary ring) on shaft sleeve 523.

Observe the following installation dimension b for mechanical seals with installation length L_{ik} to EN 12756 (design KU):

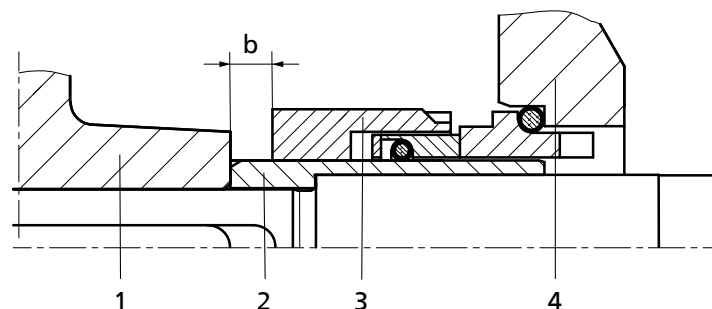


Fig. 10: Installation dimension b of mechanical seal

1	Impeller	2	Shaft sleeve
3	Mechanical seal	4	Casing cover



Table 15: Installation dimensions of the mechanical seal

Shaft unit ⁶⁾	Installation dimension b
25	7,5 mm
35	10 mm
55	15 mm

7.5.3 Fitting the impeller



- ✓ The notes and steps stated in (⇒ Section 7.5.1, Page 43) to (⇒ Section 7.5.2, Page 44) have been observed/carried out.
- ✓ The pre-assembled unit (motor, shaft, drive lantern, casing cover) as well as the individual parts have been placed in a clean and level assembly area.
- ✓ All dismantled parts have been cleaned and checked for wear.
- ✓ Any damaged or worn parts have been replaced by original spare parts.
- ✓ The sealing surfaces have been cleaned.
 1. Insert key 940.01 and slide impeller 230 onto shaft 210.
 2. Fasten impeller nut 920.95, safety device 930.95 and disc 550.95, if any. (⇒ Section 7.6, Page 47)

7.5.4 Installing the back pull-out unit

	 WARNING
	<p>Back pull-out unit tilting Risk of squashing hands and feet!</p> <p>▷ Suspend or support the back pull-out unit at the pump end.</p>

- ✓ The notes and steps stated in (⇒ Section 7.5.1, Page 43) to (⇒ Section 7.5.3, Page 45) have been observed/carried out.
- ✓ Any damaged or worn parts have been replaced by original spare parts.
- ✓ The sealing surfaces have been cleaned.
 1. If required, suspend or support the back pull-out unit to prevent it from tipping over.
 2. Fit new gasket 400.10 into the recess of volute casing 102.
 3. **On variants with a bolted casing cover** undo forcing screws 901.31 without removing them.
 4. Insert the back pull-out unit into volute casing 102.
 5. Depending on the pump size and motor size, fit support foot 183.
 6. Tighten hexagon nut 920.15 (on variant with a bolted casing cover) or 920.01 (on variant with a clamped casing cover) at volute casing 102.

7.5.5 Mounting the motor

	 DANGER
	<p>Incorrect shaft connection Explosion hazard!</p> <p>▷ Connect the shafts between pump and motor as described in this manual.</p>

⁶ Shaft unit see data sheet.

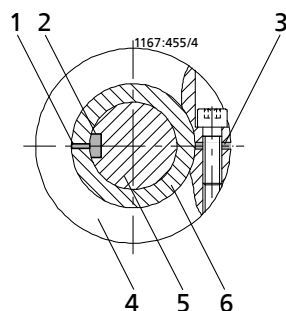


Fig. 11: Fitting the motor shaft stub on the shaft

1	Shaft slot	2	Keyway of the motor shaft end
3	Slot of the locking ring	4	Locking ring
5	Motor shaft	6	Shaft

✓ The notes and steps stated in (⇒ Section 7.5.1, Page 43) to (⇒ Section 7.5.4, Page 45) have been observed/carried out.

1. Fit the motor shaft stub on shaft 210 and make sure that the keyway of the motor shaft end aligns with the slot in shaft 210 and that both are located opposite the end of locking ring 515 (see illustration: Fitting the motor shaft stub on the shaft).
2. Tighten hexagon socket head cap screws 914.24.
3. Undo hexagon head bolts 901.50.

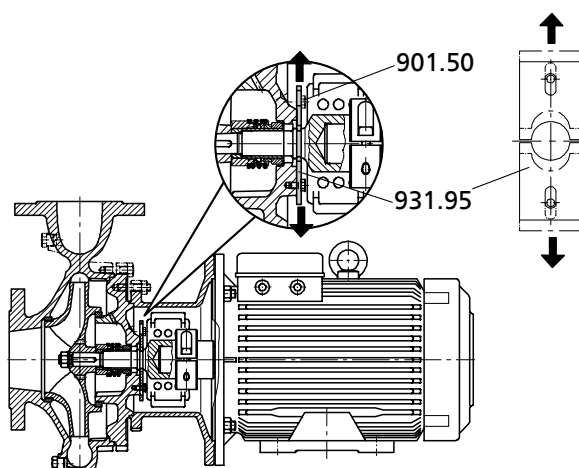


Fig. 12: Removing the lock washers

901.50	Hexagon head bolts	931.95	Lock washer
--------	--------------------	--------	-------------

4. Pull both lock washers 931.95 out of the groove in shaft 210.
5. Tighten hexagon head bolts 901.50.
6. Fit and tighten hexagon nuts 920.11.

7.6 Tightening torques

Table 16: Tightening points

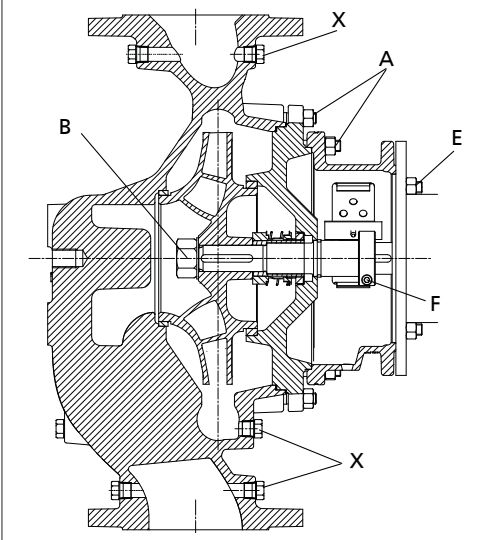
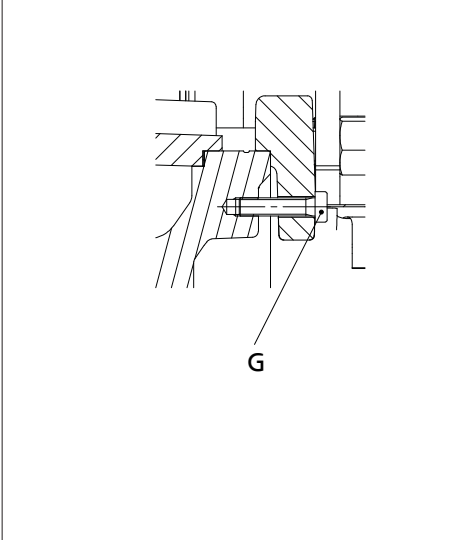
	
Version with bolted casing cover	Version with clamped casing cover

Table 17: Tightening torques for bolted/screwed connections at the pump

Position	Thread	[Nm]
A	M12	55
	M16	130
B	M12 × 1,5	55
	M24 × 1,5	130
	M30 × 1,5	170
E	M8	20
	M10	38
	M12	55
	M16	130
F	M6	15
	M8	38
	M10	85
	M12	91
G	M6	5
X	1/8	25
	1/4	55
	3/8	80
	1/2	130
	3/4	220

7.7 Spare parts stock

7.7.1 Ordering spare parts

Always quote the following data when ordering replacement or spare parts:

- Order number
- Order item number
- Consecutive number
- Type series
- Size
- Material variant
- Seal code
- Year of construction

Refer to the name plate for all data.

Also specify the following data:

- Part number and description
- Quantity of spare parts
- Shipping address
- Mode of dispatch (freight, mail, express freight, air freight)

7.7.2 Recommended spare parts stock

Table 18: Quantity of spare parts for recommended spare parts stock for commissioning

Part No.	Description	Number of pumps									
		1	2	3	4	5	6	7	8	9	10 and more
433	Mechanical seal	1	1	1	2	2	2	2	3	3	25 %
433.01/.02	Mechanical seal ⁷⁾	1	1	1	2	2	2	2	3	3	25 %
400.10	Gasket	2	4	6	8	8	9	9	12	12	150 %
400.75	Gasket	2	4	6	8	8	9	9	12	12	150 %
400.15	Gasket ⁷⁾	2	4	6	8	8	9	9	12	12	150 %
411.15	Joint ring ⁷⁾	2	4	6	8	8	9	9	12	12	150 %
412.15	O-ring ⁷⁾	2	4	6	8	8	9	9	12	12	150 %

Table 19: Quantity of spare parts for recommended spare parts stock for 2 years' operation to DIN 24296

Part No.	Description	Number of pumps									
		1	2	3	4	5	6	7	8	9	10 and more
210	Shaft	1	1	1	1	2	2	2	2	2	20 %
230	Impeller	1	1	1	1	2	2	2	2	2	20 %
433	Mechanical seal	1	1	1	2	2	2	2	3	3	25 %
433.01/.02	Mechanical seal ⁷⁾	1	1	1	2	2	2	2	3	3	25 %
502.01/.02	Casing wear ring ⁸⁾ (set)	1	2	2	2	3	3	3	4	4	50 %
523	Shaft sleeve	1	2	2	2	3	3	3	4	4	50 %
400.10	Gasket	2	4	6	8	8	9	9	12	12	150 %
400.75	Gasket	2	4	6	8	8	9	9	12	12	150 %
400.15	Gasket ⁷⁾	2	4	6	8	8	9	9	12	12	150 %
411.15	Joint ring ⁷⁾	2	4	6	8	8	9	9	12	12	150 %
412.15	O-ring ⁷⁾	2	4	6	8	8	9	9	12	12	150 %

⁷⁾ For double mechanical seal

⁸⁾ If any

7.7.3 Interchangeability of Etaline and Etabloc pump components

Components featuring the same number in a column are interchangeable.

Etaline ⁹⁾	Shaft unit	Description																												
		Volute casing	Casing cover	Shaft (with locking ring)											Impeller	Mechanical seal	Casing wear ring (suction side)	Casing wear ring (discharge side)		Shaft sleeve										
				Part No.																										
				102	163	210															230	433	502.1	502.2	523					
				Motor																										
						71	80	90	100/ 112	132	160	180	200	225							250						Etabloc			
32-160/...	25	○	1*	1*	2*	3*	4*	□	□	□	□	■	■	1*	1*	1*	1*	1*	32-160.1/...											
32-200/...	25	○	12*	□	2*	3*	4*	5*	□	□	□	■	■	○*	1*	1*	1*	1*	32-200.1/...											
40-160/...	25	○	1*	1*	2*	3*	4*	□	□	□	□	■	■	1*	1*	1*	1*	1*	32-160/...											
40-250/...	25	○	2*	□	2*	3*	4*	5*	6*	□	□	■	■	○*	1*	1*	2*	1*	32-250/...											
50-160/...	25	○	1*	1*	2*	3*	4*	5*	□	□	□	■	■	○*	1*	2*	1*	1*	40-160/...											
50-250/...	25	○	2*	□	□	3*	4*	5*	6*	7*	□	■	■	○*	1*	2*	2*	1*	40-250/...											
65-160/...	25	○	1*	1*	2*	3*	4*	5*	6*	□	□	■	■	○*	1*	3*	1*	1*	50-160/...											
65-250/...	25	○	2*	□	□	3*	4*	5*	6*	7*	16*	■	■	○*	1*	3*	2*	1*	50-250/...											
80-160/...	25	○	11*	□	2*	3*	4*	5*	6*	□	□	■	■	2*	1*	4*	3*	1*	65-160/...											
80-210/...	25	○	9*	□	□	3*	4*	□	6*	7*	16*	■	■	○*	1*	4*	3*	1*	65-200/...											
80-250/...	35	○	7*	■	■	■	8*	9*	□	□	□	■	■	○*	2*	5*	4*	2*	65-250/...											
100-125/...	25	○	10*	□	2*	3*	4*	5*	6*	□	□	■	■	○*	1*	4*	1*	1*	65-125/...											
100-160/...	25	○	3*	□	□	3*	4*	□	6*	□	□	■	■	2*	1*	4*	3*	1*	65-160/...											
100-170/...	25	○	3*	□	□	3*	4*	□	□	7*	□	■	■	○*	1*	6*	3*	1*	80-160/...											
100-200/...	35	○	4*	■	■	■	8*	9*	□	□	□	□	■	○*	2*	6*	5*	2*	80-200/...											
100-250/...	35	○	5*	■	■	■	□	9*	10*	□	□	□	■	○*	2*	6*	5*	2*	80-250/...											
125-160/...	35	○	4*	■	■	■	8*	□	□	11*	□	□	■	○*	2*	7*	5*	2*	100-160/...											
125-200/...	35	○	4*	■	■	■	□	9*	□	□	12*	17*	■	○*	2*	7*	5*	2*	100-200/...											
125-250/...	35	○	5*	■	■	■	□	□	10*	□	□	□	■	○*	2*	7*	5*	2*	100-250/...											
150-200/..	35	○	8*	■	■	■	□	9*	10*	□	□	□	■	○*	2*	8*	6*	2*	125-200/...											
150-250/...	35	○	6*	■	■	■	□	□	10*	11*	□	□	■	○*	2*	8*	6*	2*	125-250/...											
200-250/...	35	○	13*	■	■	■	□	□	10*	11*	12*	□	■	○*	2*	9*	6*	2*	150-250/...											
200-315/...	55	○	14*	■	■	■	■	■	■	■	13*	14*	15*	○*	3*	9*	7*	3*	150-315/...											

Table 20: Key to the symbols

Symbol	Description
*	Component interchangeable with Etabloc
○	Components differ


⁹⁾ The components of Etaline single and twin pumps are identical except for the volute casing.

Symbol	Description
□	When other frequencies or power reserves are required for this pump/motor combination, please contact KSB.
■	This pump/motor combination is not possible.

Table 21: Motor / power

Motor	Power
71	.../024, .../034
80	.../054, .../074, .../072, .../112
90	.../114, .../154, .../152, .../222
100	.../224, .../304, .../302
112	.../404, .../402
132	.../554, .../754, .../552, .../752
160	.../1104, .../1504, .../1102, .../1502, .../1852
180	.../1854, .../2204, .../2202
200	.../3004, .../3002, .../3702
225	.../3704, .../4504, .../4502
250	.../5504

8 Trouble-shooting

	⚠ WARNING
	Improper work to remedy faults Risk of injury! <p>► For any work performed to remedy faults, observe the relevant information given in this operating manual and/or in the product literature provided by the accessories manufacturer.</p>

If problems occur that are not described in the following table, consultation with the KSB service is required.

- A** Pump delivers insufficient flow rate
- B** Motor is overloaded
- C** Motor protection switch / thermistor trip device trips the unit
- D** Increased bearing temperature
- E** Leakage at the pump
- F** Excessive leakage at the shaft seal
- G** Vibrations during pump operation
- H** Impermissible temperature increase in the pump

Table 22: Trouble-shooting

A	B	C	D	E	F	G	H	Possible cause	Remedy ¹⁰⁾
X	-	-	-	-	-	-	-	Pump delivers against an excessively high pressure.	Re-adjust to duty point. Check system for impurities. Fit a larger impeller. ¹⁰⁾ Increase the speed (frequency inverter).
X	-	-	-	-	-	X	X	Pump and/or piping are not completely vented or primed.	Vent and/or prime.
X	-	-	-	-	-	-	-	Supply line or impeller clogged	Remove deposits in the pump and/or piping.
X	-	-	-	-	-	-	-	Formation of air pockets in the piping	Alter piping layout. Fit vent valve.
X	-	-	-	-	-	X	X	Suction lift is too high/NPSH _{available} (positive suction head) is too low.	Check/alter liquid level (open system). Increase system pressure (closed system). Install pump at a lower level. Fully open the shut-off element in the suction line. Change suction line, if the friction losses in the suction line are too high. Check any strainers installed/suction opening. Observe permissible speed of pressure fall.
X	-	-	-	-	-	-	-	Wrong direction of rotation	Check the electrical connection of the motor and the control system if any.
X	-	-	-	-	-	-	-	Speed too low - Operation with frequency inverter - Operation without frequency inverter	- Increase voltage/frequency at the frequency inverter in the permissible range. - Check voltage.
X	-	-	-	-	-	X	-	Wear of internal components	Replace worn components by new ones.
-	X	-	-	-	-	X	-	Pump back pressure is lower than specified in the purchase order.	Re-adjust to duty point. In the case of persistent overloading, turn down impeller. ¹⁰⁾
-	X	-	-	-	-	-	-	Density or viscosity of fluid handled higher than stated in purchase order	Consult the manufacturer.

¹⁰⁾ Pump pressure must be released before attempting to remedy faults on parts which are subjected to pressure.

A	B	C	D	E	F	G	H	Possible cause	Remedy ¹⁰⁾
-	-	-	-	-	X	-	-	Use of unsuitable shaft seal materials	Change the material combination. ¹⁰⁾
-	X	X	-	-	-	-	-	Speed too high	Reduce speed. ¹⁰⁾
-	-	-	-	X	-	-	-	Tie bolts/sealing element defective	Fit new sealing element between volute casing and casing cover. Re-tighten the bolts.
-	-	-	-	-	X	-	-	Worn shaft seal	Fit new shaft seal.
X	-	-	-	-	X	-	-	Score marks or roughness on shaft sleeve	Fit new shaft sleeve. Fit new shaft seal.
-	-	-	-	-	X	-	-	Dismantle to find out.	Correct. Fit new shaft seal, if required.
-	-	-	-	-	X	-	-	Vibrations during pump operation	Correct the suction conditions. Re-balance the impeller. Increase pressure at the pump suction nozzle.
-	-	-	X	-	X	X	-	Pump is warped or sympathetic vibrations in the piping.	Check the piping connections and secure fixing of pump; if required, reduce distances between the pipe clamps. Fix the pipelines using anti-vibration material.
-	-	-	X	-	-	-	-	Increased axial thrust	Clean balancing holes in the impeller. Replace the casing wear rings.
-	-	-	X	-	-	-	-	Insufficient or excessive quantity of lubricant or unsuitable lubricant.	Top up, reduce or change lubricant.
X	X	-	-	-	-	-	-	Motor is running on two phases only.	Replace the defective fuse. Check the electric cable connections. Check the motor winding.
-	-	-	-	-	-	X	-	Rotor out of balance	Clean the impeller. Re-balance the impeller.
-	-	-	-	-	-	X	-	Defective bearing(s)	Replace.
-	-	-	X	-	-	X	X	Flow rate is too low.	Increase the minimum flow rate.
-	-	X	-	-	-	-	-	Incorrect setting of motor protection switch	Check setting. Fit new motor protection switch.
-	X	X	-	-	-	-	-	Transport lock has not been removed from the shaft groove.	Remove.

9 Related Documents

9.1 Installation types

Horizontal installation

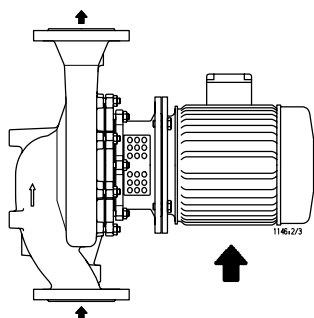


Fig. 13: Horizontal installation, direction of flow from bottom to top

i Motors of size 180 (18.5 kW) and above on pump sets with horizontal motor axis need to be supported without transmitting any stresses or strains. Use the foot fastening holes at the motor housing for this purpose.

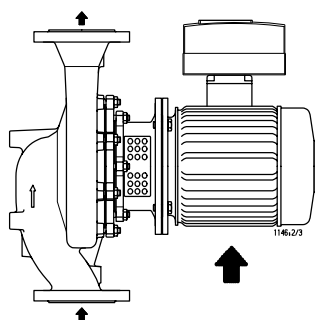


Fig. 14: Horizontal installation of pump sets with PumpDrive, direction of flow from bottom to top

i Motors of size 160 (11 kW) and above on pump sets with horizontal motor axis need to be supported without transmitting any stresses or strains. Use the foot fastening holes at the motor housing for this purpose.

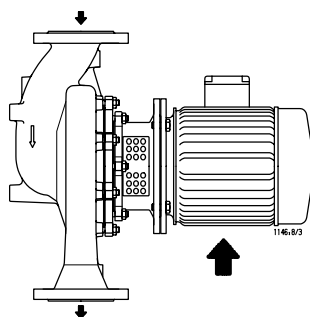


Fig. 15: Horizontal installation, direction of flow from top to bottom

i Turn the volute casing and/or back pull-out unit by 180° so that the terminal box remains in its current position on top. Motors of size 180 (18.5 kW) and above on pump sets with horizontal motor axis need to be supported without transmitting any stresses or strains. Use the foot fastening holes at the motor housing for this purpose.

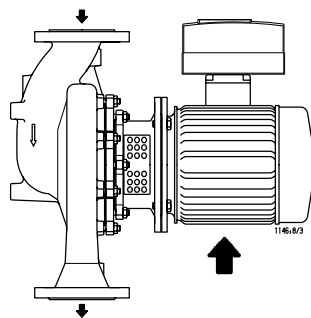


Fig. 16: Horizontal installation of pump sets with PumpDrive, direction of flow from top to bottom

i Turn the volute casing and/or back pull-out unit by 180° so that the terminal box remains in its current position on top.

Motors of size 160 (11 kW) and above on pump sets with horizontal motor axis need to be supported without transmitting any stresses or strains. Use the foot fastening holes at the motor housing for this purpose.

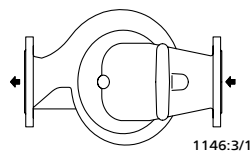


Fig. 17: Horizontal installation (for example under the ceiling)

i Turn the volute casing and/or back pull-out unit by 90° so that the terminal box remains in its current position on top.

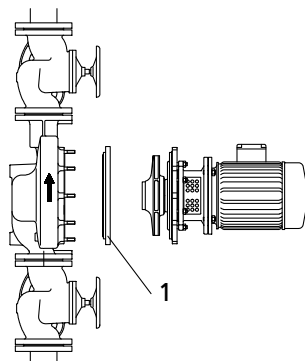


Fig. 18: Horizontal installation with blind flange (1 = blind flange, accessory)

i If one of the pumps needs to be serviced, shut the pump chamber off with a blind flange. The pump installation will remain functional.

Vertical installation

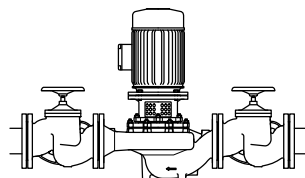


Fig. 19: Vertical installation / mounted without pump foot, sizes 032-032-160 to 100-100-125

i Pumps up to size 100-100-125 can be installed directly in the piping without requiring any additional supports. Always anchor the pipes in close proximity to the pump.

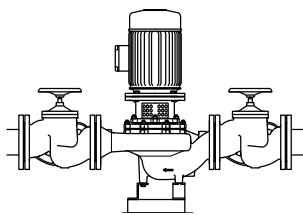


Fig. 20: Vertical installation / mounted on three angle feet (steel 37, accessory), sizes 032-032-160 to 100-100-125

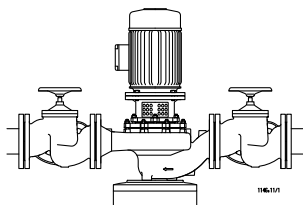


Fig. 21: Vertical installation / mounted on pump foot (grey cast iron, accessory), sizes 100-100-160 to 200-200-315

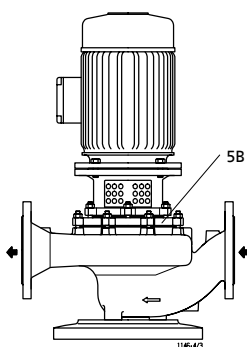


Fig. 22: Vertical installation

i Provide a vent valve to prevent dry running of the mechanical seal. Pumps which have been ordered for vertical installation are supplied with a vent valve. For vertical installation with the motor on top, use connection 5B for venting.

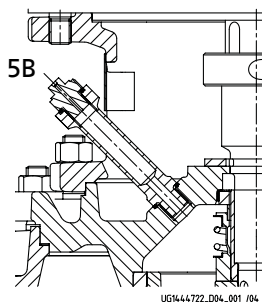


Fig. 23: Vent, mechanical seal chamber

i Mechanical seal chamber can be vented with vent valve 5B.

9.2 Exploded view and list of components

9.2.1 Variant with bolted casing cover

[Supplied in packaging units only

Table 23: This view applies to the following pump sizes:

032-032-200	040-040-250	050-050-250	065-065-250	080-080-200	100-100-250	125-125-250	150-150-250	200-200-250
				080-080-250				200-200-315

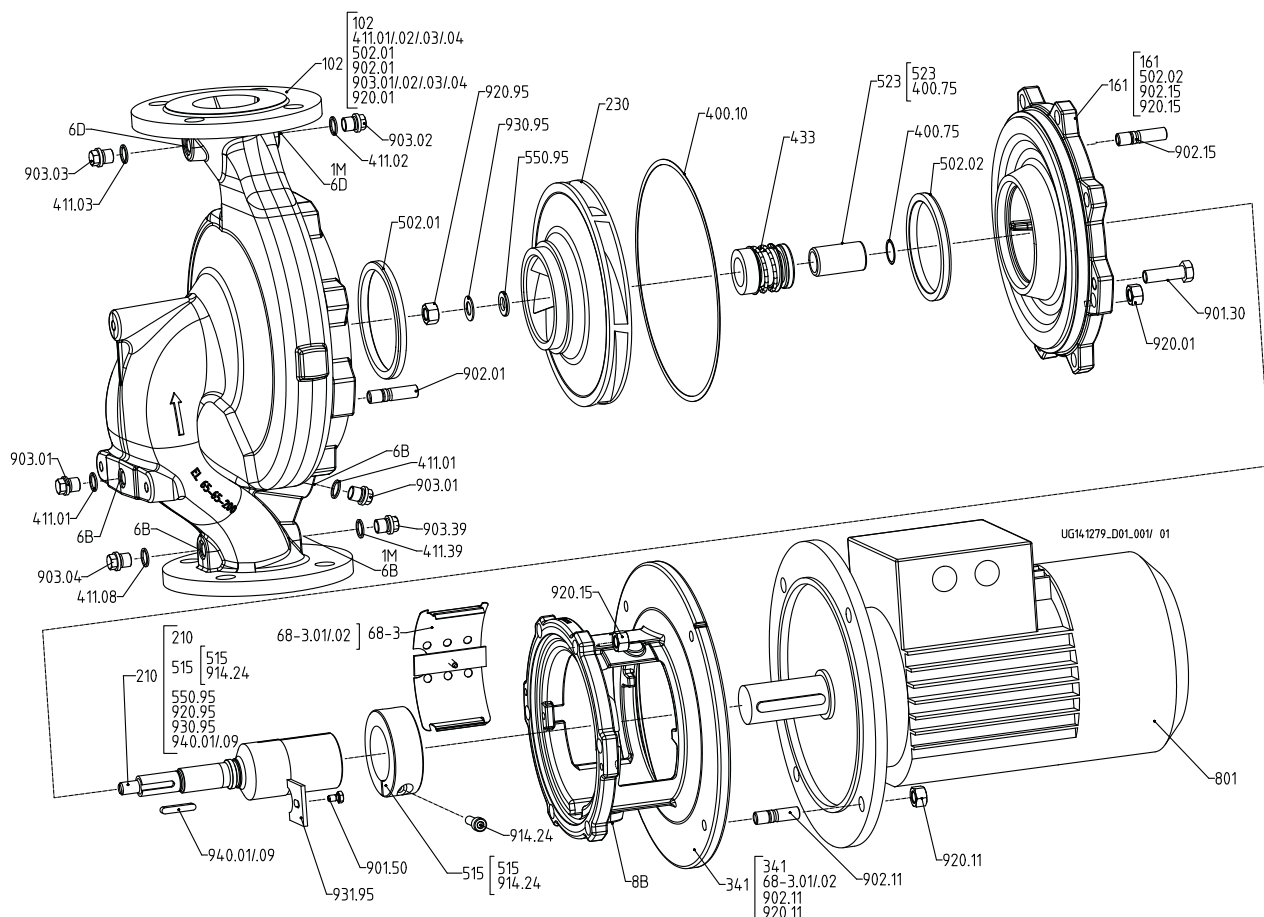


Fig. 24: Version with bolted casing cover

Table 24: List of components

Part No.	Description	Part No.	Description
102	Volute casing	901.30/50	Hexagon head bolt
161	Casing cover	902.01/11/15	Stud
210	Shaft	903.01/02/03/04/08/39	Screw plug
230	Impeller	914.24	Hexagon socket head cap screw
341	Drive lantern	920.01/11/15/95	Hexagon nut
400.10/75	Gasket	930.95	Safety device
411.01/02/03/04/08/39	O-ring	931.95	Lock washer
433	Mechanical seal	940.01/09	Key
502.01/02	Casing wear ring		
515	Locking ring	Auxiliary connections	
523	Shaft sleeve	1M	Pressure gauge
550.95	Disc ¹¹	6B	Fluid drain

¹¹ For shaft unit 25 only

Part No.	Description	Part No.	Description
68-3.01/02	Cover plate	6D	Fluid priming and venting
801	Flanged motor	8B	Leakage drain

9.2.2 Variant with clamped casing cover

[Supplied in packaging units only

Table 25: This view applies to the following pump sizes:

32-32-160	40-40-160	50-50-160	65-65-160	80-80-160	100-100-125 100-100-160 100-100-200	125-125-160 125-125-200	150-150-200
-----------	-----------	-----------	-----------	-----------	---	----------------------------	-------------

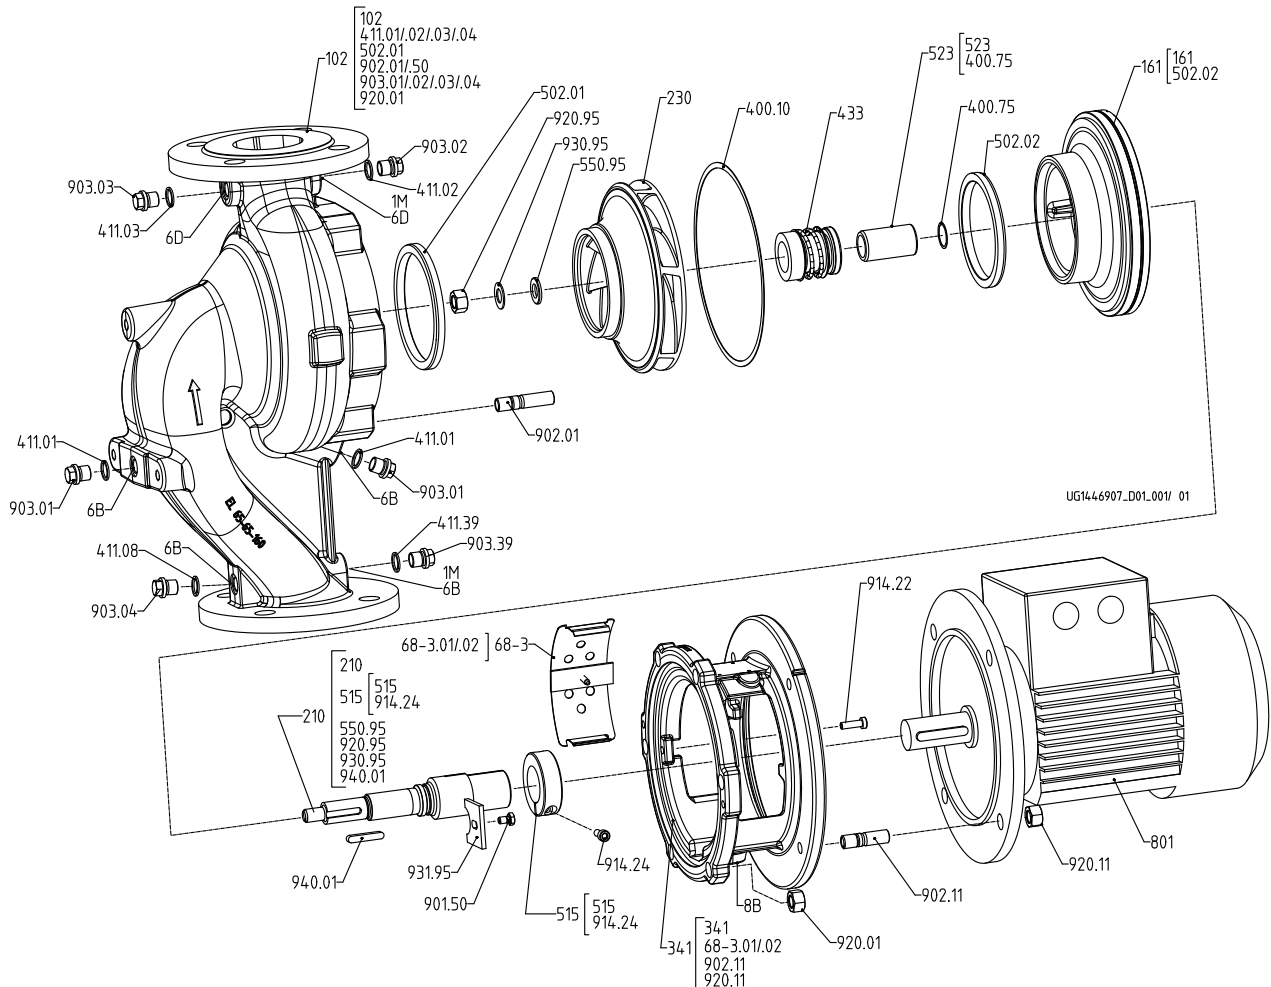


Fig. 25: Pump set with single mechanical seal and clamped casing cover

Table 26: List of components

Part No.	Description	Part No.	Description
102	Volute casing	901.50	Hexagon head bolt
161	Casing cover	902.01/.11/.50	Stud
210	Shaft	903.01/.02/.03/.04/.08/.39	Screw plug
230	Impeller	914.22/.24	Hexagon socket head cap screw
341	Drive lantern	920.01/.11/.95	Hexagon nut
400.10/.75	Gasket	930.95	Safety device
411.01/.02/.03/.04/.08/.39	O-ring	931.95	Lock washer
433	Mechanical seal	940.01	Key
502.01/.02	Casing wear ring		
515	Locking ring	Auxiliary connections	
523	Shaft sleeve	1M	Pressure gauge
550.95	Disc ¹²⁾	6B	Fluid drain
68-3.01/.02	Cover plate	6D	Fluid priming and venting
801	Flanged motor	8B	Leakage drain

¹²⁾ For shaft unit 25 only

9.2.3 Variant with pump feet for vertical installation

Table 27: This view applies to the following pump sizes:

032-032-160	040-040-160	050-050-160	065-065-160	080-080-160	100-100-125
032-032-200	040-040-250	050-050-250	065-065-250	080-080-200	080-080-250

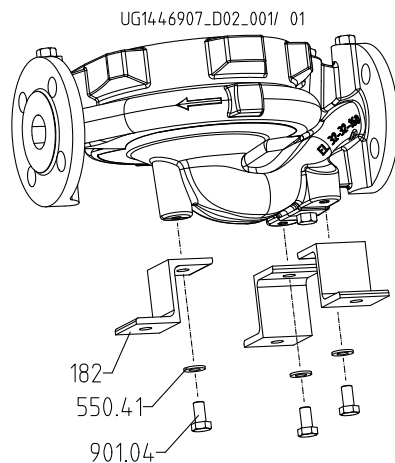


Fig. 26: Vertical installation with angle feet

Table 28: This view applies to the following pump sizes:

100-100-160	125-125-160	150-150-200	200-200-250
100-100-200	125-125-200	150-150-250	200-200-315
100-100-250	125-125-250		

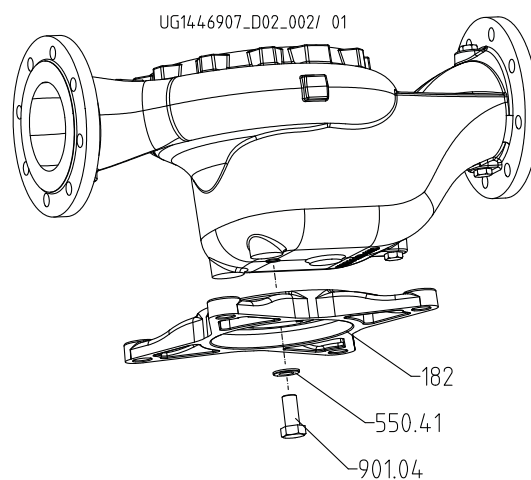


Fig. 27: Vertical installation with pump foot

Table 29: List of components

Part No.	Description
182	Foot
550.41	Disc
901.04	Hexagon head bolt

9.3 General assembly drawing with list of components

Table 30: This view applies to the following pump sizes with bolted casing cover:

032-032-200	040-040-250	050-050-250	065-065-250	080-080-200	100-100-250	125-125-250	150-150-250	200-200-250
				080-080-250				200-200-315

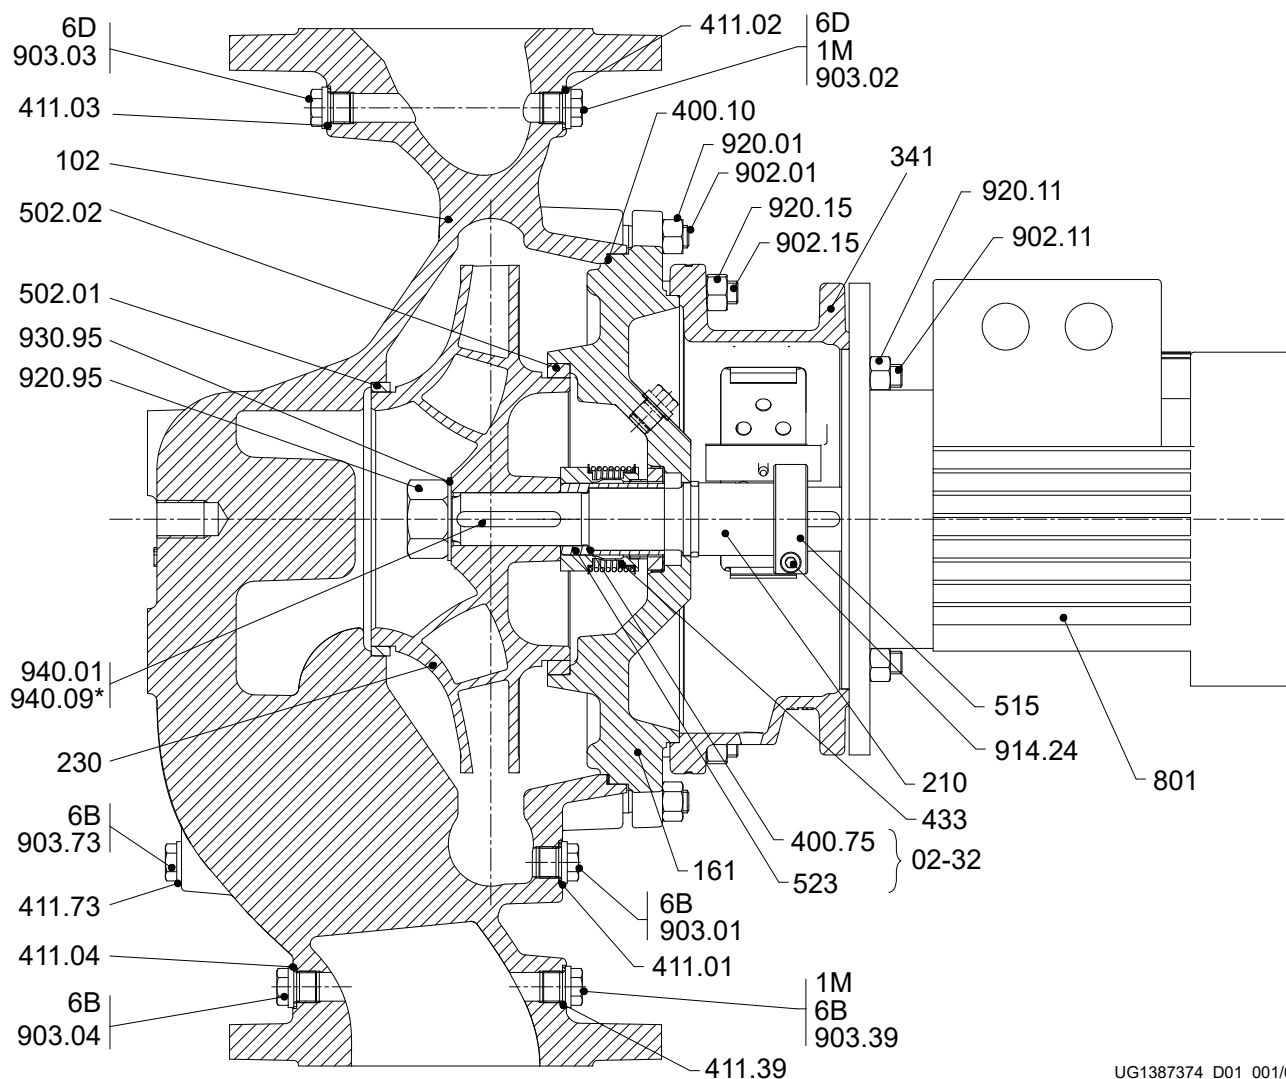


Fig. 28: General assembly drawing (* Second key for WS 55 only)

UG1387374_D01_001/06

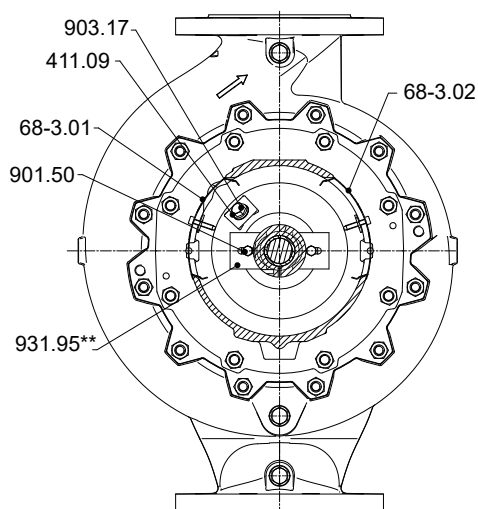


Fig. 29: General assembly drawing: side view (** pump in operation)

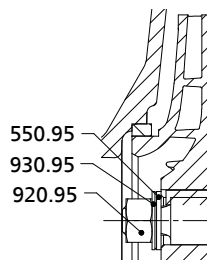


Fig. 30: Fastening elements for the impeller, WS 25

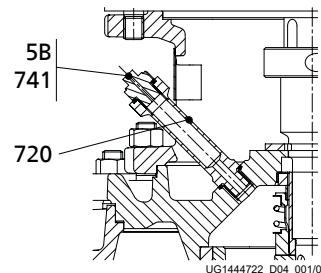


Fig. 31: Vent valve 5B for vertical installation

Table 31: This view applies to the following pump sizes with clamped casing cover:

032-032-160	040-040-160	050-050-160	065-065-160	080-080-160	100-100-125	125-125-160	150-150-200
					100-100-160	125-125-200	
					100-100-200		

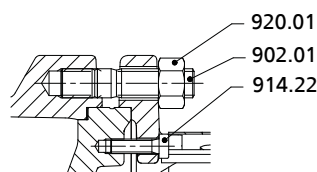


Fig. 32: Fastening elements for the clamped casing cover

Table 32: List of components

Part No.	Description	Part No.	Description
102	Volute casing	68-3.01/.02	Cover plate
161	Casing cover	720	Fitting
210	Shaft	741	Vent valve
230	Impeller	801	Flanged motor
341	Drive lantern	901.50	Hexagon head bolt
400.10/.75	Gasket	902.01/.11/.15	Stud
411.01/.02/.03/.04/.09/.39/.73	Joint ring	903.01/.02/.03/.04/.17/.39/.73	Screw plug
433	Mechanical seal	914.22/.24	Hexagon socket head cap screw
502.01/.02	Casing wear ring	920.01/.11/.15/.95	Hexagon nut
515	Locking ring	930.95	Safety device
523	Shaft sleeve	931.95	Lock washer
550.95 ¹³⁾	Disc	940.01/.09	Key

Table 33: Connections

Part No.	Description	Part No.	Description
1M	Pressure gauge	6B	Fluid drain
5B ¹⁴⁾	Vent, mechanical seal chamber	6D	Fluid priming and venting

¹³ For shaft unit 25 only

¹⁴ Only for vertically installed pump sets

10 UK Declaration of Conformity

Manufacturer:

KSB SE & Co. KGaA
Johann-Klein-Straße 9
67227 Frankenthal (Germany)

This UK Declaration of Conformity is issued under the sole responsibility of the manufacturer.

The manufacturer herewith declares that **the product**:

**Etabloc, Etabloc SYT, Etaline, Etaline SYT, Etaline Z, Etachrom B,
 Etachrom L, Etanorm, Etanorm SYT, Etanorm V, Etaprime L,
 Etaprime B**

KSB order number:

- is in conformity with the provisions of the following directives / regulations as amended from time to time:
 - Pump (set): Supply of Machinery (Safety) Regulations 2008
 - Electrical components¹⁵⁾: The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

The manufacturer also declares that

- the following harmonised international standards¹⁶⁾ have been applied:
 - ISO 12100
 - EN 809

Person authorised to compile the technical file:

Name
 Function
 Address (company)
 Address (street, No.)
 Address (post or ZIP code, city) (country)

Place, date

.....¹⁷⁾.....

Name
 Function
 Company
 Address

¹⁵ Where applicable

¹⁶ Apart from the standards listed here referring to the *Supply of Machinery (Safety) Regulations 2008*, further standards are observed for explosion-proof versions (*Equipment and Protective Systems Intended for use in Potentially Explosive Atmospheres Regulations 2016*) as applicable and are listed in the legally binding UK Declaration of Conformity.

¹⁷ A signed, legally binding UK Declaration of Conformity is supplied with the product.

11 Certificate of Decontamination

Type:
Order number /
Order item number¹⁸:
Delivery date:
Application:
Fluid handled¹⁸:

Please tick where applicable¹⁸:



Corrosive



Oxidising



Flammable



Explosive



Hazardous to health



Seriously hazardous to health



Toxic



Radioactive



Bio-hazardous



Safe

Reason for return:¹⁸:
Comments:
.....

The product / accessories have been carefully drained, cleaned and decontaminated inside and outside prior to dispatch / placing at your disposal.

We herewith declare that this product is free from hazardous chemicals and biological and radioactive substances.

For mag-drive pumps, the inner rotor unit (impeller, casing cover, bearing ring carrier, plain bearing, inner rotor) has been removed from the pump and cleaned. In cases of containment shroud leakage, the outer rotor, bearing bracket lantern, leakage barrier and bearing bracket or intermediate piece have also been cleaned.

For canned motor pumps, the rotor and plain bearing have been removed from the pump for cleaning. In cases of leakage at the stator can, the stator space has been examined for fluid leakage; if fluid handled has penetrated the stator space, it has been removed.

- ☐ No special safety precautions are required for further handling.
☐ The following safety precautions are required for flushing fluids, fluid residues and disposal:

.....
.....

We confirm that the above data and information are correct and complete and that dispatch is effected in accordance with the relevant legal provisions.

.....
Place, date and signature

.....
Address

.....
Company stamp

Index

A

Applications 8
Auxiliary connections 25

B

Back pull-out unit 13
Bearing temperature 38
Bearings 18

C

Certificate of Decontamination 63
Clearances 39
Commissioning 29

D

Design 17, 19
Direction of rotation 28
Dismantling 41
Disposal 14
Drive 18, 20

E

Event of damage 6
 Ordering spare parts 48
Exploded view 58, 59
Explosion protection 26, 27, 29, 31, 32, 33, 36, 37, 39, 45

F

Faults
 Causes and remedies 51
Filter 23, 39
Fluid handled
 Density 34
Frequency of starts 33
Function 19

I

Impeller type 17
Installation at site 21
Intended use 8
Interchangeability of pump components 49

K

Key to safety symbols/markings 7

L

List of components 59

M

Maintenance 37
Mechanical seal 29
Monitoring equipment 11

N

Name plate 17
Noise characteristics 20

O

Operating limits 32
Order number 6
Other applicable documents 6

P

Partly completed machinery 6
Permissible forces at the pump nozzles 24
Piping 22
Preservation 14, 35
Product code 15
Product description 15
Pump casing 17

R

Reassembly 41, 43
Return to supplier 14
Returning to service 35

S

Safety 8
Safety awareness 9
Scope of supply 20
Shaft seal 18
Shutdown 35
Spare part
 Ordering spare parts 48
Spare parts stock 48
Start-up 31
Storage 14, 35

T

Temperature limits 11
Tightening torques 47
Transport 12

V

Vertical installation
 Angle feet 59

W

Warnings 7

Warranty claims 6



KSB SE & Co. KGaA

Johann-Klein-Straße 9 • 67227 Frankenthal (Germany)

Tel. +49 6233 86-0

www.ksb.com

1159.87/01-EN (05152923)