


Magnetic Filter

Magnochem, Magnochem-Bloc

Supplementary Operating Manual

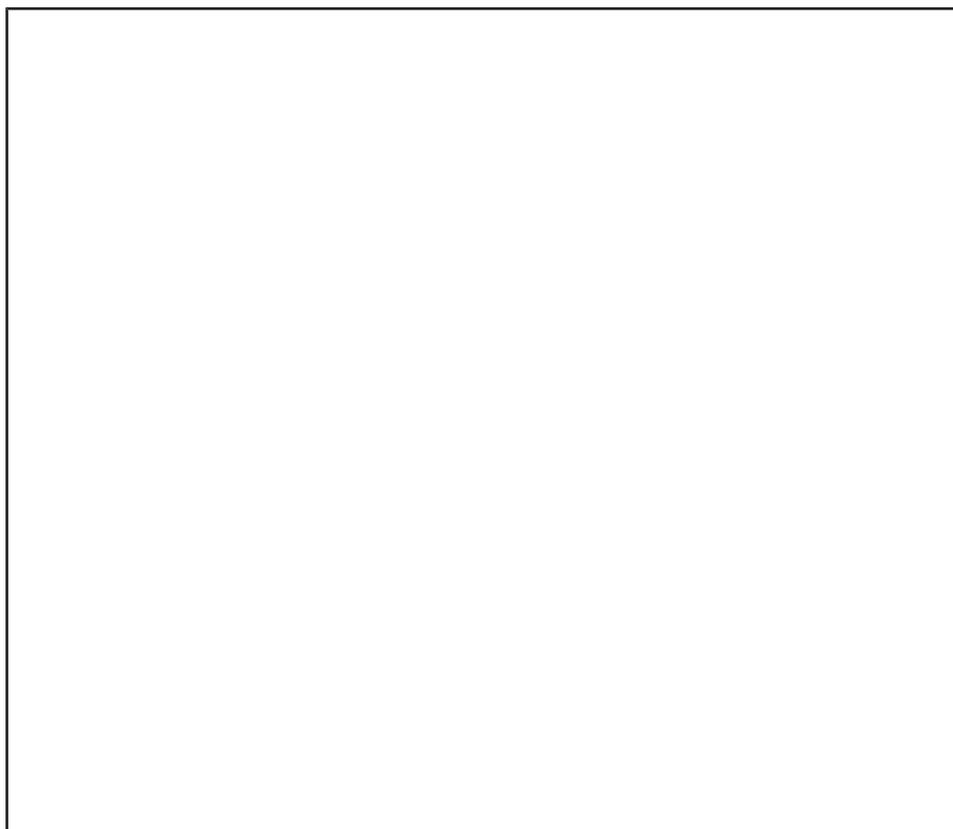

Legal information/Copyright

Supplementary Operating Manual Magnetic Filter

Original operating manual

All rights reserved. The contents provided herein must neither be distributed, copied, reproduced, edited or processed for any other purpose, nor otherwise transmitted, published or made available to a third party without the manufacturer's express written consent.

Subject to technical modification without prior notice.

© KSB SE & Co. KGaA, Frankenthal 28/05/2019

Contents

1	Supplementary Operating Manual	4
1.1	General.....	4
1.2	Design and function.....	4
1.3	Monitoring the magnetic filter	5
1.3.1	Monitoring the containment shroud temperature with a thermocouple or Pt100 resistance thermometer.....	5
1.3.2	Monitoring the pressure difference	6
1.4	Supervision of operation.....	6
1.5	Cleaning intervals.....	6

1 Supplementary Operating Manual

1.1 General

This supplementary operating manual accompanies the installation/operating manual. All information contained in the installation/operating manual must be observed.

Table 1: Relevant operating manuals

Type series	Reference number of the installation/operating manual
Magnochem	2747.8
Magnochem-Bloc	2747.81

Manufacturer's product literature

For accessories and/or integrated machinery components observe the relevant manufacturer's product literature.

1.2 Design and function

The magnetic filter is designed for use in circulation circuits to filter liquids containing magnetic and non-magnetic contaminants, which must be removed to protect the rotor space.

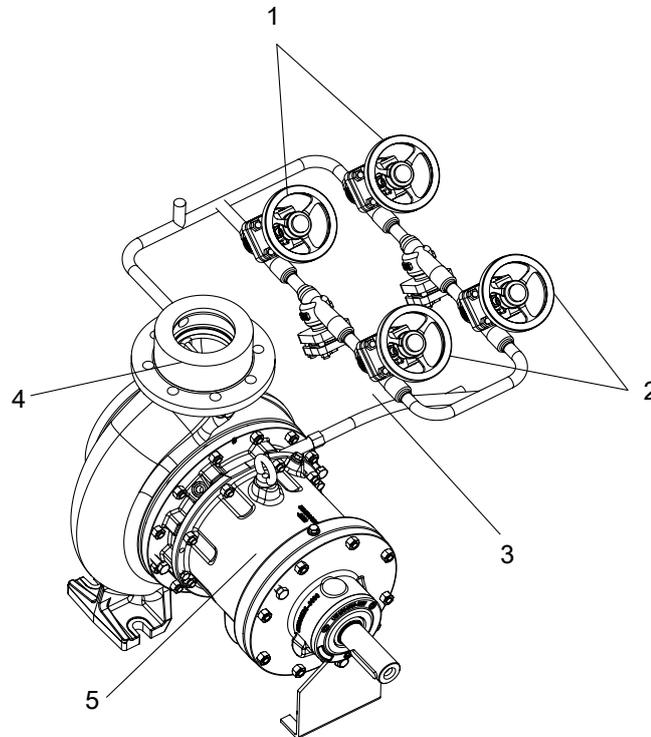


Fig. 1: Design of the circulation line

1	Shut-off elements upstream of the filters	2	Shut-off elements downstream of the filters
3	Magnetic filter	4	Main flow filter
5	Rotor space of magnetic coupling		

Function Coarse particles are filtered from the fluid handled with the (self-cleaning) main flow filter.

From the main flow filter the fluid handled is pumped through one of two parallel pipe branches to the rotor space of the magnetic coupling.

Each pipe branch comprises a magnetic filter as well as a shut-off element upstream of the filter and a shut-off element downstream of the filter.

During operation only one pipe branch is open and filters dirt particles (especially magnetic particles) out of the fluid handled. The second pipe branch is only used when the first pipe branch is shut off so cleaning work can be performed at its magnetic filter.

1.3 Monitoring the magnetic filter

As the magnetic filter will become clogged by particles after a period of time, it has to be monitored.

 	 DANGER
	<p>Clogged magnetic filter Explosion hazard by excessive surface temperature! Damage to the pump set!</p> <p>▷ Monitor the magnetic filter. Clean it when necessary.</p>

The following monitoring methods are available:

- Monitoring the containment shroud temperature with a thermocouple or Pt100 resistance thermometer
- Monitoring the pressure difference

1.3.1 Monitoring the containment shroud temperature with a thermocouple or Pt100 resistance thermometer

1.3.1.1 Function

The containment shroud temperature is measured with a thermocouple or a Pt100 resistance thermometer. If the magnetic filter becomes clogged by solid particles, the flow rate through the magnetic coupling will be reduced. This will lead to a temperature increase at the containment shroud.

1.3.1.2 Determining the trigger value

	NOTE
	<p>After any changes to the fluid temperature or system speed, the trigger value must be re-determined and re-set.</p>

Steady state Steady state is reached when the temperature rise does not exceed 2 K/h (to EN 13463-1: 2009-07).

- ✓ The magnetic filter has been cleaned.
 1. Start up the pump set.
 2. Operate the pump set at duty point until the containment shroud temperature has reached steady-state condition.
 3. Note down the containment shroud temperature as **Temperature A**.
 4. Calculate the containment shroud steady-state temperature:
Temperature A + 5 K = containment shroud steady-state temperature
 5. Set the trigger value to the calculated containment shroud steady-state temperature.

1.3.1.3 Setting the calculated trigger value

Enter the calculated trigger value in the customer-supplied monitoring systems in accordance with the manufacturer's product literature.

1.3.2 Monitoring the pressure difference

1.3.2.1 Function

The pressure is measured upstream and downstream of the magnetic filter. If the permissible pressure difference is exceeded, a warning signal must be triggered.

1.3.2.2 Determining the trigger value

The maximum pressure loss value (contamination of the magnetic filter) serves to trigger a warning signal indicating that the magnetic filter needs cleaning. This value must be determined in tests at the site.

Steady state Steady state is reached when the temperature rise does not exceed 2 K/h (to EN 13463-1: 2009-07).

1. Start up the pump set.
2. Note down the pressure readings on the pressure gauges.
3. Operate the pump set at duty point until the rotor space temperature has reached steady-state condition.
4. In the active magnetic filter pipe branch slowly close one of the two shut-off elements in several increments. Monitor the rotor space temperature during this process. When the containment shroud temperature begins to increase, the maximum pressure loss between the measurement points has been reached.
5. Again, note the pressure difference (= value which triggers the warning signal).
6. Fully open the throttled shut-off element again.

1.3.2.3 Setting the calculated trigger value

Enter the calculated trigger value in the customer-supplied monitoring systems in accordance with the manufacturer's product literature.

1.4 Supervision of operation

If during operation the temperature rises in the rotor space, proceed as follows:

1. Open the shut-off elements upstream and downstream of the uncontaminated magnetic filter to maintain circulation.
2. Close the shut-off elements upstream and downstream of the contaminated magnetic filter.
3. Allow the contaminated magnetic filter to cool down to ambient temperature.
4. Clean and re-insert the contaminated magnetic filter in accordance with the manufacturer's product literature.

1.5 Cleaning intervals

The necessary cleaning intervals depend on the level of contamination of the fluid handled. It is advisable to clean the filter on a daily basis following commissioning of the pump set and then to schedule cleaning intervals depending on the degree of contamination.



KSB SE & Co. KGaA

Johann-Klein-Straße 9 • 67227 Frankenthal (Germany)

Tel. +49 6233 86-0

www.ksb.com