


Standardised Chemical Pump

CPKN

Bearing Assemblies UP02 to UP06 and P08s

Installation/Operating Manual

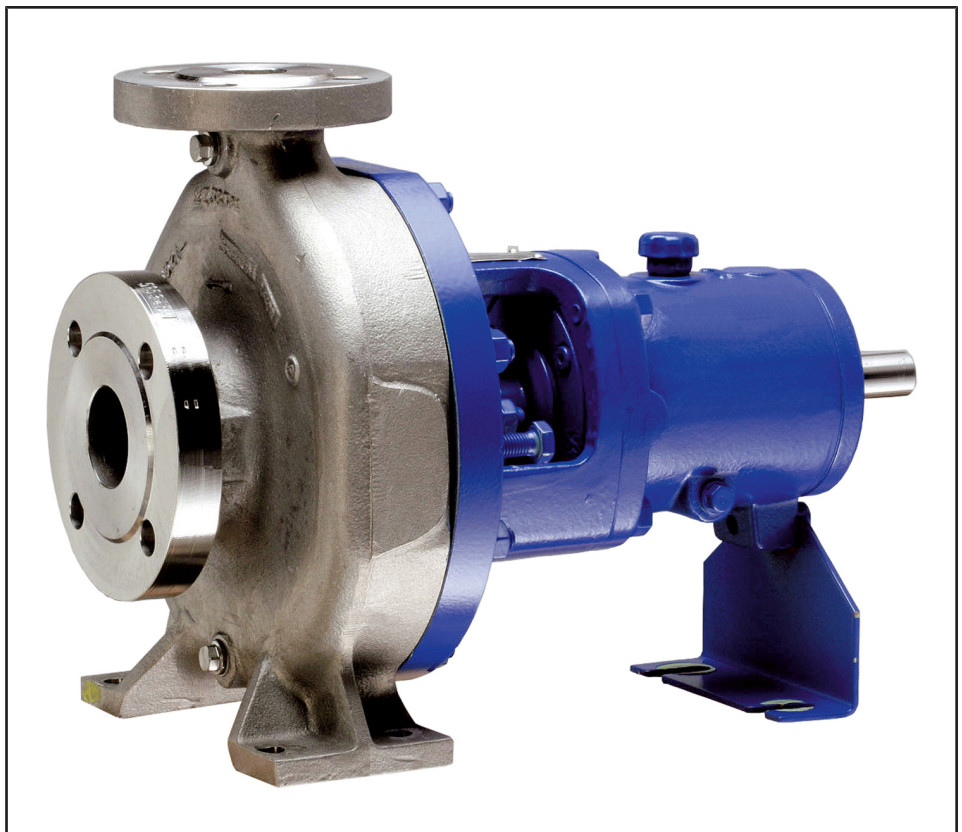

Legal information/Copyright

Installation/Operating Manual CPKN

Original operating manual

All rights reserved. The contents provided herein must neither be distributed, copied, reproduced, edited or processed for any other purpose, nor otherwise transmitted, published or made available to a third party without the manufacturer's express written consent.

Subject to technical modification without prior notice.

© KSB SE & Co. KGaA, Frankenthal 07/02/2022

Contents

	Glossary	6
1	General.....	7
1.1	Principles	7
1.2	Installation of partly completed machinery.....	7
1.3	Target group.....	7
1.4	Other applicable documents.....	7
1.5	Symbols	7
1.6	Key to safety symbols/markings.....	8
2	Safety	9
2.1	General.....	9
2.2	Intended use	9
2.3	Personnel qualification and training.....	9
2.4	Consequences and risks caused by non-compliance with this manual	10
2.5	Safety awareness	10
2.6	Safety information for the operator/user	10
2.7	Safety information for maintenance, inspection and installation	10
2.8	Unauthorised modes of operation	11
2.9	Explosion protection	11
2.9.1	Marking	11
2.9.2	Temperature limits.....	11
2.9.3	Monitoring equipment.....	12
2.9.4	Operating limits	12
3	Transport/Storage/Disposal	13
3.1	Checking the condition upon delivery	13
3.2	Transport.....	13
3.3	Storage/preservation	14
3.4	Return to supplier.....	14
3.5	Disposal	15
4	Description of the Pump (Set)	16
4.1	General description	16
4.2	Product information as per Regulation No. 1907/2006 (REACH).....	16
4.3	Designation.....	16
4.4	Name plate.....	16
4.5	Design details.....	16
4.6	Design and function	19
4.7	Noise characteristics	20
4.8	Scope of supply.....	20
4.9	Dimensions and weights	21
5	Installation at Site	22
5.1	Safety regulations.....	22
5.2	Checks to be carried out prior to installation.....	22
5.3	Installing the pump set	22
5.3.1	Installation on the foundation.....	23
5.3.2	Installation without foundation	24
5.4	Piping	24
5.4.1	Connecting the piping.....	24
5.4.2	Permissible forces and moments at the pump nozzles.....	26
5.4.3	Auxiliary connections.....	27
5.5	Enclosure/insulation	28
5.6	Checking the coupling alignment	28
5.7	Aligning the pump and motor	30
5.7.1	Motors with adjusting screw	31

5.7.2	Motors without adjusting screw	31
5.8	Electrical connection	32
5.8.1	Setting the time relay	33
5.8.2	Earthing	33
5.8.3	Connecting the motor	33
5.9	Checking the direction of rotation.....	34
6	Commissioning/Start-up/Shutdown	35
6.1	Commissioning/Start-up	35
6.1.1	Prerequisites for commissioning/start-up	35
6.1.2	Filling in lubricants.....	35
6.1.3	Shaft seal	36
6.1.4	Priming and venting the pump.....	37
6.1.5	Final check	37
6.1.6	Water cooling.....	37
6.1.7	Cooling of the shaft seal	38
6.1.8	Heating	38
6.1.9	Heating up/keeping warm the pump (set)	39
6.1.10	Start-up.....	40
6.1.11	Checking the shaft seal.....	41
6.1.12	Shutdown	42
6.2	Operating limits.....	43
6.2.1	Ambient temperature.....	43
6.2.2	Frequency of starts.....	43
6.2.3	Fluid handled	44
6.3	Shutdown/storage/preservation	45
6.3.1	Measures to be taken for shutdown	45
6.4	Returning to service	45
7	Servicing/Maintenance	47
7.1	Safety regulations.....	47
7.2	Servicing/Inspection.....	48
7.2.1	Supervision of operation	48
7.2.2	Inspection work.....	50
7.2.3	Lubrication and lubricant change of rolling element bearings	51
7.3	Drainage/cleaning	54
7.4	Dismantling the pump set.....	54
7.4.1	General information/Safety regulations.....	54
7.4.2	Preparing the pump set.....	55
7.4.3	Removing the motor.....	55
7.4.4	Removing the back pull-out unit.....	55
7.4.5	Removing the impeller	56
7.4.6	Removing the shaft seal	56
7.4.7	Dismantling the bearings	57
7.5	Reassembling the pump set.....	58
7.5.1	General information/Safety regulations.....	58
7.5.2	Fitting the bearings	59
7.5.3	Fitting the shaft seal	60
7.5.4	Fitting the impeller.....	62
7.5.5	Fitting the back pull-out unit.....	62
7.5.6	Mounting the motor	63
7.6	Tightening torques.....	63
7.6.1	Tightening torques	63
7.6.2	Tightening torques for the impeller nut	63
7.7	Spare parts stock.....	64
7.7.1	Ordering spare parts.....	64
7.7.2	Recommended spare parts stock for 2 years' operation to DIN 24296	64
7.7.3	Interchangeability of pump components.....	64

8	Trouble-shooting.....	67
9	Related Documents	69
	9.1 General assembly drawing with list of components	70
10	UK Declaration of Conformity.....	75
11	Certificate of Decontamination.....	76
	Index	77

Glossary

Back pull-out design

The complete back pull-out unit can be pulled out without having to remove the pump casing from the piping.

Back pull-out unit

Pump without pump casing; partly completed machinery

Certificate of decontamination

A certificate of decontamination is enclosed by the customer when returning the product to the manufacturer to certify that the product has been properly drained to eliminate any environmental and health hazards arising from components in contact with the fluid handled.

Discharge line

The pipeline which is connected to the discharge nozzle

Hydraulic system

The part of the pump in which the kinetic energy is converted into pressure energy

Pool of pumps

Customers/operators' pumps which are purchased and stored regardless of their later use.

Pump

Machine without drive, additional components or accessories

Pump set

Complete pump set consisting of pump, drive, additional components and accessories

Suction lift line/suction head line

The pipeline which is connected to the suction nozzle

1 General

1.1 Principles

This operating manual is valid for the type series and variants indicated on the front cover.

The operating manual describes the proper and safe use of this equipment in all phases of operation.

The name plate indicates the type series and size, the main operating data, the order number and the order item number. The order number and order item number clearly identify the pump set and serve as identification for all further business processes.

In the event of damage, immediately contact your nearest KSB service facility to maintain the right to claim under warranty.

1.2 Installation of partly completed machinery

To install partly completed machinery supplied by KSB refer to the sub-sections under Servicing/Maintenance. (⇒ Section 7.5.5, Page 62)

1.3 Target group

This operating manual is aimed at the target group of trained and qualified specialist technical personnel. (⇒ Section 2.3, Page 9)

1.4 Other applicable documents

Table 1: Overview of other applicable documents

Document	Contents
Data sheet	Description of the technical data of the pump (set)
General arrangement drawing/ outline drawing	Description of mating and installation dimensions for the pump (set), weights
Drawing of auxiliary connections	Description of auxiliary connections
Hydraulic characteristic curve	Characteristic curves showing head, NPSH required, efficiency and power input
General assembly drawing ¹⁾	Sectional drawing of the pump
Sub-supplier product literature ¹⁾	Operating manuals and other product literature describing accessories and integrated machinery components
Spare parts lists ¹⁾	Description of spare parts
Piping layout ¹⁾	Description of auxiliary piping
List of components ¹⁾	Description of all pump components
Assembly drawing ¹⁾	Sectional drawing of the installed shaft seal


For accessories and/or integrated machinery components observe the relevant manufacturer's product literature.

1.5 Symbols

Table 2: Symbols used in this manual








Symbol	Description
✓	Conditions which need to be fulfilled before proceeding with the step-by-step instructions
▷	Safety instructions
⇒	Result of an action
⇔	Cross-references

¹ If agreed to be included in the scope of supply

Symbol	Description
1. 2.	Step-by-step instructions
	Note Recommendations and important information on how to handle the product

1.6 Key to safety symbols/markings

Table 3: Definition of safety symbols/markings

Symbol	Description
 DANGER	DANGER This signal word indicates a high-risk hazard which, if not avoided, will result in death or serious injury.
 WARNING	WARNING This signal word indicates a medium-risk hazard which, if not avoided, could result in death or serious injury.
 CAUTION	CAUTION This signal word indicates a hazard which, if not avoided, could result in damage to the machine and its functions.
	Explosion protection This symbol identifies information about avoiding explosions in potentially explosive atmospheres in accordance with the <i>Equipment and Protective Systems Intended for use in Potentially Explosive Atmospheres Regulations 2016</i> .
	General hazard In conjunction with one of the signal words this symbol indicates a hazard which will or could result in death or serious injury.
	Electrical hazard In conjunction with one of the signal words this symbol indicates a hazard involving electrical voltage and identifies information about protection against electrical voltage.
	Machine damage In conjunction with the signal word CAUTION this symbol indicates a hazard for the machine and its functions.



2 Safety

All the information contained in this section refers to hazardous situations.

In addition to the present general safety information the action-related safety information given in the other sections must be observed.

2.1 General

- This operating manual contains general installation, operating and maintenance instructions that must be observed to ensure safe operation of the system and prevent personal injury and damage to property.
- Comply with all the safety instructions given in the individual sections of this operating manual.
- The operating manual must be read and understood by the responsible specialist personnel/operators prior to installation and commissioning.
- The contents of this operating manual must be available to the specialist personnel at the site at all times.
- Information and markings attached directly to the product must always be complied with and kept in a perfectly legible condition at all times. This applies to, for example:
 - Arrow indicating the direction of rotation
 - Markings for connections
 - Name plate
- The operator is responsible for ensuring compliance with all local regulations not taken into account.

2.2 Intended use

- The pump (set) must only be operated in the fields of application and within the use limits specified in the other applicable documents. (⇒ Section 1.4, Page 7)
- Only operate pumps/pump sets which are in perfect technical condition.
- Do not operate the pump (set) in partially assembled condition.
- Only use the pump (set) to handle the fluids described in the data sheet or product literature of the pump model.
- Never operate the pump (set) without the fluid to be handled.
- Observe the minimum flow rate and maximum flow rate indicated in the data sheet or product literature (to prevent overheating, mechanical seal damage, cavitation damage, bearing damage, etc).
- Always operate the pump (set) in the direction of rotation it is intended for.
- Do not throttle the flow rate on the suction side of the pump (to prevent cavitation damage).
- Consult the manufacturer about any use or mode of operation not described in the data sheet or product literature.

2.3 Personnel qualification and training

All personnel involved must be fully qualified to transport, install, operate, maintain and inspect the machinery this manual refers to.

The responsibilities, competence and supervision of all personnel involved in transport, installation, operation, maintenance and inspection must be clearly defined by the operator.

Deficits in knowledge must be rectified by means of training and instruction provided by sufficiently trained specialist personnel. If required, the operator can commission the manufacturer/supplier to train the personnel.

Training on the pump (set) must always be supervised by technical specialist personnel.

2.4 Consequences and risks caused by non-compliance with this manual

- Non-compliance with these operating instructions will lead to forfeiture of warranty cover and of any and all rights to claims for damages.
- Non-compliance can, for example, have the following consequences:
 - Hazards to persons due to electrical, thermal, mechanical and chemical effects and explosions
 - Failure of important product functions
 - Failure of prescribed maintenance and servicing practices
 - Hazard to the environment due to leakage of hazardous substances

2.5 Safety awareness

In addition to the safety information contained in this operating manual and the intended use, the following safety regulations shall be complied with:

- Accident prevention, health regulations and safety regulations
- Explosion protection regulations
- Safety regulations for handling hazardous substances
- Applicable standards, directives and laws

2.6 Safety information for the operator/user

- Fit protective equipment (e.g. contact guards) supplied by the operator for hot, cold or moving parts, and check that the equipment functions properly.
- Do not remove any protective equipment (e.g. contact guards) during operation.
- Provide the personnel with protective equipment and make sure it is used.
- Contain leakages (e.g. at the shaft seal) of hazardous fluids handled (e.g. explosive, toxic, hot) so as to avoid any danger to persons and the environment. Adhere to all relevant laws.
- Eliminate all electrical hazards. (In this respect refer to the applicable national safety regulations and/or regulations issued by the local energy supply companies.)
- If stopping the pump does not increase potential risk, fit an emergency-stop control device in the immediate vicinity of the pump (set) during pump set installation.

2.7 Safety information for maintenance, inspection and installation

- Modifications or alterations of the pump (set) are only permitted with the manufacturer's prior consent.
- Use only original spare parts or parts/components authorised by the manufacturer. The use of other parts/components can invalidate any liability of the manufacturer for resulting damage.
- The operator ensures that maintenance, inspection and installation are performed by authorised, qualified specialist personnel who are thoroughly familiar with the manual.
- Only carry out work on the pump (set) during standstill of the pump.
- Only perform work on the pump set when it has been disconnected from the power supply (de-energised).
- The pump (set) must have cooled down to ambient temperature.
- Pump pressure must have been released and the pump must have been drained.

- When taking the pump set out of service always adhere to the procedure described in the manual. (⇒ Section 6.1.12, Page 42) (⇒ Section 6.3, Page 45)
- Decontaminate pumps which handle fluids posing a health hazard. (⇒ Section 7.3, Page 54)
- As soon as the work has been completed, re-install and re-activate any safety-relevant devices and protective devices. Before returning the product to service, observe all instructions on commissioning. (⇒ Section 6.1, Page 35)

2.8 Unauthorised modes of operation

Never operate the pump (set) outside the limits stated in the data sheet and in this manual.

The warranty relating to the operating reliability and safety of the supplied pump (set) is only valid if the equipment is used in accordance with its intended use. (⇒ Section 2.2, Page 9)

2.9 Explosion protection



Always observe the information on explosion protection given in this section when operating the product in potentially explosive atmospheres.

Only pumps/pump sets marked as explosion-proof **and** identified as such in the data sheet may be used in potentially explosive atmospheres.

Special conditions apply to the operation of explosion-proof pump sets in accordance with UK *Equipment and Protective Systems Intended for use in Potentially Explosive Atmospheres Regulations 2016*.

Especially adhere to the sections in this manual marked with the Ex symbol and the following sections, (⇒ Section 2.9.1, Page 11) to (⇒ Section 2.9.4, Page 12)

The explosion-proof status is only assured if the product is used in accordance with its intended use.

Never operate the product outside the limits stated in the data sheet and on the name plate.

Prevent impermissible modes of operation at all times.

2.9.1 Marking

Pump The marking on the pump refers to the pump part only.

Example of such marking:

II 2G Ex h IIC T5-T1 Gb

Refer to the Temperature limits table for the maximum temperatures permitted for the individual pump variants. (⇒ Section 2.9.2, Page 11)

The pump complies with the requirements of type of protection constructional safety "c" to ISO 80079-37.

Shaft coupling An EC manufacturer's declaration is required for the shaft coupling; the shaft coupling must be marked accordingly.

Motor The motor must be considered separately.

2.9.2 Temperature limits

In normal pump operation, the highest temperatures are to be expected at the surface of the pump casing, at the shaft seal and in the bearing areas.

The surface temperature at the pump casing corresponds to the temperature of the fluid handled. If the pump is heated in addition, the operator of the system is responsible for observing the specified temperature class and fluid temperature (operating temperature).

The table (⇒ Table 4) lists the temperature classes and the resulting maximum permissible fluid temperatures. The values shown correspond to the theoretical limits. They include only a general safety margin for the mechanical seal. For single mechanical seals, the safety margin required for specific operating conditions and mechanical seal designs may be substantially higher. If operating conditions differ

from those stated on the data sheet, or if different mechanical seals are used, the actual safety margin required needs to be determined individually. If in doubt please contact the manufacturer.

The temperature class specifies the maximum permissible temperature at the surface of the pump set during operation.

For the permissible operating temperature of the pump in question refer to the data sheet.

Table 4: Temperature limits

Temperature class to ISO 80079-36	Maximum permissible fluid temperature ²⁾
T1	Maximum 400 °C ³⁾
T2	280 °C
T3	185 °C
T4	120 °C
T5	85 °C
T6	Only after consultation with the manufacturer

Temperature class T5 Based on an ambient temperature of 40 °C and proper maintenance and operation, compliance with temperature class T5 is warranted in the area of the rolling element bearings. If the ambient temperature exceeds 40 °C, contact the manufacturer.

Temperature class T6 A special design is required to comply with the requirements of temperature class T6 in the bearing area.

Misuse, malfunctions or non-compliance with the instructions may result in substantially higher temperatures.

If the pump is to be operated at a higher temperature, the data sheet is missing or if the pump is part of a pool of pumps, contact KSB for the maximum permissible operating temperature.

2.9.3 Monitoring equipment

The pump (set) must only be operated within the limits specified in the data sheet and on the name plate.

If the system operator cannot warrant compliance with these operating limits, appropriate monitoring devices must be used.

Check whether monitoring equipment is required to ensure that the pump set functions properly.

Contact KSB for further information about monitoring equipment.

2.9.4 Operating limits

The minimum flow rates indicated in (⇒ Section 6.2.3.1, Page 44) refer to water and water-like fluids handled. Longer operating periods with these fluids and at the flow rates indicated will not cause an additional increase in the temperatures at the pump surface. However, if the physical properties of the fluids handled are different from water, it is essential to check whether an additional heat build-up may occur and if the minimum flow rate must therefore be increased. The calculation formula in (⇒ Section 6.2.3.1, Page 44) can be used to check whether additional heat build-up may lead to a dangerous temperature increase at the pump surface.

²⁾ Subject to further limitations for mechanical seal temperature rise



³⁾ Depending on the material variant

3 Transport/Storage/Disposal

3.1 Checking the condition upon delivery

1. On transfer of goods, check each packaging unit for damage.
2. In the event of in-transit damage, assess the exact damage, document it and notify KSB or the supplying dealer and the insurer about the damage in writing immediately.

3.2 Transport

	<div style="background-color: #e67e22; color: white; padding: 5px; border: 1px solid black;">  DANGER </div> <p>The pump (set) could slip out of the suspension arrangement Danger to life from falling parts!</p> <ul style="list-style-type: none"> ▷ Always transport the pump (set) in the specified position. ▷ Never attach the suspension arrangement to the free shaft end or the motor eyebolt. ▷ Observe the information about weights, centre of gravity and fastening points. ▷ Observe the applicable local accident prevention regulations. ▷ Use suitable, permitted lifting accessories, e.g. self-tightening lifting tongs.
-----------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

To transport the pump/pump set or back pull-out unit suspend it from the lifting tackle as shown.

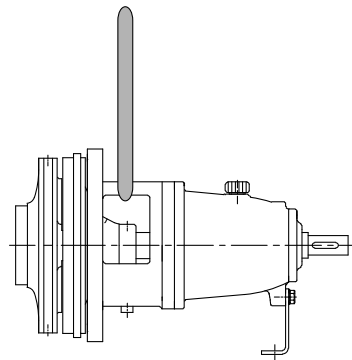


Fig. 1: Transporting the back pull-out unit

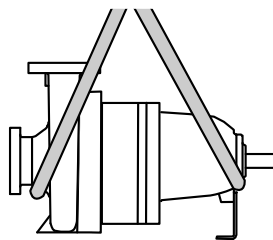


Fig. 2: Transporting the pump

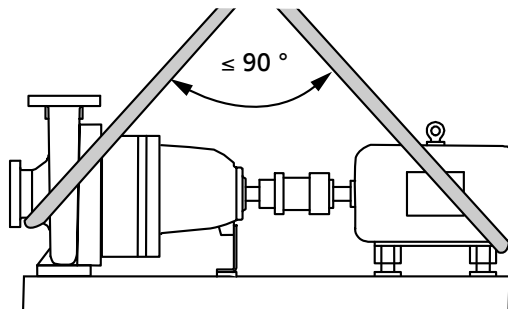


Fig. 3: Transporting the pump set

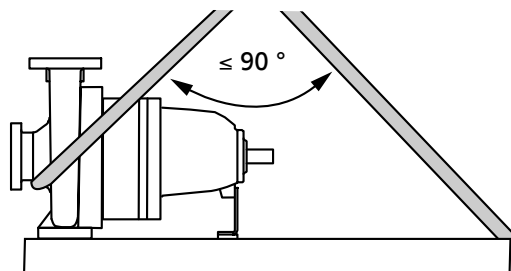




Fig. 4: Transporting the pump on the baseplate

3.3 Storage/preservation

	CAUTION Damage during storage due to humidity, dirt or vermin Corrosion/contamination of the pump (set)! <p>▷ For outdoor storage cover the pump (set) or the packaged pump (set) and accessories with waterproof material.</p>
	CAUTION Wet, contaminated or damaged openings and connections Leakage or damage to the pump! <p>▷ Clean and cover pump openings and connections as required prior to putting the pump into storage.</p>

If commissioning is to take place some time after delivery, we recommend that the following measures be taken for pump (set) storage.

- Store the pump (set) in a dry, protected room where the atmospheric humidity is as constant as possible.
- Rotate the shaft by hand once a month, e.g. via the motor fan.

If properly stored indoors, the pump set is protected for a maximum of 12 months. New pumps/pump sets are supplied by our factory duly prepared for storage.



For storing a pump (set) which has already been operated, the shutdown measures must be adhered to. (⇒ Section 6.3.1, Page 45)

3.4 Return to supplier

1. Drain the pump as per operating instructions. (⇒ Section 7.3, Page 54)
2. Flush and clean the pump, particularly if it has been used for handling noxious, explosive, hot or other hazardous fluids.
3. If the pump has handled fluids whose residues could lead to corrosion damage in the presence of atmospheric humidity or could ignite upon contact with oxygen also neutralise the pump and blow through with anhydrous inert gas to ensure drying.
4. Always complete and enclose a certificate of decontamination when returning the pump.
Indicate any safety measures and decontamination measures taken.
(⇒ Section 11, Page 76)

	NOTE If required, a blank certificate of decontamination can be downloaded from the following web site: www.ksb.com/certificate_of_decontamination
-------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

3.5 Disposal

	<div data-bbox="507 232 703 280"> WARNING</div> <p data-bbox="496 297 1378 356">Fluids handled, consumables and supplies which are hot and/or pose a health hazard</p> <p data-bbox="496 365 956 394">Hazard to persons and the environment!</p> <ul data-bbox="518 405 1414 515" style="list-style-type: none">▸ Collect and properly dispose of flushing fluid and any fluid residues.▸ Wear safety clothing and a protective mask if required.▸ Observe all legal regulations on the disposal of fluids posing a health hazard.
-----------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

1. Dismantle the pump (set).
Collect greases and other lubricants during dismantling.
2. Separate and sort the pump materials, e.g. by:
 - Metals
 - Plastics
 - Electronic waste
 - Greases and other lubricants
3. Dispose of materials in accordance with local regulations or in another controlled manner.

4 Description of the Pump (Set)

4.1 General description

- Standardised chemical pump with shaft seal
- Pump for handling aggressive liquids in the chemical and petrochemical industries

4.2 Product information as per Regulation No. 1907/2006 (REACH)

For information as per chemicals Regulation (EC) No. 1907/2006 (REACH), see <https://www.ksb.com/ksb-en/About-KSB/Corporate-responsibility/reach/>.

4.3 Designation

Example: CPKN - C1 F 40-160

Table 5: Key to the designation

Code	Description
CPKN	Type series
C1	Casing material, e.g. C1 = stainless steel
F	Additional code, e.g. F = off-standard flange design
40	Nominal discharge nozzle diameter [mm]
160	Nominal impeller diameter [mm]

4.4 Name plate

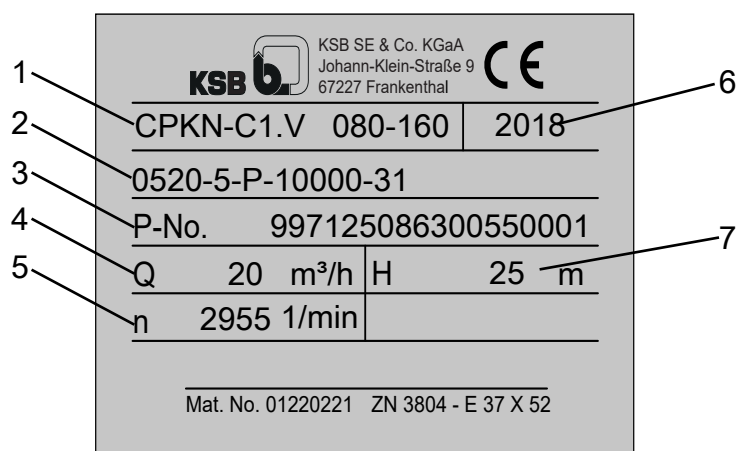


Fig. 5: Name plate (example)

1	Type series, size (⇒ Section 4.3, Page 16)	2	Customer-specific information (optional)
3	KSB order and order item number	4	Flow rate
5	Speed	6	Year of construction
7	Head		

4.5 Design details

Design

- Volute casing pump
- Horizontal installation
- Back pull-out design

- Single-stage
- Technical requirements to ISO 5199
- Dimensions and ratings to ISO 2858 complemented by pumps of nominal sizes DN 25, DN 200 and above

Pump casing

- Single or double volute, depending on the pump size
- Radially split volute casing
- Volute casing with integrally cast pump feet
- Volute casing (with casing wear ring, if applicable) and casing cover

Impeller type

- Closed radial impeller with multiply curved vanes
- Back vanes reduce axial thrust.

Shaft seal

- Gland packing
- Single mechanical seal / double mechanical seal

Preferred:

- Standardised mechanical seals to EN 12756, K design



NOTE

Conversion from gland packing to mechanical seal and vice versa is possible without any rework on the casing by using the relevant replacement parts.



Possible:



- Cartridge seal

Alternative:

- Version without shaft protecting sleeve with "wet shaft"

Table 6: Seal chamber with different shaft seals (examples)

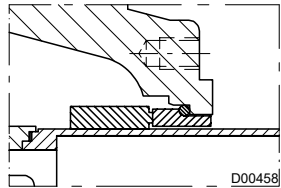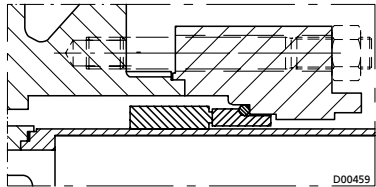Type of seal	Drawing
Conical seal chamber (A-type cover) Standardised mechanical seal	
Cylindrical seal chamber Standardised mechanical seal	

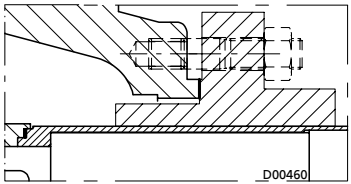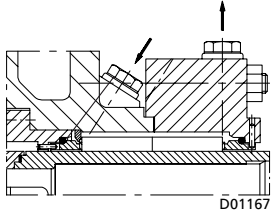Type of seal	Drawing
Cartridge seal	
Double mechanical seal (back-to-back), both sides unbalanced	

Bearings

Drive-end bearing:

- Fixed bearing
- Paired angular contact ball bearings
- Axial movement of the rotor limited to 0.5 mm maximum
- Oil lubrication
- **Optional:** grease lubrication

Pump-end bearing:

- Radial bearing
- Cylindrical roller bearing
- Absorbs radial loads only
- Oil lubrication
- **Optional:** grease lubrication

Bearing bracket designation Example: UP03

Table 7: Bearing bracket designation

Designation	Description
UP	Bearing bracket
03	Size code (based on dimensions of seal chamber and shaft end)

Bearings used Table 8: Bearing design

KSB designation	FAG designation	SKF designation
B.G	B-TVP-UA	BECBP
B.G 8	B-TVP-UA 80	BEC86P

Table 9: Standard bearings

Bearing bracket	Rolling element bearings	
	Pump end	Drive end
UP02	NU307	2 x 7307 B.G
UP03	NU311	2 x 7311 B.G.8
UP04	NU311	2 x 7311 B.G.8
UP05	NU313	2 x 7313 B.G.8
UP06	NU416	2 x 7319 B.G
P08s	NU416	2 x 7319 B.G

2730.807/01-EN

4.6 Design and function

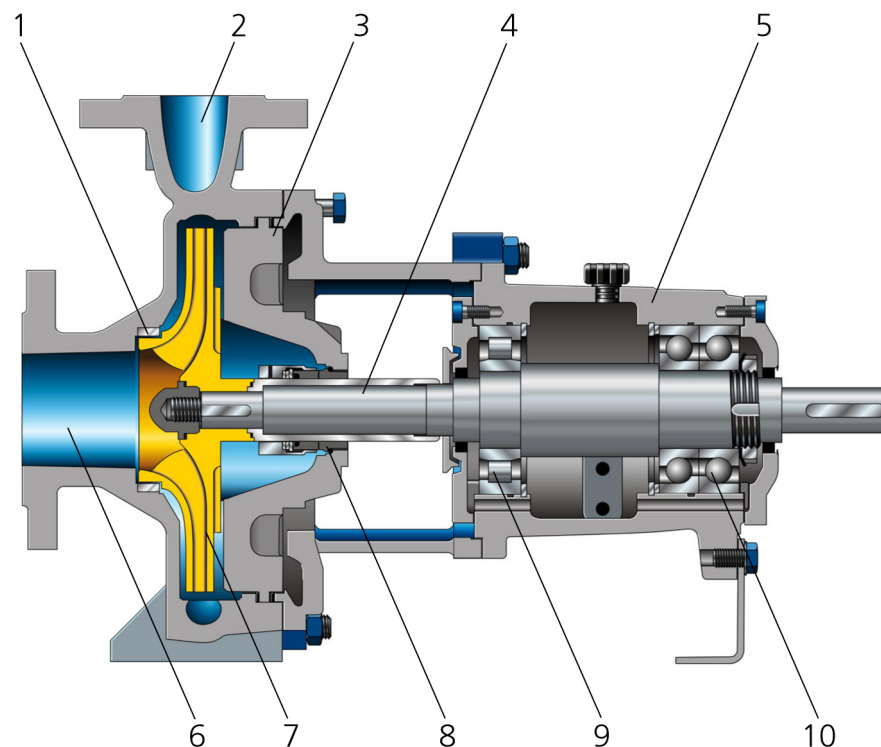


Fig. 6: Sectional drawing

1	Clearance gap	2	Discharge nozzle
3	Casing cover	4	Shaft
5	Bearing bracket	6	Suction nozzle
7	Impeller	8	Shaft seal
9	Rolling element bearing, pump end	10	Rolling element bearing, drive end

Design The pump is designed with an axial fluid inlet and a radial or tangential outlet. The hydraulic system runs in its own bearings and is connected to the motor by a shaft coupling.

Function The fluid enters the pump axially via the suction nozzle (6) and is accelerated outward by the rotating impeller (7). In the flow passage of the pump casing the kinetic energy of the fluid is converted into pressure energy. The fluid is pumped to the discharge nozzle (2), where it leaves the pump. The clearance gap (1) prevents any fluid from flowing back from the casing to the suction nozzle. At the rear side of the impeller, the shaft (4) enters the casing via the casing cover (3). The shaft passage through the cover is sealed to atmosphere with a shaft seal (8). The shaft runs in rolling element bearings (9 and 10), which are supported by a bearing bracket (5) linked with the pump casing and/or casing cover.

Sealing The pump is sealed by a shaft seal (standardised mechanical seal or gland packing).

4.7 Noise characteristics

Table 10: Surface sound pressure level L_{pA} ^{4) 5)}

P_N	Pump			Pump set		
	960 rpm, 760 rpm	1450 rpm	2900 rpm	960 rpm, 760 rpm	1450 rpm	2900 rpm
[kW]	[dB]	[dB]	[dB]	[dB]	[dB]	[dB]
1,5	52	53	54	56	58	63
2,2	53	55	56	58	60	66
3	55	56	57	60	62	68
4	56	58	59	61	63	69
5,5	58	59	61	62	65	71
7,5	59	61	62	64	66	72
11	61	63	64	65	68	74
15	63	65	66	67	69	75
18,5	64	66	67	68	70	76
22	65	67	68	68	71	77
30	66	68	70	70	72	78
37	67	70	71	70	73	79
45	68	71	72	71	74	80
55	69	72	73	72	74	80
75	71	73	75	73	76	81
90	71	74	76	73	76	82
110	72	75	77	74	77	82
132	73	76	78	75	77	83
160	74	77	79	75	78	84
200	75	78	80	76	79	84
250	-	79	81	-	80	85

4.8 Scope of supply

Depending on the model, the following items are included in the scope of supply:

- Pump

Drive

- Surface-cooled IEC frame three-phase squirrel-cage motor

Coupling

- Flexible coupling with or without spacer

Contact guard

- Coupling guard
- Baseplate (to ISO 3661), cast or welded, for pump and motor, in torsion-resistant design
- Channel section steel or folded steel plate

Special accessories

- As required

⁴ Surface sound pressure level as per ISO 3744 and DIN EN ISO 20361 ; valid for a pump operating range of $Q/Q_{BEP} = 0.8 - 1.1$ and non-cavitating operation. If noise levels are to be guaranteed: Add +3 dB for measuring and constructional tolerance.



⁵ Increase for 60 Hz operation: 3500 rpm +3 dB; 1750 rpm +1 dB; 1160 rpm ± 0 dB

4.9 Dimensions and weights

For dimensions and weights refer to the general arrangement drawing/outline drawing of the pump/pump set.


5 Installation at Site

5.1 Safety regulations

	<div style="background-color: #f4a460; padding: 5px;">⚠ DANGER</div> <p>Excessive temperatures in the shaft seal area Explosion hazard!</p> <ul style="list-style-type: none"> ▶ Never operate a pump (set) with gland packing in potentially explosive atmospheres.
	<div style="background-color: #0070c0; color: white; padding: 5px;">NOTE</div> <p>Operating pump sets with gland packings in combination with a frequency inverter / variable speed system is not recommended.</p>

5.2 Checks to be carried out prior to installation



Place of installation

	<div style="background-color: #f4a460; padding: 5px;">⚠ WARNING</div> <p>Installation on a mounting surface which is unsecured and cannot support the load Personal injury and damage to property!</p> <ul style="list-style-type: none"> ▶ Use a concrete of compressive strength class C12/15 which meets the requirements of exposure class XC1 to EN 206-1. ▶ The mounting surface must be set, flat, and level. ▶ Check the indicated weights.
------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

1. Check the structural requirements.
All structural work required must have been prepared in accordance with the dimensions stated in the outline drawing/general arrangement drawing.

5.3 Installing the pump set

Always install the pump set in a horizontal position.

	<div style="background-color: #f4a460; padding: 5px;">⚠ DANGER</div> <p>Excessive temperatures due to improper installation Explosion hazard!</p> <ul style="list-style-type: none"> ▶ Install the pump in a horizontal position to ensure self-venting of the pump.
	<div style="background-color: #f4a460; padding: 5px;">⚠ DANGER</div> <p>Electrostatic charging due to insufficient potential equalisation Explosion hazard!</p> <ul style="list-style-type: none"> ▶ Make sure that the connection between pump and baseplate is electrically conductive.

5.3.1 Installation on the foundation

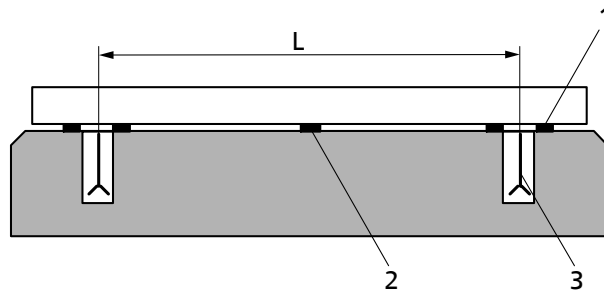


Fig. 7: Fitting the shims

L	Bolt-to-bolt distance	1	Shim
2	Shim if (L) > 800 mm	3	Foundation bolt

- ✓ The foundation has the required strength and characteristics.
 - ✓ The foundation has been prepared in accordance with the dimensions given in the outline drawing/general arrangement drawing.
1. Position the pump set on the foundation and level it with the help of a spirit level placed on the shaft and discharge nozzle.
Permissible deviation: 0.2 mm/m
 2. Use shims (1) for height compensation if necessary.
Always fit shims, if any, immediately to the left and right of the foundation bolts (3) between the baseplate/foundation frame and the foundation.
For a bolt-to-bolt distance (L) > 800 mm fit additional shims (2) halfway between the bolt holes.
All shims must lie perfectly flush.
 3. Insert the foundation bolts (3) into the holes provided.
 4. Use concrete to set the foundation bolts (3) into the foundation.
 5. Wait until the concrete has set firmly, then level the baseplate.
 6. Tighten the foundation bolts (3) evenly and firmly.
 7. Grout the baseplate using low-shrinkage concrete with a standard particle size and a water/cement ratio of ≤ 0.5 .
Produce flowability with the help of a solvent.
Perform secondary treatment of the concrete to EN 206.



NOTE

For low-noise operation contact the manufacturer to check whether the pump set can be installed on anti-vibration mounts.



NOTE

Expansion joints can be fitted between the pump and the suction line or discharge line.

5.3.2 Installation without foundation

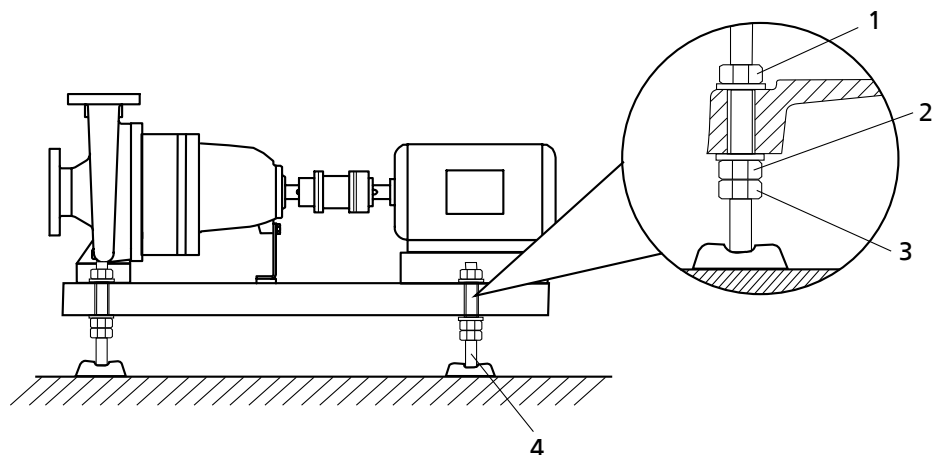


Fig. 8: Adjusting the levelling elements

1, 3	Locknut	2	Adjusting nut
4	Machine mount		

- ✓ The installation surface has the required strength and characteristics.
- 1. Position the pump set on the machine mounts (4) and align it with the help of a spirit level (on the shaft/discharge nozzle).
- 2. To adjust any differences in height, loosen the locknuts (1, 3) of the machine mounts (4).
- 3. Turn the adjusting nut (2) until any differences in height have been compensated.
- 4. Re-tighten the locknuts (1, 3) at the machine mounts (4).

5.4 Piping

5.4.1 Connecting the piping

	<div style="background-color: #f4a460; padding: 5px;">⚠ DANGER</div> <p>Impermissible loads acting on the pump nozzles Danger to life from escaping hot, toxic, corrosive or flammable fluids!</p> <ul style="list-style-type: none"> ▷ Do not use the pump as an anchorage point for the piping. ▷ Anchor the pipes in close proximity to the pump and connect them properly without transmitting any stresses or strains. ▷ Observe the permissible forces and moments at the pump nozzles. (⇒ Section 5.4.2, Page 26) ▷ Take appropriate measures to compensate for thermal expansion of the piping.
	<div style="background-color: #f4d03f; padding: 5px;">CAUTION</div> <p>Incorrect earthing during welding work at the piping Destruction of rolling element bearings (pitting effect)!</p> <ul style="list-style-type: none"> ▷ Never earth the electric welding equipment on the pump or baseplate. ▷ Prevent current flowing through the rolling element bearings.



NOTE

Installing check and shut-off elements in the system is recommended, depending on the type of plant and pump. However, such elements must not obstruct proper drainage or hinder disassembly of the pump.

- ✓ Suction lift lines have been laid with a rising slope, suction head lines with a downward slope towards the pump.
- ✓ A flow stabilisation section having a length equivalent to at least twice the diameter of the suction flange has been provided upstream of the suction flange.
- ✓ The nominal diameters of the pipelines are at least equal to the nominal diameters of the pump nozzles.
- ✓ Adapters to larger diameters have a diffuser angle of approximately 8° to prevent excessive pressure losses.
- ✓ The pipelines have been anchored in close proximity to the pump and connected without transmitting any stresses or strains.



CAUTION

Welding beads, scale and other impurities in the piping

Damage to the pump!

- ▷ Remove any impurities from the piping.
- ▷ If necessary, install a filter.
- ▷ Observe the information in (⇒ Section 7.2.2.3, Page 51) .

1. Thoroughly clean, flush and blow through all vessels, pipelines and connections (especially of new installations).
2. Before installing the pump in the piping, remove the flange covers on the suction and discharge nozzles of the pump.
3. Check that the inside of the pump is free from any foreign objects. Remove any foreign objects.
4. If required, install a filter in the piping (see figure: Filter in the piping).

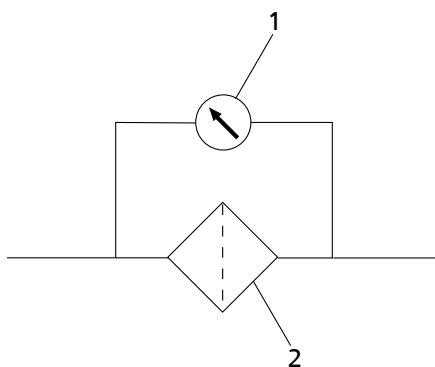


Fig. 9: Filter in the piping

1	Differential pressure gauge	2	Filter
---	-----------------------------	---	--------



NOTE

Use a filter with laid-in wire mesh (mesh width 0.5 mm, wire diameter 0.25 mm) of corrosion-resistant material.
Use a filter with a filter area three times the cross-section of the piping.
Conical filters have proved suitable.

5. Connect the pump nozzles to the piping.




CAUTION

Aggressive flushing liquid and pickling agent

Damage to the pump!

- ▷ Match the cleaning operation mode and duration of flushing and pickling to the casing materials and seal materials used.

5.4.2 Permissible forces and moments at the pump nozzles

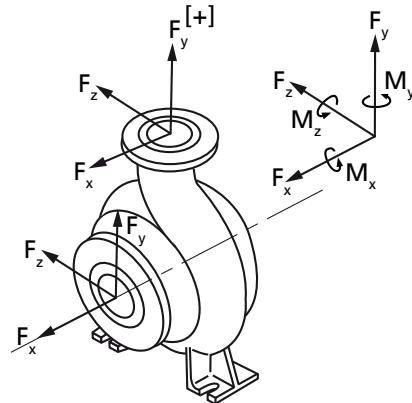

The permissible resultant forces have been determined according to:

$$F_{res D} \leq \sqrt{F_x^2 + F_z^2}$$

$$F_{res S} \leq \sqrt{F_y^2 + F_z^2}$$

Forces and moments at the pump nozzles

The data on forces and moments apply to static piping loads only. If the limits are exceeded, they must be checked and verified.

If a computerised strength analysis is required, values are available on request only.

The values are only applicable if the pump is installed on a completely grouted baseplate and bolted to a rigid and level foundation.

Table 11: Forces and moments at the pump nozzles

Sizes	Suction nozzle [N]				Discharge nozzle [N]					Suction nozzle [Nm]			Discharge nozzle [Nm]		
	F _x	F _y	F _z	F _{res}	F _x	F _{yTens} ⁺	F _{yCompr} ⁻	F _z	F _{res}	M _x	M _y	M _z	M _x	M _y	M _z
25-160	1050	700	850	1100	500	350	650	450	700	550	450	300	400	300	200
25-200	1050	700	850	1100	500	350	650	450	700	550	450	300	400	300	200
32-125	1350	900	1100	1400	700	450	850	550	900	700	550	350	450	350	250
32-160	1350	900	1100	1400	700	450	850	550	900	700	550	350	450	350	250
32-200	1350	900	1100	1400	700	450	850	550	900	700	550	350	450	350	250
32-250	1350	900	1100	1400	700	450	850	550	900	700	550	350	450	350	250
40-160	1750	1150	1400	1800	850	550	1100	700	1100	1150	850	600	550	450	300
40-200	1750	1150	1400	1800	850	550	1100	700	1100	1150	850	600	550	450	300
40-250	1750	1150	1400	1800	850	550	1100	700	1100	1150	850	600	550	450	300
40-315	1750	1150	1400	1800	850	550	1100	700	1100	1150	850	600	550	450	300
50-160	2150	1400	1700	2200	1100	700	1350	900	1400	1450	1100	750	700	550	350
50-200	2150	1400	1700	2200	1100	700	1350	900	1400	1450	1100	750	700	550	350
50-250	2150	1400	1700	2200	1100	700	1350	900	1400	1450	1100	750	700	550	350
50-315	2150	1400	1700	2200	1100	700	1350	900	1400	1450	1100	750	700	550	350
65-160	2700	1750	2150	2750	1400	900	1750	1150	1800	2000	1500	1000	1150	850	600
65-200	2700	1750	2150	2750	1400	900	1750	1150	1800	2000	1500	1000	1150	850	600
65-250	2700	1750	2150	2750	1400	900	1750	1150	1800	2000	1500	1000	1150	850	600
65-315	2700	1750	2150	2750	1400	900	1750	1150	1800	2000	1500	1000	1150	850	600
80-160	3700	2400	2950	3800	1700	1100	2150	1400	2200	2750	2100	1400	1450	1100	750
80-200	3700	2400	2950	3800	1700	1100	2150	1400	2200	2750	2100	1400	1450	1100	750
80-250	3700	2400	2950	3800	1700	1100	2150	1400	2200	2750	2100	1400	1450	1100	750

Sizes	Suction nozzle [N]				Discharge nozzle [N]					Suction nozzle [Nm]			Discharge nozzle [Nm]		
	F _x	F _y	F _z	F _{res}	F _x	F _{yTens} ⁺	F _{yCompr} ⁻	F _z	F _{res}	M _x	M _y	M _z	M _x	M _y	M _z
80-315	3700	2400	2950	3800	1700	1100	2150	1400	2200	2750	2100	1400	1450	1100	750
80-400	3700	2400	2950	3800	1700	1100	2150	1400	2200	2750	2100	1400	1450	1100	750
100-200	3700	2400	2950	3800	2150	1350	2700	1750	2800	2750	2100	1400	2000	1500	1000
100-250	3700	2400	2950	3800	2150	1350	2700	1750	2800	2750	2100	1400	2000	1500	1000
100-315	3700	2400	2950	3800	2150	1350	2700	1750	2800	2750	2100	1400	2000	1500	1000
100-400	3700	2400	2950	3800	2150	1350	2700	1750	2800	2750	2100	1400	2000	1500	1000
125-250	4700	3100	3750	4750	2950	1850	3700	2400	3800	3450	2650	1750	2750	2100	1400
125-315	4700	3100	3750	4750	2950	1850	3700	2400	3800	3450	2650	1750	2750	2100	1400
125-400	4700	3100	3750	4750	2950	1850	3700	2400	3800	3450	2650	1750	2750	2100	1400
150-250	7350	4700	5700	7400	3750	2350	4700	3100	4850	5300	3850	2650	3450	2650	1750
150-315	7350	4700	5700	7400	3750	2350	4700	3100	4850	5300	3850	2650	3450	2650	1750
150-400	7350	4700	5700	7400	3750	2350	4700	3100	4850	5300	3850	2650	3450	2650	1750
150-500	7350	4700	5700	7400	3750	2350	4700	3100	4850	5300	3850	2650	3450	2650	1750
200-250	7350	4700	5700	7400	5700	3550	7350	4700	7400	5300	3850	2650	5300	3850	2650
200-315	10000	6700	8000	10450	5700	3550	7350	4700	7400	7500	5700	3650	5300	3850	2650
200-400	10000	6700	8000	10450	5700	3550	7350	4700	7400	7500	5700	3650	5300	3850	2650
200-500	10000	6700	8000	10450	5700	3550	7350	4700	7400	7500	5700	3650	5300	3850	2650
250-315	12000	8000	10000	12800	8000	5000	10000	6700	10450	9150	6900	4500	7500	5700	3650
250-400	12000	8000	10000	12800	8000	5000	10000	6700	10450	9150	6900	4500	7500	5700	3650
250-500	12000	8000	10000	12800	8000	5000	10000	6700	10450	9150	6900	4500	7500	5700	3650
300-400	13350	8700	10700	13800	10000	6150	12000	8000	12800	9550	7150	4700	9150	6900	4500
300-500	13350	8700	10700	13800	10000	6150	12000	8000	12800	9550	7150	4700	9150	6900	4500
350-400	13350	8700	10700	13800	10700	6700	13350	8700	13800	9550	7150	4700	9550	7150	4700
350-500	13350	8700	10700	13800	10700	6700	13350	8700	13800	9550	7150	4700	9550	7150	4700

Correction coefficients depending on material and temperature (see diagram below).

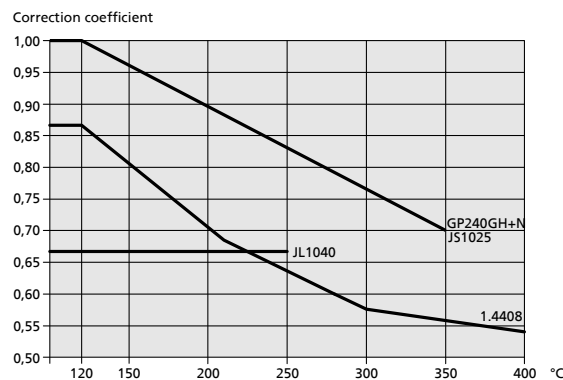











Fig. 10: Temperature correction diagram

5.4.3 Auxiliary connections




	<div style="background-color: #f4a460; padding: 5px; margin-bottom: 10px;"> <p>⚠ DANGER</p> </div> <p>Risk of potentially explosive atmosphere by incompatible fluids mixing in the auxiliary piping</p> <p>Risk of burns!</p> <p>Explosion hazard!</p> <p>► Make sure that the barrier fluid or quench liquid are compatible with the fluid handled.</p>
-------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------


	 WARNING
	<p>Failure to use or incorrect use of auxiliary connections (e.g. barrier fluid, flushing liquid, etc.)</p> <p>Risk of injury from escaping fluid!</p> <p>Risk of burns!</p> <p>Malfunction of the pump!</p> <ul style="list-style-type: none"> ▷ Refer to the general arrangement drawing, the piping layout and pump markings (if any) for the quantity, dimensions and locations of auxiliary connections. ▷ Use the auxiliary connections provided.

5.5 Enclosure/insulation

	 DANGER
	<p>Risk of potentially explosive atmosphere due to insufficient venting</p> <p>Explosion hazard!</p> <ul style="list-style-type: none"> ▷ Make sure the space between the casing cover/discharge cover and the bearing cover is sufficiently vented. ▷ Never close or cover the perforation of the bearing bracket guards (e.g. by insulation).
	 WARNING
	<p>The volute casing and casing/discharge cover take on the same temperature as the fluid handled</p> <p>Risk of burns!</p> <ul style="list-style-type: none"> ▷ Insulate the volute casing. ▷ Fit protective equipment.
	CAUTION
	<p>Heat build-up in the bearing bracket</p> <p>Damage to the bearing!</p> <ul style="list-style-type: none"> ▷ Never insulate the bearing bracket, bearing bracket lantern and casing cover.
	NOTE
	<p>Pump casings handling fluids at temperatures below freezing point may be insulated at the site, subject to the manufacturer's prior approval.</p>

5.6 Checking the coupling alignment

 	 DANGER
	<p>Inadmissible temperatures at the coupling or bearings due to misalignment of the coupling</p> <p>Explosion hazard!</p> <p>Risk of burns!</p> <ul style="list-style-type: none"> ▷ Make sure that the coupling is correctly aligned at all times.

	CAUTION
	<p>Misalignment of pump and motor shafts Damage to pump, motor and coupling!</p> <ul style="list-style-type: none"> ▸ Always check the coupling after the pump has been installed and connected to the piping. ▸ Also check the coupling of pump sets supplied with pump and motor mounted on the same baseplate.

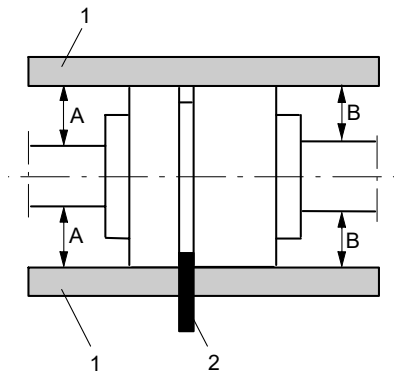


Fig. 11: Non-spacer-type coupling, checking the coupling alignment

1	Straight edge	2	Gauge
---	---------------	---	-------

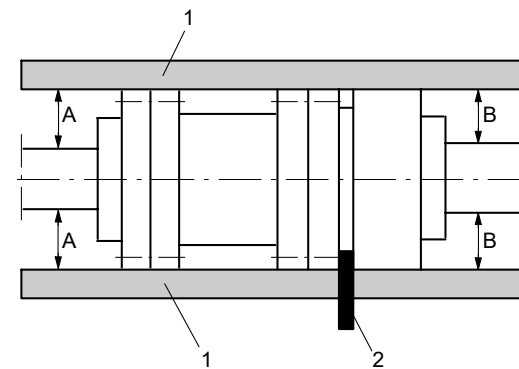


Fig. 12: Spacer-type coupling, checking the coupling alignment

1	Straight edge	2	Gauge
---	---------------	---	-------

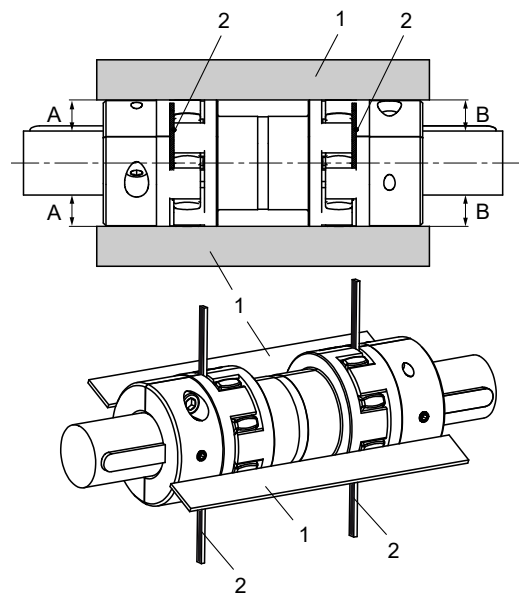


Fig. 13: Double Cardan spacer-type coupling, checking the coupling alignment

1	Straight edge	2	Gauge
---	---------------	---	-------

Table 12: Permissible alignment offset of coupling halves

Coupling type	Radial offset	Axial offset
	[mm]	[mm]
Non-spacer-type coupling (⇒ Fig. 11)	≤ 0,1	≤ 0,1
Spacer-type coupling (⇒ Fig. 12)	≤ 0,1	≤ 0,1
Double Cardan coupling (⇒ Fig. 13)	≤ 0,5	≤ 0,5

- ✓ The coupling guard and its footboard, if any, have been removed.
- 1. Loosen the support foot and re-tighten it without transmitting any stresses and strains.
- 2. Place the straight edge axially on both coupling halves.
- 3. Leave the straight edge in this position and turn the coupling by hand.
The coupling is aligned correctly if the distances A and B to the respective shafts are the same at all points around the circumference.
Observe the permissible radial offset in coupling half alignment (⇒ Table 12) both during standstill and at operating temperature as well as under inlet pressure.
- 4. Check the distance (dimension see general arrangement drawing) between the two coupling halves around the circumference.
The coupling is correctly aligned if the distance between the two coupling halves is the same at all points around the circumference.
Observe the permissible axial offset in coupling half alignment (⇒ Table 12) both during standstill and at operating temperature as well as under inlet pressure.
- 5. If alignment is correct, re-install the coupling guard and its footboard, if any.

Checking the coupling alignment with a laser tool

Coupling alignment may also be checked with a laser tool. Observe the documentation provided by the manufacturer of the measuring instrument.

5.7 Aligning the pump and motor

After having installed the pump set and connected the piping, check the coupling alignment and, if required, re-align the pump set (at the motor).

5.7.1 Motors with adjusting screw

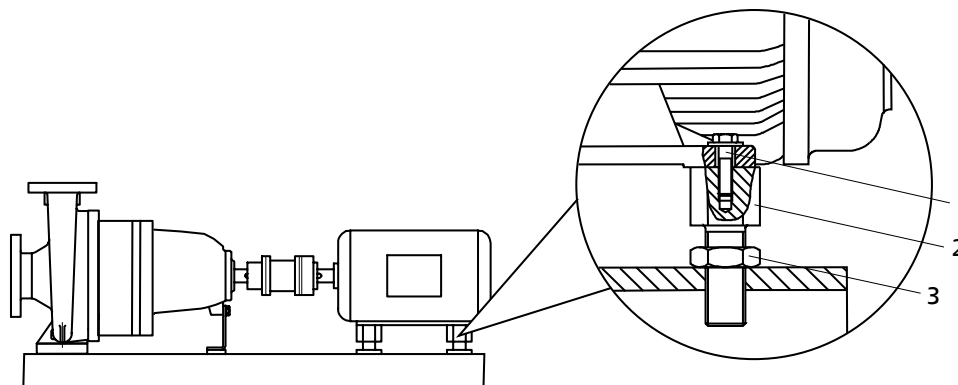


Fig. 14: Motor with adjusting screw

1	Hexagon head bolt	2	Adjusting screw
3	Locknut		

- ✓ The coupling guard and its footboard, if any, have been removed.
1. Check the coupling alignment.
 2. Unscrew the hexagon head bolts (1) at the motor and the locknuts (3) at the baseplate.
 3. Turn the adjusting screws (2) by hand or by means of an open-end wrench until the coupling alignment is correct and all motor feet rest squarely on the baseplate.
 4. Re-tighten the hexagon head bolts (1) at the motor and the locknuts (3) at the baseplate.
 5. Check proper functioning of coupling/shaft.
Check that coupling/shaft can easily be rotated by hand.

	<p>⚠ WARNING</p> <p>Unprotected rotating coupling Risk of injury by rotating shafts!</p> <ul style="list-style-type: none"> ▷ Always operate the pump set with a coupling guard. If the customer specifically requests not to include a coupling guard in KSB's delivery, then the operator must supply one! ▷ Observe all relevant regulations for selecting a coupling guard.
	<p>⚠ DANGER</p> <p>Risk of ignition by frictional sparks Explosion hazard!!</p> <ul style="list-style-type: none"> ▷ Choose a coupling guard material that is non-sparking in the event of mechanical contact.

6. Fit the coupling guard and its footboard, if any.
7. Check the distance between coupling and coupling guard.
The coupling guard must not touch the coupling.

5.7.2 Motors without adjusting screw

Any differences in the centreline heights of the pump and motor shafts are compensated by means of shims.

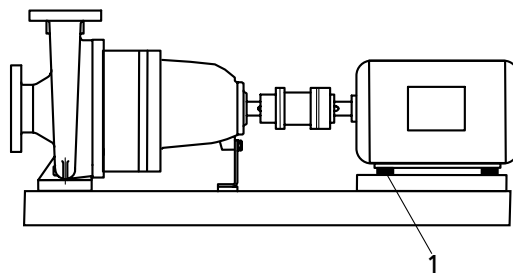


Fig. 15: Pump set with shim

1 Shim



- ✓ The coupling guard and its footboard, if any, have been removed.
 1. Check the coupling alignment.
 2. Loosen the hexagon head bolts at the motor.
 3. Insert shims underneath the motor feet until the difference in shaft centreline height has been compensated.
 4. Re-tighten the hexagon head bolts.
 5. Check proper functioning of coupling/shaft.
Check that coupling/shaft can easily be rotated by hand.

	<p>! WARNING</p> <p>Unprotected rotating coupling Risk of injury by rotating shafts!</p> <ul style="list-style-type: none"> ▷ Always operate the pump set with a coupling guard. If the customer specifically requests not to include a coupling guard in KSB's delivery, then the operator must supply one! ▷ Observe all relevant regulations for selecting a coupling guard.
	<p>! DANGER</p> <p>Risk of ignition by frictional sparks Explosion hazard!!</p> <ul style="list-style-type: none"> ▷ Choose a coupling guard material that is non-sparking in the event of mechanical contact.


6. Fit the coupling guard and its footboard, if any.
7. Check the distance between coupling and coupling guard.
The coupling guard must not touch the coupling.

5.8 Electrical connection

	<p>! DANGER</p> <p>Electrical connection work by unqualified personnel Risk of fatal injury due to electric shock!</p> <ul style="list-style-type: none"> ▷ Always have the electrical connections installed by a trained and qualified electrician. ▷ Observe regulations IEC 60364 and, for explosion-proof models, EN 60079.
--	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

	 WARNING
	<p>Incorrect connection to the mains Damage to the power supply network, short circuit!</p> <p>▷ Observe the technical specifications of the local energy supply companies.</p>

1. Check the available mains voltage against the data on the motor name plate.
2. Select an appropriate starting method.

	NOTE
	<p>Installing a motor protection device is recommended.</p>

5.8.1 Setting the time relay





	CAUTION
	<p>Switchover between star and delta on three-phase motors with star-delta starting takes too long. Damage to the pump (set)!</p> <p>▷ Keep switch-over intervals between star and delta as short as possible.</p>


Table 13: Time relay settings for star-delta starting:

Motor rating	Y time to be set
[kW]	[s]
≤ 30	< 3
> 30	< 5

5.8.2 Earthing







 	 DANGER
	<p>Electrostatic charging Explosion hazard! Damage to the pump set!</p> <p>▷ Connect the PE conductor to the earthing terminal provided. ▷ Provide for potential equalisation between the pump set and the foundation.</p>

5.8.3 Connecting the motor

	NOTE
	<p>In compliance with IEC 60034-8, three-phase motors are always wired for clockwise rotation (looking at the motor shaft stub). The pump's direction of rotation is indicated by an arrow on the pump.</p>

1. Match the motor's direction of rotation to that of the pump.
2. Observe the manufacturer's product literature supplied with the motor.

5.9 Checking the direction of rotation

	<div data-bbox="507 235 683 280"> DANGER</div> <p>Temperature increase resulting from contact between rotating and stationary components Explosion hazard! Damage to the pump set!</p> <ul style="list-style-type: none"> ▷ Never check the direction of rotation by starting up the unfilled pump set. ▷ Separate the pump from the motor to check the direction of rotation.
	<div data-bbox="507 548 702 593"> WARNING</div> <p>Hands inside the pump casing Risk of injuries, damage to the pump!</p> <ul style="list-style-type: none"> ▷ Always disconnect the pump set from the power supply and secure it against unintentional start-up before inserting your hands or other objects into the pump.
	<div data-bbox="507 817 638 851">CAUTION</div> <p>Incorrect direction of rotation with non-reversible mechanical seal Damage to the mechanical seal and leakage!</p> <ul style="list-style-type: none"> ▷ Separate the pump from the motor to check the direction of rotation.
	<div data-bbox="507 1019 638 1052">CAUTION</div> <p>Drive and pump running in the wrong direction of rotation Damage to the pump!</p> <ul style="list-style-type: none"> ▷ Refer to the arrow indicating the direction of rotation on the pump. ▷ Check the direction of rotation. If required, check the electrical connection and correct the direction of rotation.

The correct direction of rotation of the motor and pump is clockwise (seen from the drive end).

1. Start the motor and stop it again immediately to determine the motor's direction of rotation.
2. Check the direction of rotation.
The motor's direction of rotation must match the arrow indicating the direction of rotation on the pump.
3. If the motor is running in the wrong direction of rotation, check the electrical connection of the motor and switchgear, if any.

6 Commissioning/Start-up/Shutdown

6.1 Commissioning/Start-up

6.1.1 Prerequisites for commissioning/start-up

Before commissioning/starting up the pump set, make sure that the following conditions are met:

- The pump set has been mechanically connected as specified.
- The pump set has been properly connected to the power supply and is equipped with all protection devices. (⇒ Section 5.8, Page 32)
- The pump has been primed with the fluid to be handled. The pump has been vented. (⇒ Section 6.1.4, Page 37)
- The direction of rotation has been checked. (⇒ Section 5.9, Page 34)
- All auxiliary connections required are connected and operational.
- The lubricants have been checked.
- After prolonged shutdown of the pump (set), the activities required for returning the equipment to service have been carried out. (⇒ Section 6.4, Page 45)



6.1.2 Filling in lubricants

Grease-lubricated bearings Grease-lubricated bearings have been packed with grease at the factory.

Oil-lubricated bearings Fill the bearing bracket with lubricating oil.
Oil quality see (⇒ Section 7.2.3.1.2, Page 51)
Oil quantity see (⇒ Section 7.2.3.1.3, Page 52)

Filling the constant level oiler with lubricating oil (oil-lubricated bearings only)

- ✓ The constant level oiler is screwed into the upper tapping hole of the bearing bracket.

	<p>NOTE</p> <p>If no constant level oiler is provided on the bearing bracket, the oil level can be read in the middle of the oil level gauge arranged at the side of the bearing bracket.</p>
	<p>CAUTION</p> <p>Insufficient quantity of lubricating oil in the reservoir of the constant level oiler Damage to the bearings!</p> <ul style="list-style-type: none"> ▷ Regularly check the oil level. ▷ Always fill the oil reservoir completely.

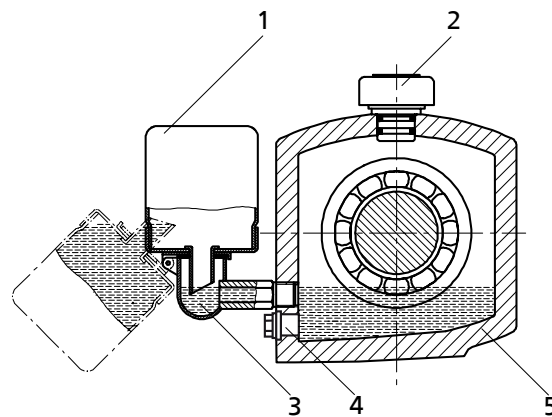


Fig. 16: Bearing bracket with constant level oiler

1	Constant level oiler	2	Vent plug
3	Connection elbow of the constant level oiler	4	Screw plug
5	Bearing bracket		

1. Pull out the vent plug (2).
2. Hinge down the reservoir of the constant level oiler (1) from the bearing bracket (5) and hold it in this position.
3. Fill in oil through the hole for the vent plug until the oil reaches the connection elbow of the constant level oiler (3).
4. Completely fill the reservoir of the constant level oiler (1).
5. Snap the constant level oiler (1) back into its operating position.
6. Fit the vent plug (2) again.
7. After approximately 5 minutes, check the oil level in the glass reservoir of the constant level oiler (1).
The oil reservoir must be properly filled at all times to provide a constant oil level. Repeat steps 1 - 6, if necessary.
8. To check the function of the constant level oiler (1), slowly drain some oil via the screw plug (4) until air bubbles can be seen in the oil reservoir.



NOTE

An excessively high oil level can lead to a temperature rise and to leakage of the fluid handled or oil.

6.1.3 Shaft seal

Shaft seals are fitted prior to delivery.





Observe the instructions on dismantling (⇒ Section 7.4.6, Page 56) or assembly (⇒ Section 7.5.3, Page 60) .

Quench reservoir If applicable, fill the quench reservoir in accordance with the general arrangement drawing.

Double mechanical seal Prior to starting up the pump, apply barrier pressure as specified in the general arrangement drawing.

External liquid feed Apply the quantities and pressures specified in the data sheet and the general arrangement drawing.

6.1.4 Priming and venting the pump


 	<p>⚠ DANGER</p> <p>Risk of potentially explosive atmosphere by incompatible fluids mixing in the auxiliary piping Risk of burns! Explosion hazard!</p> <ul style="list-style-type: none"> ▷ Make sure that the barrier fluid or quench liquid are compatible with the fluid handled.
	<p>⚠ DANGER</p> <p>Risk of potentially explosive atmosphere inside the pump Explosion hazard!</p> <ul style="list-style-type: none"> ▷ The pump internals in contact with the fluid to be handled, including the seal chamber and auxiliary systems, must be filled with the fluid to be handled at all times. ▷ Provide sufficient inlet pressure. ▷ Provide an appropriate monitoring system.
	<p>⚠ DANGER</p> <p>Shaft seal failure caused by insufficient lubrication Hot or toxic fluid could escape! Damage to the pump!</p> <ul style="list-style-type: none"> ▷ Before starting up the pump set, vent the pump and suction line and prime both with the fluid to be handled.

1. Vent the pump and suction line and prime both with the fluid to be handled.
2. Fully open the shut-off element in the suction line.
3. Fully open all auxiliary connections (barrier fluid, flushing liquid, etc).

6.1.5 Final check

1. Remove the coupling guard and its footboard, if any.
2. Check the coupling alignment; re-align the coupling, if required.
(⇒ Section 5.6, Page 28)
3. Check proper functioning of coupling/shaft.
Check that coupling/shaft can be easily rotated by hand.
4. Fit the coupling guard and its footboard, if any.
5. Check the distance between coupling and coupling guard.
The coupling guard must not touch the coupling.

6.1.6 Water cooling

	<p>CAUTION</p> <p>Deposit-forming, aggressive cooling water Damage to the pump!</p> <ul style="list-style-type: none"> ▷ Observe the cooling water quality.
-------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Observe the following quality data of the cooling water:

- Not deposit-forming
- Not aggressive
- Free from suspended solids
- Hardness on average 5 °dH (~1 mmol/l)
- pH > 8
- Conditioned and neutral with regard to mechanical corrosion
- Inlet temperature $t_{inl}=10$ to 30 °C
Outlet temperature $t_{outl}= 45$ °C max.

6.1.7 Cooling of the shaft seal




	<p>CAUTION</p> <p>Vaporisation pressure of fluid handled higher than atmospheric pressure Damage to the shaft seal/pump!</p> <ul style="list-style-type: none"> ▷ Cool the shaft seal. ▷ Provide sufficient quantities of cooling liquid (see table).
	<p>NOTE</p> <p>The vaporisation pressure varies depending on the fluid handled, the system pressure and the material of the shaft seal (e.g. hot water).</p>

Table 14: Cooling of the shaft seal⁶⁾

Bearing bracket	Cooling liquid quantity in l/min at a product temperature of			
	Standard design		"K" design	
	up to 250 °C	up to 400 °C	up to 250 °C	up to 400 °C
UP02	3	4	3	4
UP03	4	5	4	5
UP04	5	6	4	5
UP05	5	6	5	6
UP06	6	7	5	6
P08s	7	8	6	7

6.1.8 Heating

The space between discharge cover and bearing bracket lantern can be used as a heating chamber, if necessary. It can be fed with hot water, steam or thermal oil, especially in combination with internal circulation.

	<p>⚠ DANGER</p> <p>Excessive surface temperature Explosion hazard! Risk of burns!</p> <ul style="list-style-type: none"> ▷ Observe the permissible temperature classes. (⇒ Section 2.9.2, Page 11)
-------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

⁶ Not possible for conical seal chamber "A".





	CAUTION Lack of heating medium Damage to the pump! ▷ Provide sufficient quantities of a suitable heating medium.
	CAUTION Time for warming up the pump too short Damage to the pump! ▷ Check that the pump is sufficiently warmed up throughout.
	CAUTION Impermissibly high temperature of the heating medium Fluid handled or heating medium could escape! ▷ Observe the application limits of the heating media.

Table 15: Temperature limits for heating with hot water or thermal oil

Design	Hot water / saturated steam		Thermal oil	
	t _{max} [°C]	p _{max} [bar]	t _{max} [°C]	p _{max} [bar]
Standard design; lantern JL 1040 ⁷⁾ , O-ring EPDM	183	10	-	-
Lantern JS 1025 ⁸⁾ ; profile seal PTFE/alloyed steel	250	20	300	6
Welded casing cover	300	20	300	6

6.1.9 Heating up/keeping warm the pump (set)

	CAUTION Pump blockage Damage to the pump! ▷ Prior to pump start-up, heat up the pump as described in the manual.
-------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------

Observe the following when heating up the pump (set) and keeping it warm:

- Make sure that the temperature is increased continuously.
- Heating speed: max. 10 °C/min (10 K/min)





Fluid temperatures above 150 °C When the pump is used for handling fluids at temperatures above 150 °C make sure that the pump has been heated throughout before starting it up.

Temperature difference The temperature difference between the pump's surface and the fluid handled must not exceed 100 °C (100 K) when the pump is started up.

⁷ GJL-250 to EN 1561

⁸ GJS-400-18-LT to EN 1563


6.1.10 Start-up

	<div data-bbox="507 232 683 277">⚠ DANGER</div> <p>Non-compliance with the permissible pressure and temperature limits if the pump is operated with the suction and/or discharge line closed.</p> <p>Explosion hazard! Hot or toxic fluids escaping!</p> <ul style="list-style-type: none"> ▷ Never operate the pump with the shut-off elements in the suction line and/or discharge line closed. ▷ Only start up the pump set with the discharge-side shut-off element slightly or fully open.
	<div data-bbox="507 595 683 640">⚠ DANGER</div> <p>Excessive temperatures due to dry running or excessive gas content in the fluid handled</p> <p>Explosion hazard! Damage to the pump set!</p> <ul style="list-style-type: none"> ▷ Never operate the pump set without liquid fill. ▷ Prime the pump as per operating instructions. (⇒ Section 6.1.4, Page 37) ▷ Always operate the pump within the permissible operating range.
	<div data-bbox="507 954 639 999">CAUTION</div> <p>Abnormal noises, vibrations, temperatures or leakage</p> <p>Damage to the pump!</p> <ul style="list-style-type: none"> ▷ Switch off the pump (set) immediately. ▷ Eliminate the causes before returning the pump set to service.
	<div data-bbox="507 1357 639 1402">CAUTION</div> <p>Start-up against open discharge line</p> <p>Motor overload!</p> <ul style="list-style-type: none"> ▷ Make sure the motor has sufficient power reserves. ▷ Use a soft starter. ▷ Use speed control.

- ✓ The system piping has been cleaned.
- ✓ The pump, suction line and, if applicable, inlet tank have been vented and primed with the fluid to be handled.
- ✓ The lines for priming and venting have been closed.

1. Fully open the shut-off element in the suction head/suction lift line.
2. Close or slightly open the shut-off element in the discharge line.
3. Start up the motor.

4. Immediately after the pump has reached full rotational speed, slowly open the shut-off element in the discharge line and adjust it to comply with the duty point.



	<div style="background-color: #FFD700; padding: 5px;">CAUTION</div> <p>Misalignment of pump and coupling Damage to pump, motor and coupling!</p> <ul style="list-style-type: none"> ▷ When the operating temperature has been reached, switch off the pump set and check the coupling alignment.
-----------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

5. Check the coupling alignment and re-align the coupling, if required.

6.1.11 Checking the shaft seal

Mechanical seal The mechanical seal only leaks slightly or invisibly (as vapour) during operation. Mechanical seals are maintenance-free.

Double mechanical seal

	<div style="background-color: #FF4500; padding: 5px;"> DANGER</div> <p>Excessive temperature of barrier fluid (pumps with double mechanical seal) Explosion hazard! Excessive surface temperature</p> <ul style="list-style-type: none"> ▷ For pumps with double mechanical seal, make sure that the barrier fluid's temperature does not exceed 60 °C.
-----------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Gland packing The gland packing must drip slightly during operation.

Pure graphite packing If a pure graphite packing is used, there must always be some leakage.

Table 16: Leakage rate of the pure graphite packing



Quantity	Values
Minimum	10 cm ³ /min
Maximum	20 cm ³ /min

Adjusting the leakage

- Prior to commissioning**
1. Only lightly tighten the nuts of the gland follower by hand.
 2. Use a feeler gauge to verify that the gland follower is mounted centred and at a right angle to the shaft.

⇒ The gland must leak after the pump has been primed.

After five minutes of operation

	<div style="background-color: #FF8C00; padding: 5px;"> WARNING</div> <p>Unprotected rotating parts Risk of personal injury!</p> <ul style="list-style-type: none"> ▷ Do not touch rotating parts. ▷ When the pump is running, perform any work with utmost caution.
-------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

The leakage can be reduced.

1. Tighten the nuts on the gland follower by 1/6 turn.
2. Monitor the leakage for another five minutes.

Excessive leakage:

Repeat steps 1 and 2 until the minimum value has been reached.

Not enough leakage:

Slightly loosen the nuts at the gland follower.

No leakage:

Immediately switch off pump set!

Loosen the gland follower and repeat commissioning.


Checking the leakage


After the leakage has been adjusted, monitor the leakage for about two hours at maximum fluid temperature.

Check that enough leakage occurs at the gland packing at minimum fluid pressure.

6.1.12 Shutdown

- ✓ The shut-off element in the suction line is and remains open.
- ✓ On pump sets with double mechanical seal, apply the required pressure specified in the general arrangement drawing to the mechanical seal chamber also during standstill.
- ✓ Also ensure quench liquid supply is ON during pump standstill.
 1. Close the shut-off element in the discharge line.
 2. Switch off the motor and make sure the pump set runs down smoothly to a standstill.

	<p>NOTE</p> <p>If the discharge line is equipped with a non-return or check valve, the shut-off element may remain open provided that the system conditions and system regulations are considered and observed.</p>
-----------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------


	<p>NOTE</p> <p>If shut-off is not possible, the pump will run in reverse direction. The reverse runaway speed must be lower than the rated speed.</p>
-------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------

For prolonged shutdown periods:



1. Close the shut-off element in the suction line.
2. Close the auxiliary connections.

If the fluid to be handled is fed in under vacuum, also supply the shaft seal with barrier fluid during standstill.


Only turn off the cooling liquid supply after the pump has cooled down.

	<p>CAUTION</p> <p>Risk of freezing during prolonged pump shutdown periods</p> <p>Damage to the pump!</p> <p>▷ Drain the pump and the cooling/heating chambers (if any) or otherwise protect them against freezing.</p>
-------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

6.2 Operating limits

	<div style="background-color: #e67e22; color: white; padding: 5px;">⚠ DANGER</div> <p>Non-compliance with operating limits for pressure, temperature, fluid handled and speed Explosion hazard! Hot or toxic fluid could escape!</p> <ul style="list-style-type: none"> ▸ Comply with the operating data specified in the data sheet. ▸ Never use the pump for handling fluids it is not designed for. ▸ Avoid prolonged operation against a closed shut-off element. ▸ Never operate the pump at temperatures, pressures or rotational speeds exceeding those specified in the data sheet or on the name plate unless the written consent of the manufacturer has been obtained.
	<div style="background-color: #e67e22; color: white; padding: 5px;">⚠ DANGER</div> <p>Formation of a potentially explosive atmosphere inside the pump Explosion hazard!</p> <ul style="list-style-type: none"> ▸ When draining tanks take suitable measures to prevent dry running of the pump (e.g. fill level monitoring).

6.2.1 Ambient temperature


	<div style="background-color: #f1c40f; color: black; padding: 5px;">CAUTION</div> <p>Operation outside the permissible ambient temperature Damage to the pump (set)!</p> <ul style="list-style-type: none"> ▸ Observe the specified limits for permissible ambient temperatures.
-------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Observe the following parameters and values during operation:

Table 17: Permissible ambient temperatures

Permissible ambient temperature	Value
Maximum	40 °C
Minimum	See data sheet.


6.2.2 Frequency of starts

	<div style="background-color: #e67e22; color: white; padding: 5px;">⚠ DANGER</div> <p>Excessive surface temperature of the motor Explosion hazard! Damage to the motor!</p> <ul style="list-style-type: none"> ▸ In case of explosion-proof motors, observe the frequency of starts specified in the manufacturer's product literature.
-------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

The frequency of starts is determined by the maximum temperature increase of the motor. The frequency of starts depends on the power reserves of the motor in steady-state operation and on the starting conditions (DOL starting, star-delta starting, moments of inertia, etc). If the start-ups are evenly spaced over the period indicated, the following limits serve as orientation for start-up with the discharge-side shut-off valve slightly open:

Table 18: Frequency of starts

Motor rating [kW]	Maximum frequency of starts [Starts/hour]
≤ 12	15
≤ 100	10
> 100	5

	CAUTION
	Re-starting while motor is still running down Damage to the pump (set)! ▶ Do not re-start the pump set before the pump rotor has come to a standstill.

6.2.3 Fluid handled

6.2.3.1 Flow rate

Unless specified otherwise in the characteristic curves or in the data sheets, the following applies:

- Short-time operation: $Q_{\min}^{9)} = 0.1 \times Q_{\text{BEP}}^{10)}$
- Continuous operation: $Q_{\min}^{9)} = 0.3 \times Q_{\text{BEP}}^{10)}$
- 2-pole operation: $Q_{\max}^{11)} = 1.1 \times Q_{\text{BEP}}^{10)}$
- 4-pole operation: $Q_{\max}^{11)} = 1.25 \times Q_{\text{BEP}}^{10)}$

The data refer to water and water-like fluids. Longer operating periods with these fluids and at the flow rates indicated will not cause an additional increase in the temperatures on the pump surface. However, if the physical properties of the fluids handled differ from those of water, the calculation formula below must be used to check if an additional heat build-up may lead to a dangerous temperature increase at the pump surface. If necessary, the minimum flow must be increased.

$$T_o = T_f + \Delta \vartheta$$

$$\Delta \vartheta = \frac{g \times H}{c \times \eta} \times (1 - \eta)$$

Table 19: Key

Symbol	Description	Unit
c	Specific heat capacity	J/kg K
g	Acceleration due to gravity	m/s ²
H	Pump discharge head	m
T _f	Fluid temperature	°C
T _o	Temperature at the casing surface	°C
η	Pump efficiency at duty point	-
Δϑ	Temperature difference	K


6.2.3.2 Density of the fluid handled

The power input of the pump set will change in proportion to the density of the fluid handled.

⁹ Minimum flow rate

¹⁰ Flow rate at best efficiency point

¹¹ Maximum flow rate

	CAUTION
	<p>Impermissibly high density of the fluid handled Motor overload!</p> <ul style="list-style-type: none"> ▷ Observe the information about fluid density in the data sheet. ▷ Make sure the motor has sufficient power reserves.

6.2.3.3 Abrasive fluids

Do not exceed the maximum permissible solids content specified in the data sheet. When the pump handles fluids containing abrasive substances, increased wear of the hydraulic system and shaft seal are to be expected. In this case, reduce the commonly recommended inspection intervals.

6.3 Shutdown/storage/preservation

6.3.1 Measures to be taken for shutdown

The pump (set) remains installed

- ✓ Sufficient fluid is supplied for the functional check run of the pump.
 1. For prolonged shutdown periods, start up the pump (set) regularly between once a month and once every three months for approximately five minutes.
 - ⇒ This will prevent the formation of deposits within the pump and the pump intake area.

The pump (set) is removed from the piping and stored

- ✓ The pump has been properly drained. (⇒ Section 7.3, Page 54)
- ✓ The safety instructions for dismantling the pump have been observed. (⇒ Section 7.4.1, Page 54)
- ✓ The permissible ambient temperature for storing the pump is observed.
 1. Spray-coat the inside wall of the pump casing and, in particular, the impeller clearance areas with a preservative.
 2. Spray the preservative through the suction nozzle and discharge nozzle. It is advisable to then close the pump nozzles (e.g. with plastic caps).
 3. Oil or grease all exposed machined parts and surfaces of the pump (with silicone-free oil and grease, food-approved if required) to protect them against corrosion.



Observe the additional instructions on preservation. (⇒ Section 3.3, Page 14)

If the pump set is to be stored temporarily, only preserve the wetted components made of low-alloy materials. Commercially available preservatives can be used for this purpose. Observe the manufacturer's instructions for application/removal.

6.4 Returning to service

For returning the equipment to service observe the sections on commissioning/start-up and the operating limits. (⇒ Section 6.1, Page 35) (⇒ Section 6.2, Page 43)

In addition, carry out all servicing/maintenance operations before returning the pump (set) to service. (⇒ Section 7, Page 47)












	 WARNING
	<p>Failure to re-install or re-activate protective devices Risk of injury from moving parts or escaping fluid!</p> <ul style="list-style-type: none"> ▷ As soon as the work is completed, properly re-install and re-activate any safety-relevant devices and protective devices.

**NOTE**


If the equipment has been out of service for more than one year, replace all elastomer seals.

7 Servicing/Maintenance


7.1 Safety regulations

	<div data-bbox="507 315 683 360">  DANGER </div> <div data-bbox="496 383 991 412"> Improper cleaning of coated pump surfaces </div> <div data-bbox="496 418 991 448"> Explosion hazard by electrostatic discharge! </div> <div data-bbox="517 459 1406 517"> <ul style="list-style-type: none"> ▷ When cleaning coated pump surfaces in atmospheres of Explosion group IIC, use suitable anti-static equipment. </div>
	<div data-bbox="507 553 683 598">  DANGER </div> <div data-bbox="496 620 943 649"> Sparks produced during servicing work </div> <div data-bbox="496 656 699 685"> Explosion hazard! </div> <div data-bbox="517 696 1437 795"> <ul style="list-style-type: none"> ▷ Observe the safety regulations in force at the place of installation! ▷ Always perform maintenance work at an explosion-proof pump (set) outside of potentially explosive atmospheres. </div>
 	<div data-bbox="507 833 683 878">  DANGER </div> <div data-bbox="496 900 836 929"> Improperly serviced pump set </div> <div data-bbox="496 936 699 965"> Explosion hazard! </div> <div data-bbox="496 972 788 1001"> Damage to the pump set! </div> <div data-bbox="517 1012 1430 1111"> <ul style="list-style-type: none"> ▷ Service the pump set regularly. ▷ Prepare a maintenance schedule with special emphasis on lubricants, shaft seal and coupling. </div>
	<div data-bbox="507 1249 703 1294">  WARNING </div> <div data-bbox="496 1317 940 1346"> Unintentional starting of the pump set </div> <div data-bbox="496 1352 1139 1382"> Risk of injury by moving components and shock currents! </div> <div data-bbox="517 1393 1414 1491"> <ul style="list-style-type: none"> ▷ Ensure that the pump set cannot be started unintentionally. ▷ Always make sure the electrical connections are disconnected before carrying out work on the pump set. </div>
	<div data-bbox="507 1527 703 1572">  WARNING </div> <div data-bbox="496 1594 1378 1650"> Fluids handled, consumables and supplies which are hot and/or pose a health hazard </div> <div data-bbox="496 1657 654 1686"> Risk of injury! </div> <div data-bbox="517 1697 1430 1841"> <ul style="list-style-type: none"> ▷ Observe all relevant laws. ▷ When draining the fluid take appropriate measures to protect persons and the environment. ▷ Decontaminate pumps which handle fluids posing a health hazard. </div>

The operator ensures that maintenance, inspection and installation are performed by authorised, qualified specialist personnel who are thoroughly familiar with the manual.

	⚠ WARNING
	Insufficient stability Risk of crushing hands and feet! <ul style="list-style-type: none"> ▷ During assembly/dismantling, secure the pump (set)/pump parts to prevent tilting or tipping over.



A regular maintenance schedule will help avoid expensive repairs and contribute to trouble-free, reliable operation of the pump, pump set and pump parts with a minimum of servicing/maintenance expenditure and work.



	NOTE
	All maintenance work, service work and installation work can be carried out by KSB Service or authorised workshops. For contact details refer to the enclosed "Addresses" booklet or visit " www.ksb.com/contact " on the Internet.



Never use force when dismantling and reassembling the pump set.




7.2 Servicing/Inspection

7.2.1 Supervision of operation

 	⚠ DANGER
	Excessive temperatures as a result of bearings running hot or defective bearing seals Explosion hazard! Fire hazard! Damage to the pump set! Risk of burns! <ul style="list-style-type: none"> ▷ Regularly check the lubricant level. ▷ Regularly check the rolling element bearings for running noises.


 	⚠ DANGER
	Incorrectly serviced shaft seal Explosion hazard! Hot, toxic fluid escaping! Damage to the pump set! Risk of burns! Fire hazard! <ul style="list-style-type: none"> ▷ Regularly service the shaft seal.


 	⚠ DANGER
	Incorrectly serviced barrier fluid system Explosion hazard! Fire hazard! Damage to the pump set! Hot and/or toxic fluids escaping! <ul style="list-style-type: none"> ▷ Regularly service the barrier fluid system. ▷ Monitor the barrier fluid pressure.

	<p>⚠ DANGER</p> <p>Risk of potentially explosive atmosphere inside the pump Explosion hazard!</p> <ul style="list-style-type: none"> ▷ The pump internals in contact with the fluid to be handled, including the seal chamber and auxiliary systems, must be filled with the fluid to be handled at all times. ▷ Provide sufficient inlet pressure. ▷ Provide an appropriate monitoring system.
	<p>CAUTION</p> <p>Increased wear due to dry running Damage to the pump set!</p> <ul style="list-style-type: none"> ▷ Never operate the pump set without liquid fill. ▷ Never close the shut-off element in the suction line and/or supply line during pump operation.
	<p>CAUTION</p> <p>Impermissibly high temperature of fluid handled Damage to the pump!</p> <ul style="list-style-type: none"> ▷ Prolonged operation against a closed shut-off element is not permitted (heating up of the fluid). ▷ Observe the temperature limits in the data sheet and in the section on operating limits. (⇒ Section 6.2, Page 43)




While the pump is in operation, observe and/or check the following:

- The pump must run quietly and free from vibrations at all times.
- In case of oil lubrication, ensure the oil level is correct. (⇒ Section 6.1.2, Page 35)
- Check the shaft seal. (⇒ Section 6.1.11, Page 41)
- Check the static sealing elements for leakage.
- Check the rolling element bearings for running noises.
Vibrations, noise and an increase in current input occurring during unchanged operating conditions indicate wear.
- Monitor the correct functioning of any auxiliary connections.
- Cooling system
Take the pump out of service at least once a year to thoroughly clean the cooling system.
- Monitor the stand-by pump.
To make sure that stand-by pumps are ready for operation, start them up once a week.
- Monitor the bearing temperature.
The bearing temperature must not exceed 90 °C (measured on the outside of the bearing bracket).

	<p>CAUTION</p> <p>Operation outside the permissible bearing temperature Damage to the pump!</p> <ul style="list-style-type: none"> ▷ The bearing temperature of the pump (set) must never exceed 90 °C (measured on the outside of the bearing bracket).
-------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

	<p>NOTE</p> <p>After commissioning, increased temperatures may occur at grease-lubricated rolling element bearings due to the running-in process. The final bearing temperature is only reached after a certain period of operation (up to 48 hours depending on the conditions).</p>
-----------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

7.2.2 Inspection work

 	<p>⚠ DANGER</p> <p>Excessive temperatures caused by friction, impact or frictional sparks Explosion hazard! Fire hazard! Damage to the pump set!</p> <ul style="list-style-type: none"> ▷ Regularly check the coupling guard, plastic components and other guards of rotating parts for deformation and sufficient distance from rotating parts.
	<p>⚠ DANGER</p> <p>Electrostatic charging due to insufficient potential equalisation Explosion hazard!</p> <ul style="list-style-type: none"> ▷ Make sure that the connection between pump and baseplate is electrically conductive.

7.2.2.1 Checking the coupling

Check the flexible elements of the coupling. Replace the relevant parts in due time if there is any sign of wear and check the alignment.

7.2.2.2 Checking the clearances

To check the clearances, remove the back pull-out unit.


If the clearances is larger than permitted (see the following table), casing wear ring 502.01 must be replaced with a new one.

The clearances given refer to the impeller diameter.


Table 20: Clearance gaps between impeller and casing/between impeller and casing wear ring

Nominal diameter of the discharge nozzle	CPKN-S1/-S2	CPKN-C1/-C1.V/-C3.1/-C3.2 CPKN-E
Up to and including DN 65	0.40 mm ^{+0.1}	0.60 mm ^{+0.1}
DN 80 to DN 200	0.50 mm ^{+0.1}	0.60 mm ^{+0.1}
DN 250 and above	0.65 mm ^{+0.1}	0.75 mm ^{+0.1}



These values are valid for temperatures of up to 250 °C; for temperatures higher than 250 °C, the clearance is increased by 0.1 to 0.2 mm.

	<p>NOTE</p> <p>If the clearances given are exceeded by more than 1 mm (referring to the diameter) replace the affected components or restore the original clearance by means of a casing wear ring. Contact KSB.</p>
-------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

7.2.2.3 Cleaning filters

	CAUTION
	<p>Insufficient inlet pressure due to clogged filter in the suction line</p> <p>Damage to the pump!</p> <ul style="list-style-type: none"> ▷ Monitor contamination of filter with suitable means (e.g. differential pressure gauge). ▷ Clean filter at appropriate intervals.

7.2.3 Lubrication and lubricant change of rolling element bearings

 	DANGER
	<p>Excessive temperatures as a result of bearings running hot or defective bearing seals</p> <p>Explosion hazard!</p> <p>Fire hazard!</p> <p>Damage to the pump set!</p> <ul style="list-style-type: none"> ▷ Regularly check the condition of the lubricant.

7.2.3.1 Oil lubrication

The rolling element bearings are usually lubricated with mineral oil.

7.2.3.1.1 Intervals

Table 21: Oil change intervals

Temperature at the bearing	First oil change	All subsequent oil changes ¹²⁾
Up to 70 °C	After 300 operating hours	Every 8,500 operating hours
70 °C - 80 °C	After 300 operating hours	Every 4,200 operating hours
80 °C - 90 °C	After 300 operating hours	Every 2,000 operating hours

7.2.3.1.2 Oil quality

Oil quality Table 22: Oil quality

Description	Symbol to DIN 51502	Properties	
CLP46 lubricating oil to DIN 51517 or HD 20W/20 SAE	□	Kinematic viscosity at 40 °C	46±4 mm ² /s
		Flash point (to Cleveland)	+175 °C
		Solidification point (pour point)	-15 °C
		Application temperature ¹³⁾	Higher than permissible bearing temperature

¹² At least once a year


¹³ For ambient temperatures below -10 °C use a different suitable type of lubricating oil. Contact KSB.

7.2.3.1.3 Oil quantity

Table 23: Oil quantity

Bearing bracket	Oil quantity [l]
UP02	0.3
UP03	0.5
UP04	0.5
UP05	1.5
UP06	1.4
P08s	4.5

7.2.3.1.4 Changing the oil



! WARNING

Lubricants posing a health hazard and/or hot lubricants
Hazard to persons and the environment!

- ▷ When draining the lubricant take appropriate measures to protect persons and the environment.
- ▷ Wear safety clothing and a protective mask if required.
- ▷ Collect and dispose of any lubricants.
- ▷ Observe all legal regulations on the disposal of fluids posing a health hazard.

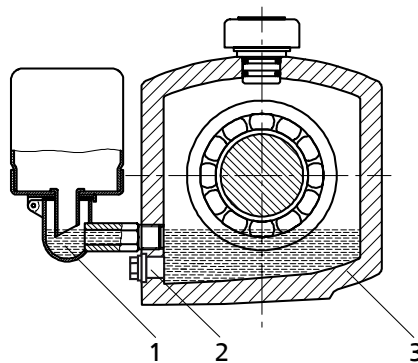


Fig. 17: Bearing bracket with constant level oiler

1	Constant level oiler	2	Screw plug
3	Bearing bracket		

- ✓ A suitable container for the used oil is on hand.
1. Place the container underneath the screw plug.
 2. Undo the screw plug (2) at the bearing bracket (3) and drain the oil.
 3. Once the bearing bracket (3) has been drained, fit and tighten the screw plug (2) again.
 4. Re-fill with oil. (⇒ Section 6.1.2, Page 35)

7.2.3.2 Grease lubrication

The bearings are supplied packed with high-quality lithium-soap grease.

7.2.3.2.1 Intervals

The bearings are re-lubricated via the lubricating nipples, see the following drawing.

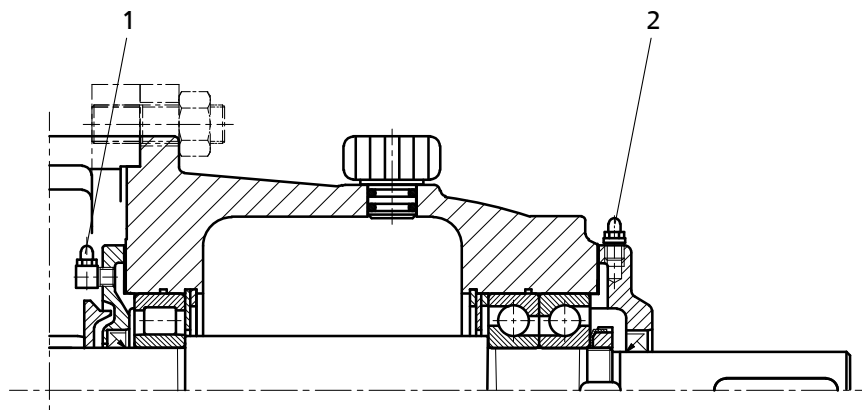


Fig. 18: Position of lubricating nipples

1	Lubricating nipple	2	Lubricating nipple
---	--------------------	---	--------------------

	CAUTION
	Contaminated lubricating nipples Contamination of the lubricating grease! ▷ Clean the grease lubricating nipples before re-lubricating them.

- Re-lubrication**
- After approx. 5000 operating hours
 - At least once a year
 - Required grease quantity (⇒ Section 7.2.3.2.3, Page 53)
- Grease change**
- After 16,000 operating hours
 - At least every 2 years
 - Required grease quantity (⇒ Section 7.2.3.2.3, Page 53)

Under unfavourable operating conditions (e.g. high room temperature, high atmospheric humidity, dust-laden air, aggressive industrial atmosphere) check the bearings earlier and clean and re-lubricate them, if required.

7.2.3.2.2 Grease quality

Table 24: Grease quality to DIN 51825


Soap basis	NLGI grade	Worked penetration at 25 °C in mm/10	Drop point	Temperature range
Lithium	2 to 3	220-295	≥ 175 °C	-30 °C to 120 °C

7.2.3.2.3 Grease quantities

Table 25: Grease quantities for re-lubrication and re-filling


Bearings	Re-lubrication		Re-fill	
	Pump-end bearing	Drive-end bearing	Bearing+cover, pump end	Bearing+cover, drive end
UP02	7.5 g / 8.5 cm ³	15 g / 17 cm ³	approx. 10 g / 11 cm ³	approx. 30 g / 33 cm ³
UP03	12.5 g / 14 cm ³	25 g / 28 cm ³	approx. 25 g / 28 cm ³	approx. 60 g / 67 cm ³
UP04	12.5 g / 14 cm ³	25 g / 28 cm ³	approx. 25 g / 28 cm ³	approx. 60 g / 67 cm ³
UP05	17.5 g / 20 cm ³	35 g / 40 cm ³	approx. 40 g / 45 cm ³	approx. 80 g / 90 cm ³
UP06	35 g / 40 cm ³	70 g / 80 cm ³	approx. 80 g / 90 cm ³	approx. 205 g / 225 cm ³
P08	35 g / 40 cm ³	70 g / 80 cm ³	approx. 80 g / 90 cm ³	approx. 205 g / 225 cm ³

7.2.3.2.4 Changing the grease

	<div style="background-color: #FFD700; padding: 5px;">CAUTION</div> <p>Mixing greases of differing soap bases Changed lubricating qualities!</p> <ul style="list-style-type: none"> ▷ Thoroughly clean the bearings. ▷ Adjust the re-lubrication intervals to the grease used.
-----------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

- ✓ The pump has been dismantled for changing the grease.
- 1. Only half-fill the bearing cavities with grease.
- 2. Fill the cavities in the bearing cover until they are about 1/3 full.

7.3 Drainage/cleaning




	<div style="background-color: #FFA500; padding: 5px;">! WARNING</div> <p>Fluids handled, consumables and supplies which are hot and/or pose a health hazard Hazard to persons and the environment!</p> <ul style="list-style-type: none"> ▷ Collect and properly dispose of flushing fluid and any fluid residues. ▷ Wear safety clothing and a protective mask if required. ▷ Observe all legal regulations on the disposal of fluids posing a health hazard.
-----------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

If the pump set has handled fluids whose residues could lead to corrosion damage in the presence of atmospheric humidity or could ignite upon contact with oxygen, the pump set must be neutralised, and anhydrous inert gas must be blown through the pump to ensure drying.

Use connection 6B to drain the fluid handled (see drawing of auxiliary connections).

7.4 Dismantling the pump set

7.4.1 General information/Safety regulations



	<div style="background-color: #FFA500; padding: 5px;">! WARNING</div> <p>Unqualified personnel performing work on the pump (set) Risk of injury!</p> <ul style="list-style-type: none"> ▷ Always have repair work and maintenance work performed by specially trained, qualified personnel.
	<div style="background-color: #FFA500; padding: 5px;">! WARNING</div> <p>Hot surface Risk of injury!</p> <ul style="list-style-type: none"> ▷ Allow the pump set to cool down to ambient temperature.
	<div style="background-color: #FFA500; padding: 5px;">! WARNING</div> <p>Improper lifting/moving of heavy assemblies or components Personal injury and damage to property!</p> <ul style="list-style-type: none"> ▷ Use suitable transport devices, lifting equipment and lifting tackle to move heavy assemblies or components.

Observe the general safety instructions and information. (⇒ Section 7, Page 47)

For any work on the motor, observe the instructions of the relevant motor manufacturer.

For dismantling and reassembly refer to the general assembly drawing.
(⇒ Section 9.1, Page 70)




In the event of damage you can always contact our service departments.

	 DANGER
	Insufficient preparation of work on the pump (set) Risk of injury! <ul style="list-style-type: none"> ▷ Properly shut down the pump set. (⇒ Section 6.1.12, Page 42) ▷ Close the shut-off elements in the suction line and discharge line. ▷ Drain the pump and release the pump pressure. (⇒ Section 7.3, Page 54) ▷ Shut off any auxiliary connections. ▷ Allow the pump set to cool down to ambient temperature.

7.4.2 Preparing the pump set

1. Interrupt the power supply and make sure it cannot be switched on again unintentionally.
2. Disconnect and remove all auxiliary pipework.
3. Remove the coupling guard.
4. Remove the coupling spacer if fitted.
5. Drain the oil fill of oil-lubricated bearings. (⇒ Section 7.2.3.1.4, Page 52)


7.4.3 Removing the motor

	NOTE On pump sets with spacer-type couplings, the back pull-out unit can be removed while the motor remains bolted to the baseplate.
	 WARNING Motor tipping over Risk of crushing hands and feet! <ul style="list-style-type: none"> ▷ Suspend or support the motor to prevent it from tipping over.

1. Disconnect the motor from the power supply.
2. Unbolt the motor from the baseplate.
3. Shift the motor to separate it from the pump.

7.4.4 Removing the back pull-out unit

- ✓ The notes and steps stated in (⇒ Section 7.4.1, Page 54) to (⇒ Section 7.4.3, Page 55) have been observed/carried out.
- ✓ On pump sets without spacer-type coupling, the motor has been removed.

	<div style="background-color: #f4a460; padding: 5px;">⚠ WARNING</div> <p>Back pull-out unit tilting Risk of crushing hands and feet!</p> <p>▷ Suspend or support the bearing bracket at the pump end.</p>
-----------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

1. If required, suspend or support bearing bracket 330 to prevent it from tilting.
2. Unbolt support foot 183 from the baseplate.
3. Undo hexagon nut 920.01 at the volute casing.
4. Pull the back pull-out unit out of the volute casing.
5. Remove and dispose of joint ring 411.10.
6. Place the back pull-out unit on a clean and level surface.

7.4.5 Removing the impeller

- ✓ The notes and steps stated in (⇒ Section 7.4.1, Page 54) to (⇒ Section 7.4.4, Page 55) have been observed/carried out.
- ✓ The back pull-out unit is kept in a clean and level assembly area.
 1. Undo impeller nut 922 (right-hand thread).
 2. Remove impeller 230 with an impeller removal tool.
 3. Place impeller 230 on a clean and level surface.
 4. Remove keys 940.01 from shaft 210.
 5. Remove and dispose of joint rings 411.31/411.32.

7.4.6 Removing the shaft seal

7.4.6.1 Dismantling the mechanical seal - cylindrical casing cover

- ✓ The notes and steps stated in (⇒ Section 7.4.1, Page 54) to (⇒ Section 7.4.5, Page 56) have been observed/carried out.
- ✓ The back pull-out unit is kept in a clean and level assembly area.
 1. Undo hexagon nuts 920.02 and slide back seal cover 471.01 (if fitted) until it rests against thrower 507.01.
 2. Remove casing cover 161 with O-ring 412.01.
 3. Remove and dispose of O-ring 412.01.
 4. Pull complete mechanical seal 433 with shaft protecting sleeve 524.01, seal cover 471 and thrower 507.01 off shaft 210.

7.4.6.2 Dismantling the mechanical seal - conical casing cover



- ✓ The notes and steps stated in (⇒ Section 7.4.1, Page 54) to (⇒ Section 7.4.5, Page 56) have been observed/carried out.
- ✓ The back pull-out unit is kept in a clean and level assembly area.
 1. Pull shaft sleeve 524.01 with the rotating assembly of mechanical seal 433 off the shaft.
 2. Dismantle casing cover 161 with the stationary ring of mechanical seal 433.
 3. Remove thrower 507.01.
 4. Press the stationary ring of mechanical seal 433 out of casing cover 161.

7.4.6.3 Dismantling the gland packing

- ✓ The notes and steps stated in (⇒ Section 7.4.1, Page 54) to (⇒ Section 7.4.5, Page 56) have been observed/carried out.
- ✓ The back pull-out unit is kept in a clean and level assembly area.
 1. Unscrew hexagon nuts 920.02 at gland follower 452 and remove the gland follower.
 2. Remove stuffing box ring 454.01 and drip plate 463.01.
 3. Remove casing cover 161 with O-ring 412.01 and gland packing 461.01.
 4. Remove packing rings 461.01 and lantern ring 458.01, if any, from the packing chamber.
 5. Pull off guard 680.
 6. Pull shaft protecting sleeve 524.01 and thrower 507.01 off shaft 210.

7.4.7 Dismantling the bearings



- ✓ The notes and steps stated in (⇒ Section 7.4.1, Page 54) to (⇒ Section 7.4.6, Page 56) have been observed/carried out.
- ✓ The bearing bracket is kept in a clean and level assembly area.
 1. Unscrew hexagon nuts 920.04 at the flange of bearing bracket lantern 344.
 2. Remove bearing bracket lantern 344.
 3. Unscrew the hexagon socket head cap screw in the coupling hub.
 4. Pull the coupling half off the pump shaft with a puller.
 5. Remove key 940.02.
 6. Undo screws 914.02 and remove drive-end bearing cover 360.02 and joint ring 400.02.
 7. Undo screws 914.01 and remove pump-end bearing cover 360.01 and joint ring 400.01.
 8. Carefully drive shaft 210 together with angular contact ball bearing 320.02 and the inner ring of cylindrical roller bearing 322.01 out of the bearing bracket towards the drive end.
 9. Remove support disc 550.23 of angular contact ball bearing 320.02 from bearing bracket 330.
 10. In case of grease lubrication, remove disc 550.25.
 11. Remove cylindrical roller bearing 322.01 (roller cage) from bearing bracket 330.
 12. In case of grease lubrication, remove disc 550.24.
 13. Bend open lock washer 931.01 behind keywayed nut 920.21 on shaft 210.
 14. Unscrew keywayed nut 920.21 (right-hand thread) and remove lock washer 931.01.

	<div style="background-color: #f4a460; padding: 5px; border: 1px solid black;">  WARNING </div> <p>Hot surfaces due to heating of components for assembly/dismantling Risk of burns!</p> <ul style="list-style-type: none"> ▷ Wear heat-resistant protective gloves. ▷ Remove flammable substances from the danger zone. ▷ Observe the applicable local occupational safety regulations and accident prevention regulations.
-------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

15. Heat up angular contact ball bearing 320.02 and the inner ring of cylindrical roller bearing 322.01 to 80 °C, and pull them off shaft 210.
16. Dispose of joint rings 400.01/02.

7.5 Reassembling the pump set

7.5.1 General information/Safety regulations

	<p>WARNING</p> <p>Improper lifting/moving of heavy assemblies or components Personal injury and damage to property!</p> <ul style="list-style-type: none"> ▷ Use suitable transport devices, lifting equipment and lifting tackle to move heavy assemblies or components.
	<p>CAUTION</p> <p>Improper reassembly Damage to the pump!</p> <ul style="list-style-type: none"> ▷ Reassemble the pump (set) in accordance with the general rules of sound engineering practice. ▷ Use original spare parts only.

Sequence Always reassemble the pump in accordance with the corresponding general assembly drawing.

Sealing elements

▪ Gaskets


- Always use new gaskets, making sure that they have the same thickness as the old ones.
- Always fit gaskets of asbestos-free materials or graphite without using lubricants (e.g. copper grease, graphite paste).

▪ O-rings

- Never use O-rings that have been made by cutting an O-ring cord to size and gluing the ends together.

▪ Packing rings

- Always use pre-compressed packing rings.

	<p>CAUTION</p> <p>Contact of O-ring with graphite or similar material Fluid could escape!</p> <ul style="list-style-type: none"> ▷ Do not coat O-ring with graphite or similar material. ▷ Use animal fats or lubricants based on silicone or PTFE.
-------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------



▪ Assembly adhesives

- For gaskets, avoid the use of assembly adhesives if possible.
- If assembly adhesives are required, use a commercially available contact adhesive (e.g. "Pattex").
- Only apply adhesive at selected points and in thin layers.
- Never use quick-setting adhesives (cyanoacrylate adhesives).
- Coat the locating surfaces of the individual components and screwed connections with graphite or similar before reassembly.
- Prior to reassembly, screw back any forcing screws and adjusting screws.


Tightening torques For reassembly, tighten all screws and bolts as specified in this manual.

7.5.2 Fitting the bearings

- ✓ The individual parts have been placed in a clean and level assembly area.
- ✓ All dismantled parts have been cleaned and checked for wear.
- ✓ Any damaged or worn parts have been replaced by original spare parts.
- ✓ The sealing surfaces have been cleaned.

	 WARNING
	<p>Hot surfaces due to heating of components for assembly/dismantling</p> <p>Risk of burns!</p> <ul style="list-style-type: none"> ▷ Wear heat-resistant protective gloves. ▷ Remove flammable substances from the danger zone. ▷ Observe the applicable local occupational safety regulations and accident prevention regulations.

1. Heat up angular contact ball bearing 320.02 and the inner ring of cylindrical roller bearing 322.01 to approx. 80 °C in an oil bath.
2. Slide angular contact ball bearing 320.02 and the inner ring of cylindrical roller bearing 322.01 onto shaft 210 until they will not go any further.

	NOTE
	<p>Angular contact ball bearings must be installed in back-to-back arrangement. Angular contact ball bearings installed in pairs must always be from the same manufacturer.</p>

3. Use a C-spanner to tighten slotted round nut 920.21 without lock washer 931.01.
4. Let angular contact ball bearing 320.01 cool down to approximately 5 °C above ambient temperature.
5. Re-tighten slotted round nut 920.21, then unscrew it again.
6. Apply a few spots of a suitable lubricant (e.g. Molykote) to the contact faces of lock washer 931.01 and slotted round nut 920.21.
7. Fit lock washer 931.01.
8. Tighten slotted round nut 920.21.
9. Bend back lock washer 931.01.
10. Insert circlip 932.01/932.02 into the bearing bracket.
11. On grease-lubricated models, remove disc 550.24.
12. Fit cylindrical roller bearing 322.01 (roller cage) in the bearing bracket.

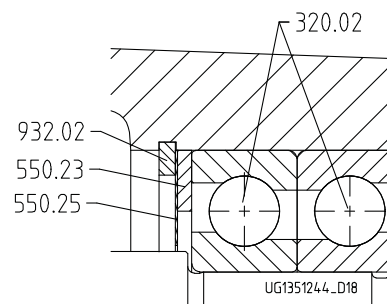


Fig. 19: Fitting the bearings

13. On grease-lubricated models, remove disc 550.25.
14. Insert support disc 550.23 of angular contact ball bearing 320.02 into bearing bracket 330.

15. On grease-lubricated models, fill the bearing and bearing cover with grease.
Grease lubrication
16. Carefully insert pre-assembled shaft 210 with angular contact ball bearing 320.02 and the inner ring of cylindrical roller bearing 322.01 into bearing bracket 330 from the drive end.
17. Fit pump-end bearing cover 360.01 with joint ring 400.01; take care not to damage lip seal 421.01.
18. Fit motor-end bearing cover 360.02 with joint ring 400.02; take care not to damage lip seal 421.02.
19. Fit bearing bracket lantern 344.
20. Tighten hex. nuts 920.04 at the flange of bearing bracket lantern 330.
21. Fit keys 940.02.
22. Slide the coupling hub onto the shaft end.
23. Secure the coupling hub with a set screw.
24. Fit thrower 507.01, if any.

7.5.3 Fitting the shaft seal

7.5.3.1 Mechanical seal

The following rules must be observed when installing the mechanical seal:

- For installing the mechanical seal, proceed as shown in the seal installation drawing.
- Work cleanly and accurately.
- Only remove the protective wrapping of the contact faces immediately before installation takes place.
- Prevent any damage to the sealing surfaces or O-rings.
- After inserting the stationary ring of the mechanical seal, check that it is plane-parallel in relation to the casing part.
- The surface of the shaft protecting sleeve must be absolutely clean and smooth, and the sleeve's mounting edge must be chamfered.
- When sliding the rotating assembly onto the shaft protecting sleeve, take appropriate steps to protect the surface of the shaft protecting sleeve from damage.

Re-installing the mechanical seal - cylindrical casing cover

- ✓ The notes and steps stated in (⇒ Section 7.5.1, Page 58) to (⇒ Section 7.5.2, Page 59) have been observed/carried out.
 - ✓ The bearing assembly and the individual parts of mechanical seal 433 are kept in a clean and level assembly area.
 - ✓ All dismantled parts have been cleaned and checked for wear.
 - ✓ Any damaged or worn parts have been replaced by original spare parts.
 - ✓ The sealing surfaces have been cleaned.
1. Slide thrower 507.01 (if any) onto shaft 210 from the pump end.
 2. Fasten seal cover 471 with inserted O-ring and the stationary ring of the mechanical seal to casing cover 161 with hexagon nut 920.02.
 3. Insert casing cover 161 with O-ring 412.01 into lantern 344; watch joint ring 411.11.
 4. Fit the rotating assembly of mechanical seal 433 on shaft protecting sleeve 524.01 (observe distance B - see Supplementary Sheet of the mechanical seal).
 5. Slide pre-assembled mechanical seal 433 and shaft protecting sleeve 524.01 onto shaft 210.

Fitting the mechanical seal - conical casing cover

- ✓ The notes and steps stated in (⇒ Section 7.5.1, Page 58) to (⇒ Section 7.5.2, Page 59) have been observed/carried out.
 - ✓ The bearing assembly and the individual parts of mechanical seal 433 are kept in a clean and level assembly area.
 - ✓ All dismantled parts have been cleaned and checked for wear.
 - ✓ Any damaged or worn parts have been replaced by original spare parts.
 - ✓ The sealing surfaces have been cleaned.
1. Slide thrower 507.01 (if any) onto shaft 210 from the pump end.
 2. Carefully press the stationary ring of mechanical seal 433 with O-ring into casing cover 161.
 3. Fit casing cover 161 with the inserted stationary ring of the mechanical seal into lantern 344.
 4. Fit the rotating assembly of mechanical seal 433 and the spacer ring, if any, on shaft protecting sleeve 524.01 (observe distance B - see Supplementary Sheet for the mechanical seal).
 5. Slide pre-assembled mechanical seal 433 and shaft protecting sleeve 524.01 onto shaft 210.

7.5.3.2 Packing the gland

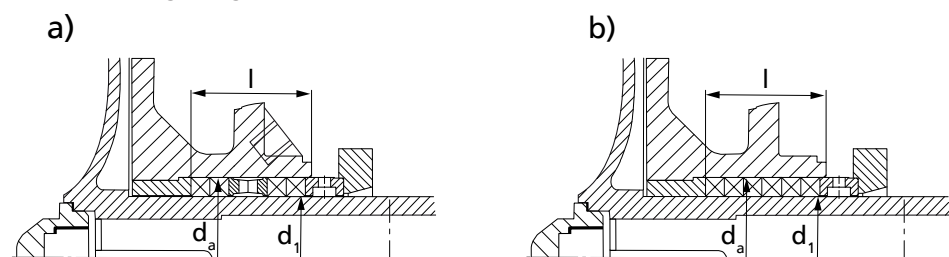


Fig. 20: Gland packing chamber a) with lantern ring and b) without lantern ring

Table 26: Gland packing chamber

Bearing bracket	Gland packing chamber			Packing cross-section	Packing rings
	$\varnothing d_1$	$\varnothing d_a$	l		
UP02	35	51	53	8 x 8	4 rings and 1 lantern ring or 6 rings
UP03	45	65	64	10 x 10	
UP04	55	75	64	10 x 10	
UP05	70	95	79	12,5 x 12,5	
UP06	80	105	79	12,5 x 12,5	
P08s	100	132	102	16 x 16	

Pure graphite packings see supplementary operating instructions.

Always use pre-compressed packing rings.



- ✓ The notes and steps stated in (⇒ Section 7.5.1, Page 58) to (⇒ Section 7.5.2, Page 59) have been observed/carried out.
 - ✓ The bearing assembly as well as the individual parts have been placed in a clean and level assembly area.
 - ✓ All dismantled parts have been cleaned and checked for wear.
 - ✓ Any damaged or worn parts have been replaced by original spare parts.
 - ✓ The sealing surfaces have been cleaned.
1. Clamp casing cover 161 into a vice.
 2. Push in neck bush 456.01.
 3. Insert the first packing ring, ensuring that its cut edge is in horizontal position.

4. Hold the packing ring in place and slide shaft protecting sleeve 524 (chamfered side first) into the gland packing chamber from the pump end.
5. Slightly expand the inside diameter of the packing ring by moving shaft protecting sleeve 524 back and forth. Then pull out the shaft protecting sleeve. Insert lantern ring 458, if any (see drawing above). Insert subsequent packing rings one at a time, with their joints staggered at approximately 90°. Repeat the expansion procedure for each packing ring. When the last packing ring has been inserted, shaft protecting sleeve 524 remains in the packing chamber.
6. Insert stuffing box ring 454.01 with the drilled hole down.
7. Fit gland follower 452 and lightly fasten it by hand with the two hexagon nuts 920.02; watch discs 550.01.
8. Fit guard 680.
9. Install complete discharge cover 161 with shaft protecting sleeve 524 in the pump; take care not to damage joint ring 411.11.

7.5.4 Fitting the impeller

- ✓ The notes and steps stated in (⇒ Section 7.5.1, Page 58) to (⇒ Section 7.5.3, Page 60) have been observed/carried out.
 - ✓ The bearing assembly/mechanical seal as well as the individual parts have been placed in a clean and level assembly area.
 - ✓ All dismantled parts have been cleaned and checked for wear.
 - ✓ Any damaged or worn parts have been replaced by original spare parts.
 - ✓ The sealing surfaces have been cleaned.
 - ✓ Impeller bore, shaft and keyways are clean and free from burrs.
1. Insert keys 940.01 into the shaft keyway.
 2. Insert joint ring 411.32.
 3. Coat the impeller seat with a suitable lubricant.
 4. Slide impeller 230 onto shaft 210.
 5. Insert joint ring 411.31.
 6. Fit and tighten impeller nut 922 on shaft 210. (⇒ Section 7.6.2, Page 63)

7.5.5 Fitting the back pull-out unit

	 WARNING
	Back pull-out unit tilting Risk of crushing hands and feet! ▷ Suspend or support the bearing bracket at the pump end.

- ✓ The notes and steps stated in (⇒ Section 7.5.1, Page 58) to (⇒ Section 7.5.4, Page 62) have been observed/carried out.
 - ✓ Any damaged or worn parts have been replaced by original spare parts.
 - ✓ The sealing surfaces have been cleaned.
 - ✓ For back pull-out units supplied without coupling: Fit the coupling in accordance with the manufacturer's instructions.
1. If required, suspend or support the back pull-out unit to prevent it from tilting. Then slide it into volute casing 102 with a new gasket 411.10.
 2. Tighten nut 920.01 at the volute casing.
 3. Bolt support foot 183 to the baseplate.

7.5.6 Mounting the motor



NOTE

Steps 1 and 2 do not apply to versions with spacer-type coupling.

1. Shift the motor to connect it to the pump via the coupling.
2. Fasten the motor to the baseplate.
3. Align pump and motor. (⇒ Section 5.7, Page 30)
4. Connect the motor to the power supply (refer to manufacturer's product literature).

7.6 Tightening torques

7.6.1 Tightening torques

Use a torque wrench to tighten the bolted connections (902.01/920.01) between the volute casing and the bearing bracket lantern.

Table 27: Tightening forces [Nm] for screwed connections

Material of stud/hexagon nut	C35E+Qt/C 35			A4-70/A4-70			1.7709+QT/1.7258+QT 1.6772/1.6722					
Stamp mark on stud/hexagon nut ¹⁴⁾	YK/Y			A4-70/A4-70			GA/G					
Bearing bracket lantern ¹⁵⁾							A	B	A	B	A	B
	New threads ¹⁶⁾	-15 % ¹⁷⁾	-20 % ¹⁷⁾	New threads ¹⁶⁾	-15 % ¹⁷⁾	-20 % ¹⁷⁾	New threads ¹⁶⁾		-15 % ¹⁷⁾		-20 % ¹⁷⁾	
M10	-	-	-	30	25,5	24	47	30	39,9	25,5	37,6	24
M12	40	34	32	55	46,7	44	80	55	68	46,7	64	44
M16	100	85	80	155	131,7	124	190	155	161,5	131,7	152	124
M20	-	-	-	200	170	160	330	200	280,5	170	264	160

7.6.2 Tightening torques for the impeller nut

Observe the following tightening torques for impeller nut (922):

Table 28: Tightening torques for the impeller nut

Bearing bracket	Tightening torques [Nm]	Width across flats [mm]
UP02	80	22
UP03	125	27
UP04	200	32
UP05	300	41
UP06	520	55
P08s	1000	60

Re-tighten the impeller nut some 20 to 30 minutes after assembly.

¹⁴⁾ Treat unstamped screwed connections like material pair C35/E+QT/C 35.

¹⁵⁾ A: made of ductile material – except for JL 1040; B: made of material JL 1040

¹⁶⁾ These values are determined on the basis of a friction coefficient of $\mu = 0.12$.

¹⁷⁾ After repeated tightening of the threads and in case of good lubrication the values shall be reduced by 15 to 20 %.

7.7 Spare parts stock

7.7.1 Ordering spare parts

Always quote the following data when ordering replacement or spare parts:

- Order number
- Order item number
- Type series
- Size
- Material variant
- Year of construction

Refer to the name plate for all data.

Also specify the following data:

- Part number and description
- Quantity of spare parts
- Shipping address
- Mode of dispatch (freight, mail, express freight, air freight)

7.7.2 Recommended spare parts stock for 2 years' operation to DIN 24296

Table 29: Quantity of spare parts for recommended spare parts stock

Part No.	Description	Number of pumps (including stand-by pumps)						
		2	3	4	5	6 and 7	8 and 9	10 and more
210	Shaft	1	1	1	2	2	2	20 %
230	Impeller	1	1	1	2	2	2	20 %
320.02	Angular contact ball bearing (set)	1	1	2	2	2	3	25 %
322.01	Cylindrical roller bearing	1	1	2	2	2	3	25 %
502.01	Casing wear ring	2	2	2	3	3	4	50 %
524.01	Shaft protecting sleeve	2	2	2	3	3	4	50 %
-	Gaskets for pump casing (set)	4	6	8	8	9	12	150 %
-	Torque-transmitting coupling elements (set)	1	1	2	2	3	4	30 %
For variants with mechanical seal:								
433	Mechanical seal complete	1	1	2	2	2	3	25 %
For variants with gland packing:								
456.01	Neck bush	1	1	2	2	2	3	30 %
461.01	Gland packing (set)	4	4	6	6	6	8	100 %

7.7.3 Interchangeability of pump components

Components featuring the same number in a column are interchangeable.


	NOTE
	Volute casing 102 and impeller 230 are not interchangeable between different pump sizes.



Table 30: Interchangeability of pump components

Pump size	Bearing bracket	Description																	
		Casing cover	Support foot	Shaft	Angular contact ball bearing	Cylindrical roller bearing	Bearing bracket	Bearing bracket lantern	Casing wear ring	Thrower	Shaft protecting sleeve ¹⁸⁾	Impeller nut	Mechanical seal	Seal cover	Gland follower	Stuffing box ring	Neck bush	Lantern ring	Gland packing
		Part No.																	
		161	183	210	320.02	322.01	330	344	502.01	507.01	524.01	922	433	471.07	452.01	454.01	456.01	458.01	461.01
25-160	UP02	2	2	1	1	1	1	2	25	1	1	1	1	1	1	1	1	1	1
25-200		3	3	1	1	1	1	3	25	1	1	1	1	1	1	1	1	1	1
32-125		1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
32-160		2	2	1	1	1	1	2	1	1	1	1	1	1	1	1	1	1	1
32-200		3	3	1	1	1	1	3	1	1	1	1	1	1	1	1	1	1	1
40-160		2	2	1	1	1	1	2	2	1	1	1	1	1	1	1	1	1	1
40-200		3	3	1	1	1	1	3	2	1	1	1	1	1	1	1	1	1	1
50-160		2	3	1	1	1	1	2	3	1	1	1	1	1	1	1	1	1	1
50-200		3	3	1	1	1	1	3	3	1	1	1	1	1	1	1	1	1	1
32-250	UP03	6	5	2	2	2	2	6	6	2	2	2	2	2	2	2	2	2	2
40-250		6	5	2	2	2	2	6	5	2	2	2	2	2	2	2	2	2	2
40-315		7	6	2	2	2	2	7	5	2	2	2	2	2	2	2	2	2	2
50-250		6	5	2	2	2	2	6	4	2	2	2	2	2	2	2	2	2	2
50-315		7	7	2	2	2	2	7	7	2	2	2	2	2	2	2	2	2	2
65-160		4	4	2	2	2	2	4	7	2	2	2	2	2	2	2	2	2	2
65-200		5	5	2	2	2	2	5	8	2	2	2	2	2	2	2	2	2	2
65-250		6	6	2	2	2	2	6	8	2	2	2	2	2	2	2	2	2	2
80-160		4	5	2	2	2	2	4	9	2	2	2	2	2	2	2	2	2	2
80-200	UP04	5	5	2	2	2	2	5	10	2	2	2	2	2	2	2	2	2	2
80-250		6	7	2	2	2	2	6	11	2	2	2	2	2	2	2	2	2	2
100-200		5	6	2	2	2	2	5	12	2	2	2	2	2	2	2	2	2	2
65-315		9	8	3	2	2	2	7	9	3	3	3	3	3	3	3	3	3	3
80-315		9	9	3	2	2	2	7	12	3	3	3	3	3	3	3	3	3	3
80-400		10	10	3	2	2	2	8	27	3	3	3	3	3	3	3	3	3	3
100-250		8	8	3	2	2	2	6	13	3	3	3	3	3	3	3	3	3	3
100-315		9	9	3	2	2	2	7	14	3	3	3	3	3	3	3	3	3	3
100-400		10	10	3	2	2	2	8	14	3	3	3	3	3	3	3	3	3	3
125-250	UP05	8	9	3	2	2	2	6	15	3	3	3	3	3	3	3	3	3	3
125-315		9	10	3	2	2	2	7	16	3	3	3	3	3	3	3	3	3	3
125-400		10	11	3	2	2	2	8	15	3	3	3	3	3	3	3	3	3	3
150-250		8	10	3	2	2	2	6	16	3	3	3	3	3	3	3	3	3	3
150-315		12	12	4	3	3	3	10	18	4	4	4	4	4	4	4	4	4	4
150-400		13	12	4	3	3	3	11	18	4	4	4	4	4	4	4	4	4	4
150-500		14	14	4	3	3	3	12	18	4	4	4	4	4	4	4	4	4	4

¹⁸⁾ Depending on mechanical seal type

Pump size	Bearing bracket	Description																																			
		Casing cover		Support foot		Shaft		Angular contact ball bearing		Cylindrical roller bearing		Bearing bracket		Bearing bracket lantern		Casing wear ring		Thrower		Shaft protecting sleeve ¹⁸⁾		Impeller nut		Mechanical seal		Seal cover		Gland follower		Stuffing box ring		Neck bush		Lantern ring		Gland packing	
		Part No.																																			
		161	183	210	320.02	322.01	330	344	502.01	507.01	524.01	922	433	471.07	452.01	454.01	456.01	458.01	461.01																		
200-250	UP05	11	13	4	3	3	3	9	17	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4			
200-315		12	13	4	3	3	3	10	19	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4				
200-400		13	13	4	3	3	3	11	20	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4			
200-500		14	17	4	3	3	3	12	28	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4		
250-315		12	16	5	3	3	3	10	21	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4		
250-400	UP06	15	17	6	4	4	4	11	22	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5		
250-500		16	15	6	4	4	4	12	23	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5			
300-400	P08s	17	15	7	4	4	5	13	22	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6		
300-500		18	18	7	4	4	5	14	24	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6			
350-400		17	18	8	4	4	5	13	26	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6			
350-500		18	18	7	4	4	5	14	26	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6		

8 Trouble-shooting

	 WARNING
	Improper work to remedy faults Risk of injury! <p>► For any work performed to remedy faults, observe the relevant information given in this operating manual and/or in the product literature provided by the accessories manufacturer.</p>

If problems occur that are not described in the following table, consultation with the KSB service is required.

- A** Pump delivers insufficient flow rate
- B** Motor is overloaded
- C** Excessive discharge pressure
- D** Increased bearing temperature
- E** Leakage at the pump
- F** Excessive leakage at the shaft seal
- G** Vibrations during pump operation
- H** Impermissible temperature increase in the pump

Table 31: Trouble-shooting

A	B	C	D	E	F	G	H	Possible cause	Remedy ¹⁹⁾
X	-	-	-	-	-	-	-	Pump delivers against an excessively high pressure.	Re-adjust to duty point. Check system for impurities. Fit a larger impeller. ²⁰⁾ Increase the speed (turbine, I.C. engine).
X	-	-	-	-	-	X	X	Pump or piping are not completely vented or primed.	Vent and/or prime.
X	-	-	-	-	-	-	-	Supply line or impeller clogged	Remove deposits in the pump and/or piping.
X	-	-	-	-	-	-	-	Formation of air pockets in the piping	Alter piping layout. Fit vent valve.
X	-	-	-	-	-	X	X	Suction lift is too high/NPSH _{available} (positive suction head) is too low.	Check/alter fluid level. Install pump at a lower level. Fully open the shut-off element in the suction line. Change suction line, if the friction losses in the suction line are too high. Check any strainers installed/suction opening. Observe permissible speed of pressure fall.
X	-	-	-	-	-	-	-	Air intake at the shaft seal	Clean barrier fluid duct, supply external barrier fluid, if necessary, or increase barrier fluid pressure. Replace shaft seal.
X	-	-	-	-	-	-	-	Wrong direction of rotation	Check the electrical connection of the motor and the control system, if any.
X	-	-	-	-	-	-	-	Speed is too low. ²⁰⁾ - Operation with frequency inverter - Operation without frequency inverter	- Increase voltage/frequency at the frequency inverter in the permissible range. - Check voltage.
X	-	-	-	-	-	X	-	Impeller	Replace worn components by new ones.

¹⁹⁾ Pump pressure must be released before attempting to remedy faults on parts which are subjected to pressure.

²⁰⁾ Contact KSB.

A	B	C	D	E	F	G	H	Possible cause	Remedy ¹⁹⁾
-	X	-	-	-	-	X	-	Pump back pressure is lower than specified in the purchase order.	Re-adjust to duty point. In the case of persistent overloading, turn down impeller. ²⁰⁾
-	X	-	-	-	-	-	-	Density or viscosity of fluid handled higher than stated in purchase order	Contact KSB.
-	X	-	-	-	X	-	-	Gland follower over-tightened or cocked	Correct.
-	X	X	-	-	-	-	-	Speed is too high.	Reduce speed. ²⁰⁾
-	-	-	-	X	-	-	-	Defective gasket	Fit new gasket between volute casing and casing cover.
-	-	-	-	-	X	-	-	Worn shaft seal	Fit new shaft seal. Check flushing liquid/barrier fluid.
X	-	-	-	-	X	-	-	Score marks or roughness on shaft protecting sleeve / shaft sleeve	Replace shaft protecting sleeve/shaft sleeve. Fit new shaft seal.
-	-	-	-	-	X	-	-	Vibrations during pump operation	Correct suction conditions. Re-align the pump. Re-balance the impeller. Increase pressure at the pump suction nozzle.
-	-	-	X	-	X	X	-	The pump set is misaligned.	Re-align.
-	-	-	X	-	X	X	-	Pump is warped or sympathetic vibrations in the piping.	Check the piping connections and secure fixing of pump; if required, reduce distances between the pipe clamps. Fix the pipelines using anti-vibration material.
-	-	-	X	-	-	X	-	Insufficient or excessive quantity of lubricant or unsuitable lubricant.	Top up, reduce or change lubricant.
-	-	-	X	-	-	-	-	Non-compliance with specified coupling distance	Correct the distance according to general arrangement drawing.
X	X	-	-	-	-	-	-	Motor is running on two phases only.	Replace the defective fuse. Check the electric cable connections.
-	-	-	-	-	-	X	-	Rotor out of balance	Clean the impeller. Re-balance the impeller.
-	-	-	-	-	-	X	-	Defective bearing(s)	Replace.
-	-	-	-	-	-	X	X	Flow rate is too low.	Increase the minimum flow rate.
-	-	-	-	-	X	-	-	Incorrect inflow of circulation liquid	Increase the free cross-section.

9 Related Documents

Technical drawing of a mechanical assembly in cross-section, showing various components and their part numbers. The drawing includes the following part numbers:

- 102
- 230
- 903.03
- 411.03
- 524.01
- 412.01
- 903.02
- 411.02
- 411.11
- 344
- 901.31
- 914.01
- 400.01
- 902.04
- 920.04
- 322.01
- 330
- 672
- 932.02
- 550.23
- 320.02
- 400.02
- 914.02
- 920.21
- 360.02
- 210
- 940.02
- 421.02
- 931.01
- 901.04
- 930.01
- 914.04
- 183
- D00462
- 638
- 903.16/17
- 411.16/17
- 903.18
- 411.18
- 903.04
- 411.04
- 922
- 502.01
- 561.01
- 903.01
- 411.01
- 411.31
- 940.01
- 161
- 411.32
- 561.02
- 902.01
- 920.01
- 507.01
- 360.01
- 421.01
- 932.01
- 903.46
- 411.46

Fig. 21: General assembly drawing of standard version (oil-lubricated)

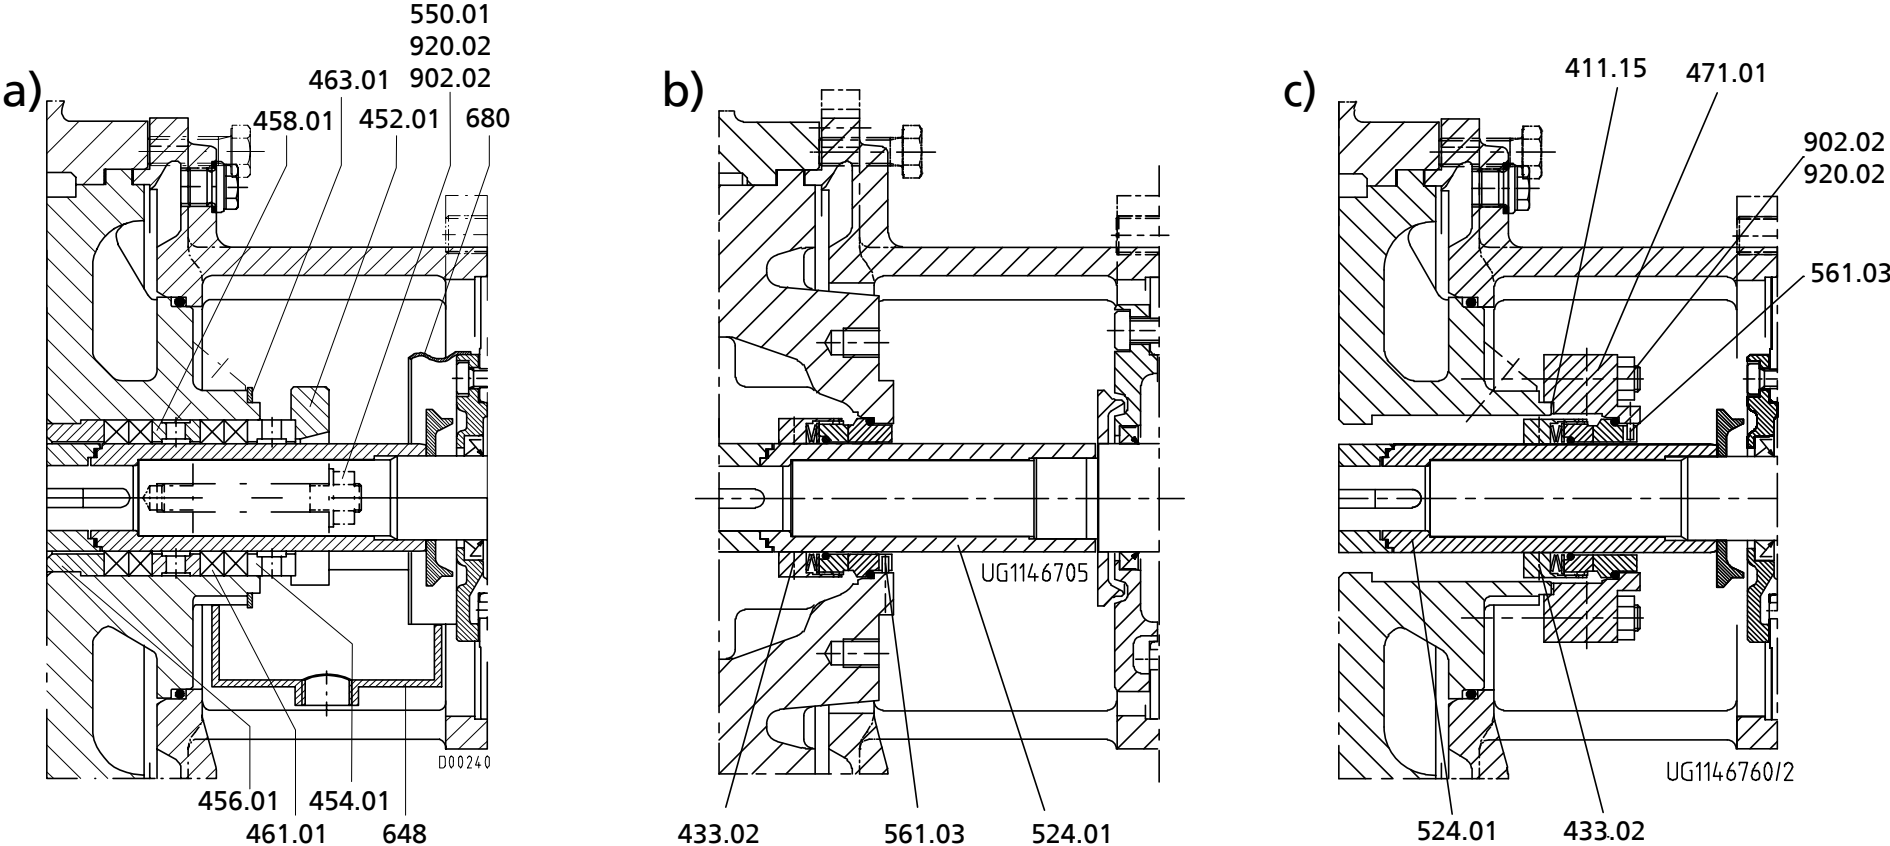


Fig. 22: Variant with gland packing (a), Mechanical seal with conical casing cover (b), Mechanical seal with cylindrical casing cover (c)

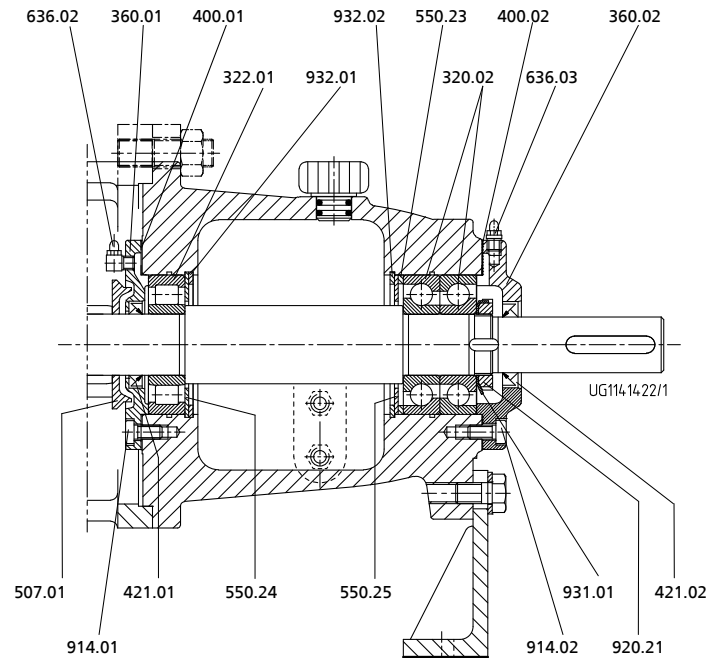


Fig. 23: Grease-lubricated version

Table 32: List of components

Part No.	Comprising	Description
102	102	Volute casing
	411.01/.03/.10 ²¹⁾	Joint ring
	502.01 ²²⁾	Casing wear ring
	902.01	Stud
	903.01/.03	Screw plug
	920.01	Hexagon nut
161	161	Casing cover
	411.11/.16/.17	Joint ring
	412.01 ²³⁾	O-ring

²¹ Joint ring 411.10 (and 411.15 for versions with mechanical seal) depending on the operating temperature. To be ordered separately in spare parts order.

²² For CPKN-S only.

²³ Not fitted on pump version with conical seal chamber.

Part No.	Comprising	Description
161	902.02	Stud ²⁴⁾
	903.16/.17	Screw plug
	920.02	Hexagon nut
183	183	Support foot
	901.04 ²⁵⁾	Hexagon head bolt
	930.01	Spring washer
210	210	Shaft
	920.21	Slotted round nut
	931.01	Lockwasher
	940.01/.02	Key
230	230	Impeller
	411.32	Joint ring
	412.06 ²¹⁾	O-ring
320.02	320.02	Angular contact ball bearing
322.01	322.01	Cylindrical roller bearing
330	330	Bearing bracket
330	330	Bearing bracket, complete
	360.01/.02	Bearing cover
	400.01/.02	Gasket
	411.46	Joint ring
	421.01/.02	Lip seal
	550.23	Support disc
	638 ²⁶⁾	Constant-level oiler
	672	Vent plug
	903.46	Screw plug
	914.01/.02	Hexagon socket head cap screw
	932.01/.02	Circlip
	550.24/.25 ²⁷⁾	Disc
	636.02/.03 ²⁷⁾	Lubricating nipple
344	344	Bearing bracket lantern

²⁴⁾ Not shown in drawing.

²⁵⁾ On bearing bracket UP02: socket head cap screw 914.04.

²⁶⁾ Not applicable for grease-lubricated models.

²⁷⁾ On grease-lubricated models only.

Part No.	Comprising	Description
344	412.01 ²³⁾	O-ring
	561.02	Grooved pin
	903.18	Screw plug
	902.04	Stud
	901.31	Hexagon head bolt
	920.04	Hexagon nut
	411.18	Joint ring
360.01/02	360.01/02	Bearing cover
	400.01/02	Gasket
	914.01/02	Hexagon socket head cap screw
421.01/02	421.01/02	Lip seal
433.01	433.01 ²⁴⁾	Mechanical seal, complete
471.01	471.01	Seal cover ²⁴⁾
	411.15 ²¹⁾	Joint ring
	561.03	Grooved pin
452.01	452.01	Gland follower
454.01	454.01	Stuffing box ring
456.01	456.01	Neck bush
458.01	458.01	Lantern ring
461.01	461.01	Gland packing
463.01	463.01	Drip plate
502.01 ²²⁾	502.01	Casing wear ring
	561.01	Grooved pin
507.01	507.01	Thrower
524.01	524.01	Shaft protecting sleeve
	411.32	Joint ring
638	638	Constant-level oiler
922	922	Impeller nut
	411.31	Joint ring

10 UK Declaration of Conformity

Manufacturer:

KSB SE & Co. KGaA
Johann-Klein-Straße 9

67227 Frankenthal (Germany)

This UK Declaration of Conformity is issued under the sole responsibility of the manufacturer.

The manufacturer herewith declares that **the product**:

CPKN, CPKNO

KSB order number:

- is in conformity with the provisions of the following directives / regulations as amended from time to time:
 - Pump (set): Supply of Machinery (Safety) Regulations 2008
 - Electrical components²⁸⁾: The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

The manufacturer also declares that

- the following harmonised international standards²⁹⁾ have been applied:
 - ISO 12100
 - EN 809
- Applied national technical standards and specifications, in particular:
 - DIN EN ISO 5199

Person authorised to compile the technical file:

Name
 Function
 Address (company)
 Address (street, No.)
 Address (post or ZIP code, city) (country)

The UK Declaration of Conformity was issued in/on:

Place, date

.....³⁰⁾.....

Name
 Function
 Company
 Address

²⁸ Where applicable

²⁹ Apart from the standards listed here referring to the *Supply of Machinery (Safety) Regulations 2008*, further standards are observed for explosion-proof versions (*Equipment and Protective Systems Intended for use in Potentially Explosive Atmospheres Regulations 2016*) as applicable and are listed in the legally binding UK Declaration of Conformity.

³⁰ A signed, legally binding UK Declaration of Conformity is supplied with the product.

11 Certificate of Decontamination

Type:
Order number /
Order item number³¹⁾:
Delivery date:
Application:
Fluid handled³¹⁾:

Please tick where applicable³¹⁾:



Corrosive



Oxidising



Flammable



Explosive



Hazardous to health



Seriously hazardous to health



Toxic



Radioactive



Bio-hazardous



Safe

Reason for return:³¹⁾
Comments:
.....

The product / accessories have been carefully drained, cleaned and decontaminated inside and outside prior to dispatch / placing at your disposal.

We herewith declare that this product is free from hazardous chemicals and biological and radioactive substances.

For mag-drive pumps, the inner rotor unit (impeller, casing cover, bearing ring carrier, plain bearing, inner rotor) has been removed from the pump and cleaned. In cases of containment shroud leakage, the outer rotor, bearing bracket lantern, leakage barrier and bearing bracket or intermediate piece have also been cleaned.

For canned motor pumps, the rotor and plain bearing have been removed from the pump for cleaning. In cases of leakage at the stator can, the stator space has been examined for fluid leakage; if fluid handled has penetrated the stator space, it has been removed.

- ☐ No special safety precautions are required for further handling.
☐ The following safety precautions are required for flushing fluids, fluid residues and disposal:

.....
.....

We confirm that the above data and information are correct and complete and that dispatch is effected in accordance with the relevant legal provisions.

.....
Place, date and signature

.....
Address

.....
Company stamp

³¹⁾ Required field

Index

A

Abrasive fluids 45
Applications 9
Aufheizgeschwindigkeit 39
Auxiliary connections 28

B

Bearing temperature 49
Bearings 18

C

Certificate of Decontamination 76
Clearances 50
Commissioning 35
Constant level oiler 35
Contact guard 20
Coupling 20, 50
Coupling alignment 29, 30

D

Design 16, 19
Designation 16
Diametral clearances 50
Direction of rotation 34
Disassembly 54
Disposal 15
Drive 20

E

Event of damage 7
 Ordering spare parts 64
Explosion protection 22, 28, 31, 32, 33, 34, 37, 38, 40, 43, 47, 48, 49, 50, 51

F

Faults
 Causes and remedies 67
Filter 25, 51
Final check 37
Flow rate 44
Fluid handled
 Density 44
Frequency of starts 43, 44
Function 19

G

General assembly drawing 70
Gland packing 41
Grease lubrication
 Grease quality 53
 Intervals 52

H

Heating 39
Heating up 39

I

Impeller type 17
Installation
 Installation on a foundation 23
 without foundation 24
Installation at site 22
Intended use 9
Interchangeability of pump components 64

K

Keeping warm 39
Key to safety symbols/markings 8

L

Leakage rate 41

M

Maintenance 48
Mechanical seal 41
Monitoring equipment 12

N

Name plate 16
Noise characteristics 20

O

Oil lubrication
 Intervals 51
 Oil quality 51
 Oil quantity 52
Operating limits 43
Order number 7
Other applicable documents 7

P

Partly completed machinery 7
Permissible forces and moments at the pump nozzles 26
Piping 25
Preservation 14, 45
Priming and venting 37
Product description 16
Pump casing 17
Pure graphite packing 41

R

Return to supplier 14
Returning to service 45
Running noises 48, 49

S

Safety 9
Safety awareness 10
Scope of supply 20
Shaft seal 17
Shutdown 42, 45
Spare part
 Ordering spare parts 64
Spare parts stock 64
Special accessories 20
Start-up 40
Storage 14, 45

T

Temperature difference 39
Temperature limits 11, 12
Tightening torques 63
Transport 13

W

Warnings 8
Warranty claims 7
Water cooling 38



KSB SE & Co. KGaA

Johann-Klein-Straße 9 • 67227 Frankenthal (Germany)

Tel. +49 6233 86-0

www.ksb.com

2730.807/01-EN (05151573)