

Control Valve

BOA-CVP H

Operating Manual



Legal information/Copyright

Operating Manual BOA-CVP H

All rights reserved. The contents provided herein must neither be distributed, copied, reproduced, edited or processed for any other purpose, nor otherwise transmitted, published or made available to a third party without the manufacturer's express written consent.

Subject to technical modification without prior notice.

© KSB SE & Co. KGaA, Frankenthal 13/09/2022

Contents

	Glossary	5
1	General.....	6
1.1	Principles	6
1.2	Installation of partly completed machinery.....	6
1.3	Target group.....	6
1.4	Other applicable documents.....	6
1.5	Symbols	6
1.6	Key to safety symbols/markings.....	7
2	Safety	8
2.1	General.....	8
2.2	Intended use	8
2.2.1	Prevention of foreseeable misuse	8
2.3	Personnel qualification and training.....	9
2.4	Consequences and risks caused by non-compliance with this manual	9
2.5	Safety awareness	9
2.6	Safety information for the operator/user	9
2.7	Safety information for maintenance, inspection and installation	10
2.8	Unauthorised modes of operation	10
3	Transport/Storage/Disposal	11
3.1	Checking the condition upon delivery	11
3.2	Transport.....	11
3.3	Storage/preservation	11
3.4	Return to supplier.....	12
3.5	Disposal	13
4	Valve Description	14
4.1	General description	14
4.2	Product information.....	14
4.2.1	Product information as per Regulation No. 1907/2006 (REACH)	14
4.2.2	Product information as per Pressure Equipment Directive 2014/68/EU (PED).....	14
4.2.3	Product information as per UK Pressure Equipment (Safety) Regulations 2016	14
4.2.4	Product information as per Directive 2014/34/EU (ATEX)	14
4.2.5	Product information as per UK Equipment and Protective Systems Intended for Use in Potentially Explosive Atmospheres Regulations 2016	14
4.3	Marking.....	14
4.4	Name plate.....	15
4.5	Design details.....	16
4.6	Function	18
4.7	Scope of supply.....	18
4.8	Noise characteristic.....	18
5	Installation at Site	19
5.1	General information/Safety regulations	19
5.2	Installation position.....	19
5.3	Preparing the valve	20
5.4	Piping	21
5.4.1	Flanged connection	21
5.5	Insulation	22
6	Commissioning/Start-up/Shutdown	23
6.1	Commissioning/start-up	23
6.1.1	Prerequisites for commissioning/start-up	23
6.1.2	Actuation/operation	23
6.1.3	Functional check	24
6.2	Operating limits.....	24

6.2.1	Ambient temperature.....	24
6.2.2	Pressure/temperature ratings.....	24
6.3	Shutdown.....	25
6.3.1	Measures to be taken for shutdown	25
6.4	Returning to service	25
7	Servicing/Maintenance	26
7.1	Safety regulations.....	26
7.2	Servicing/Maintenance.....	27
7.2.1	Supervision of operation	27
7.2.2	Inspection work.....	27
7.2.3	Valves with actuator	27
7.3	Dismantling the valve.....	27
7.3.1	General information/Safety regulations.....	27
7.3.2	Preparing the valve.....	28
7.3.3	Removing the stem seal.....	28
7.3.4	Removing the trim components	30
7.4	Assembling the valve.....	32
7.4.1	General information/Safety regulations.....	32
7.4.2	Fitting the stem seal	33
7.4.3	Fitting the trim components	35
7.5	Tightening torques.....	38
8	Trouble-shooting.....	40
9	Related Documents	41
9.1	General assembly drawing with list of components	41
9.2	Maximum permissible closing pressures	42
9.2.1	Spring-to-close	42
9.2.2	Air-to-close	45
9.3	Flow characteristics.....	47
9.3.1	Equal-percentage characteristics, rangeability 50:1	47
9.3.2	Linear characteristics, rangeability 50:1	48
9.4	Dimensions and weights of BOA-CVP H control valve.....	49
9.5	Dimensions and weights of actuator	50
10	EU Declaration of Conformity for BOA-CVE H, BOA-CVP H	51
11	UK Declaration of Conformity for BOA-CVE H, BOA-CVP H.....	52
12	Certificate of Decontamination.....	53
	Index	54

Glossary

ATEX 2014/34/EU

The acronym ATEX is the French abbreviation for explosive atmospheres: "Atmosphère explosible". The ATEX product directive 2014/34/EU lays down rules to be met by equipment and protective systems intended for use in potentially explosive atmospheres in the European Union (EU).

Certificate of decontamination

A certificate of decontamination is enclosed by the customer when returning the product to the manufacturer to certify that the product has been properly drained to eliminate any environmental and health hazards arising from components in contact with the fluid handled.

Equipment and Protective Systems Intended for Use in Potentially Explosive Atmospheres Regulations 2016

The product regulations Equipment and Protective Systems Intended for Use in Potentially Explosive Atmospheres Regulations 2016 lay down rules to be met by equipment and protective systems intended for use in potentially explosive atmospheres in the United Kingdom (except Northern Ireland).

Pressure Equipment (Safety) Regulations 2016 (PER)

The Pressure Equipment (Safety) Regulations 2016 set out the requirements to be met by pressure equipment intended to be placed on the UK market (except Northern Ireland).

Pressure Equipment Directive 2014/68/EU (PED)

The 2014/68/EU Directive sets out the requirements to be met by pressure equipment intended to be placed on the market in the European economic area.

1 General

1.1 Principles

This operating manual is valid for the type series and variants indicated on the front cover.

The operating manual describes the proper and safe use of this equipment in all phases of operation.

The name plate indicates the type series and size, the main operating data, the order number and the order item number. The order number and order item number uniquely identify the valve and serve as identification for all further business processes.

In the event of damage, immediately contact your nearest KSB sales organisation responsible to maintain the right to claim under warranty.

1.2 Installation of partly completed machinery

To install partly completed machinery supplied by KSB refer to the sub-sections under Installation at Site.

1.3 Target group

This operating manual is aimed at the target group of trained and qualified specialist technical personnel.

1.4 Other applicable documents


Table 1: Overview of other applicable documents

Document	Contents
Type series booklet	Description of the technical data of the valve
Actuator operating manual	Proper and safe use of the actuator in all phases of operation
Flow characteristics ¹⁾	Information on Kv and zeta values
General assembly drawing ²⁾	Sectional drawing of the valve
Sub-supplier product literature ³⁾	Operating manuals and other product literature for the accessories

Observe the relevant manufacturer's product literature for the accessories.

1.5 Symbols

Table 2: Symbols used in this manual

Symbol	Description
✓	Conditions which need to be fulfilled before proceeding with the step-by-step instructions
▷	Safety instructions
⇒	Result of an action
⇔	Cross-references
1. 2.	Step-by-step instructions
	Note Recommendations and important information on how to handle the product







¹ If any

² If included in agreed scope of supply; otherwise refer to the type series booklet.

³ If included in agreed scope of supply.

1.6 Key to safety symbols/markings

Table 3: Definition of safety symbols/markings

Symbol	Description
 DANGER	DANGER This signal word indicates a high-risk hazard which, if not avoided, will result in death or serious injury.
 WARNING	WARNING This signal word indicates a medium-risk hazard which, if not avoided, could result in death or serious injury.
 CAUTION	CAUTION This signal word indicates a hazard which, if not avoided, could result in damage to the machine and its functions.
	General hazard In conjunction with one of the signal words this symbol indicates a hazard which will or could result in death or serious injury.
	Electrical hazard In conjunction with one of the signal words this symbol indicates a hazard involving electrical voltage and identifies information about protection against electrical voltage.
	Machine damage In conjunction with the signal word CAUTION this symbol indicates a hazard for the machine and its functions.



2 Safety

All the information contained in this section refers to hazardous situations.

In addition to the present general safety information the action-related safety information given in the other sections must be observed.

2.1 General

- This operating manual contains general installation, operating and maintenance instructions that must be observed to ensure safe operation of the system and prevent personal injury and damage to property.
- Comply with all the safety instructions given in the individual sections of this operating manual.
- The operating manual must be read and understood by the responsible specialist personnel/operators prior to installation and commissioning.
- The contents of this operating manual must be available to the specialist personnel at the site at all times.
- Information and markings attached directly to the product must always be complied with and kept in a perfectly legible condition at all times. This applies to, for example:
 - Flow direction arrow
 - Name plate
 - Valve body material
- The operator is responsible for ensuring compliance with all local regulations not taken into account.
- The design, manufacture and testing of the valve are subject to a QM system to DIN EN ISO 9001 as well as the current regulations and directives for pressure equipment.
- Bear in mind that valves exposed to creep-rupture conditions have a limited service life and have to meet the applicable regulations stipulated in the technical codes.
- In the case of customised special variants, further restrictions may apply with regard to the operating mode and service life. Refer to the relevant sales documentation for applicable limitations.
- The operator is responsible for ensuring compliance with all local regulations not taken into account.
- The operator is responsible for any eventualities or incidents which may occur during installation performed by the customer, operation and maintenance.

2.2 Intended use

- Only operate valves and actuators which are in perfect technical condition.
- Do not operate partially assembled valves or actuators.
- Only use the valve for fluids specified in the product literature. Take the design and material variant into account.
- Only operate the valve within the operating limits described in the other applicable documents.
- Only operate the actuator within the permissible ambient temperature limits.
- Consult the manufacturer about any other modes of operation not described in the product literature.
- Do not use the valve or actuator as a foothold.

2.2.1 Prevention of foreseeable misuse

- Never exceed the permissible application and operating limits specified in the data sheet or product literature regarding temperature, etc.
- Observe all safety information and instructions in this manual.

2.3 Personnel qualification and training

- All personnel involved must be fully qualified to transport, install, operate, maintain and inspect the product this manual refers to and be fully aware of the interaction between the valve and the system.
- The responsibilities, competence and supervision of all personnel involved in transport, installation, operation, maintenance and inspection must be clearly defined by the operator.
- Deficits in knowledge must be rectified by means of training and instruction provided by sufficiently trained specialist personnel. If required, the operator can commission the manufacturer/supplier to train the personnel.
- Hands-on training at the valve and the actuator must always be supervised by specialist technical personnel.

2.4 Consequences and risks caused by non-compliance with this manual

- Non-compliance with these operating instructions will lead to forfeiture of warranty cover and of any and all rights to claims for damages.
- Non-compliance can, for example, have the following consequences:
 - Hazards to persons due to electrical, thermal, mechanical and chemical effects and explosions
 - Failure of important product functions
 - Failure of prescribed maintenance and servicing practices
 - Hazard to the environment due to leakage of hazardous substances

2.5 Safety awareness

In addition to the safety information contained in this operating manual and the intended use, the following safety regulations shall be complied with:

- Accident prevention, health regulations and safety regulations
- Explosion protection regulations
- Safety regulations for handling hazardous substances
- Applicable standards, directives and laws

2.6 Safety information for the operator/user

- Actuator-operated valves are intended for use in areas which cannot be accessed by unauthorised persons. Operation of these valves in areas accessible to unauthorised persons is only permitted if appropriate protective devices are fitted at the site. This must be ensured by the operator.
- Fit protective equipment (e.g. contact guards) supplied by the operator for hot, cold or moving parts, and check that the equipment functions properly. Do not touch rotating parts.
- Do not remove any protective equipment (e.g. contact guards) during operation.
- Provide the personnel with protective equipment and make sure it is used.
- Contain any leakage of hazardous fluids (e.g. explosive, toxic, hot) so as to avoid any danger to persons and the environment. Adhere to all relevant laws.
- Eliminate all electrical hazards. (In this respect refer to the applicable national safety regulations and/or regulations issued by the local energy supply companies.)

2.7 Safety information for maintenance, inspection and installation

- Modifications or alterations of the valve require the manufacturer's prior consent.
- Use only original spare parts or parts/components authorised by the manufacturer. The use of other parts/components can invalidate any liability of the manufacturer for resulting damage.
- The operator ensures that maintenance, inspection and installation are performed by authorised, qualified specialist personnel who are thoroughly familiar with the manual.
- Carry out work on the valve during standstill only.
- The valve body must have cooled down to ambient temperature.
- The pressure in the valve body must have been released and the valve must have been drained.
- When taking the valve out of service always adhere to the procedure described in the manual.
- The actuator must be disconnected from the external source of energy.
- Decontaminate valves which handle fluids posing a health hazard.
- Protect the valve body and body bonnet/cover from any impacts.
- As soon as the work has been completed, re-install and re-activate any safety-relevant devices and protective devices. Before returning the product to service, observe all instructions on commissioning.

2.8 Unauthorised modes of operation

Never operate the control valve outside the limits stated in the data sheet and in the operating manual.



The warranty relating to the operating reliability and safety of the control valve supplied is only valid if the control valve is used in accordance with its intended use .

3 Transport/Storage/Disposal

3.1 Checking the condition upon delivery

1. On transfer of goods, check each packaging unit for damage.
2. In the event of in-transit damage, assess the exact damage, document it and notify KSB or the supplying dealer and the insurer about the damage in writing immediately.

3.2 Transport

	<div style="background-color: #e67e22; color: white; padding: 5px; margin-bottom: 10px;">  DANGER </div> <p>The valve/actuator unit could slip out of the suspension arrangement. Danger to life from falling parts!</p> <ul style="list-style-type: none"> ▷ Only transport the valve/actuator unit in the specified position. ▷ Never attach lifting accessories to the actuator. ▷ Observe the information on weights, centre of gravity and fastening points. ▷ Observe the applicable local accident prevention regulations. ▷ Use suitable, permitted lifting accessories, e.g. self-tightening lifting tongs.
---	---

To transport the valve, suspend it from the lifting tackle as illustrated.

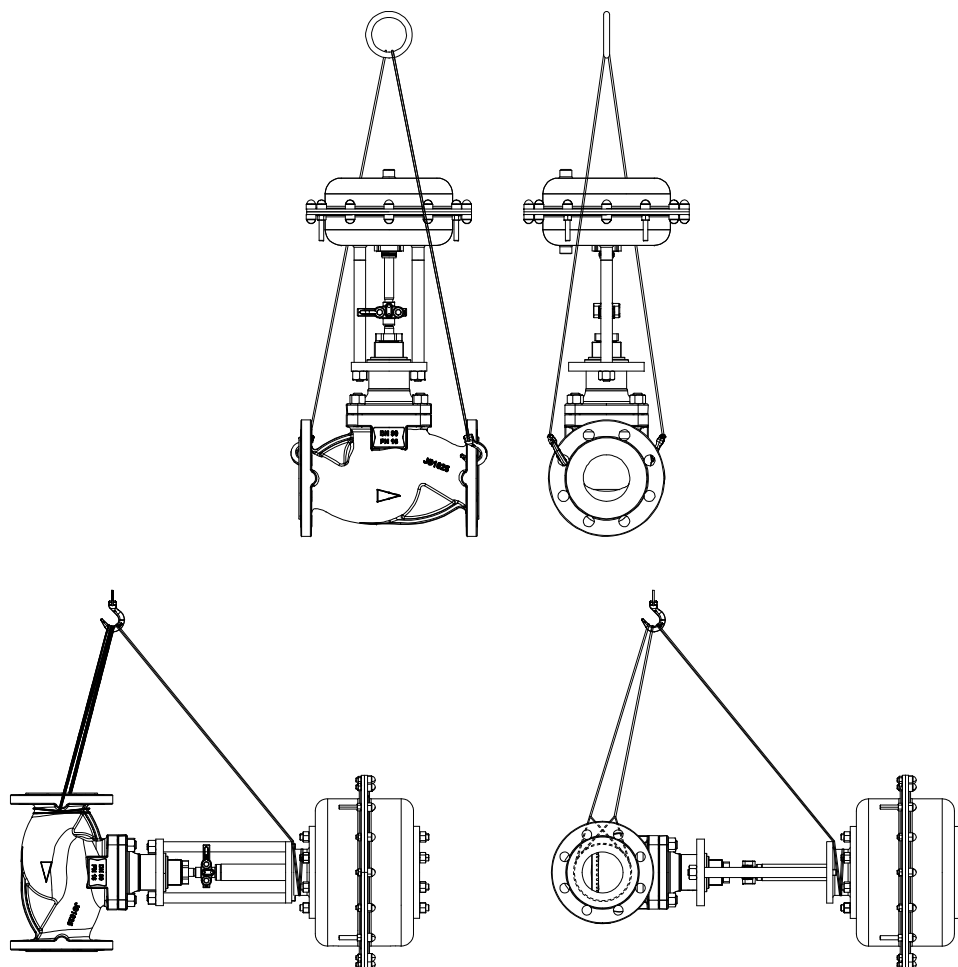




Fig. 1: Transporting a valve with pneumatic actuator

3.3 Storage/preservation

If commissioning is to take place some time after delivery, we recommend that the following measures be taken for storing the valve:

	<p>CAUTION</p> <p>Damage due to frost, humidity or dirt Corrosion/contamination of the valve!</p> <ul style="list-style-type: none"> ▷ Store the valve in a dry, dust-free and vibration-free, frost-proof room where the atmospheric humidity is as constant as possible. ▷ Protect the valve against contamination, e.g. with suitable caps or film.
	<p>CAUTION</p> <p>Damage due to excessive valve closing force Damage to the seat/disc interface!</p> <ul style="list-style-type: none"> ▷ Store the valve in the closed position. ▷ For soft-seated valves, ensure that the valve is closed using little force only. This will prevent premature cold flow (compression set) of the thermoplastic material.

Storage and/or temporary storage of the valves must ensure that even after a prolonged period of storage the valves' function is not impaired.

The temperature in the storage room must not exceed +40 °C.

Cover the actuators to protect them from dust and dirt, and protect them from mechanical damage.

If properly stored indoors, the equipment is protected for a maximum of 12 months. New valves are supplied by our factory duly prepared for storage.



For storing a valve which has already been operated, observe the measures to be taken for shutdown. (⇒ Section 6.3, Page 25)

3.4 Return to supplier

1. Drain the valve as described in the manual.
2. Flush and clean the valve, particularly if it has been used for handling noxious, explosive, hot or other hazardous fluids.
3. If the valve has handled fluids whose residues could lead to corrosion damage in the presence of atmospheric humidity or could ignite upon contact with oxygen also neutralise the valve and blow through with anhydrous inert gas to ensure drying.
4. When returning valves used for handling Fluids in Group 1 always complete and enclose a certificate of decontamination.
Indicate any safety measures and decontamination measures taken.

	<p>NOTE</p> <p>If required, a blank certificate of decontamination can be downloaded from the following web site: www.ksb.com/certificate_of_decontamination</p>
---	---

3.5 Disposal

	<div data-bbox="507 232 703 282"> WARNING</div> <p data-bbox="496 297 1412 365">Fluids handled, consumables and supplies which are hot or pose a health hazard Hazard to persons and the environment!</p> <ul data-bbox="518 376 1412 515" style="list-style-type: none">▸ Collect and properly dispose of flushing fluid and any residues of the fluid handled.▸ Wear safety clothing and a protective mask if required.▸ Observe all legal regulations on the disposal of fluids posing a health hazard.
---	---

1. Dismantle the valve.
Collect greases and other lubricants during dismantling.
2. Separate and sort the valve materials, e.g. by:
 - Metals
 - Plastics
 - Electronic waste
 - Greases and other lubricants
3. Dispose of materials in accordance with local regulations or in another controlled manner.

4 Valve Description

4.1 General description

- Control valve with pneumatic actuator

Valve for controlling and shutting off fluids in industrial plant, process engineering, plant engineering, cooling circuits and heating systems.

4.2 Product information

4.2.1 Product information as per Regulation No. 1907/2006 (REACH)

For information as per chemicals Regulation (EC) No. 1907/2006 (REACH), see <https://www.ksb.com/ksb-en/About-KSB/Corporate-responsibility/reach/>.

4.2.2 Product information as per Pressure Equipment Directive 2014/68/EU (PED)

The valves satisfy the safety requirements of Annex I of the European Pressure Equipment Directive 2014/68/EU (PED) for fluids in Groups 1 and 2.

4.2.3 Product information as per UK Pressure Equipment (Safety) Regulations 2016

The valves satisfy the safety requirements of the UK Pressure Equipment (Safety) Regulations 2016 (PER) for fluids in Groups 1 and 2.

4.2.4 Product information as per Directive 2014/34/EU (ATEX)



Version in compliance with European directive ATEX 2014/34/EU on request.

4.2.5 Product information as per UK Equipment and Protective Systems Intended for Use in Potentially Explosive Atmospheres Regulations 2016

Version in compliance with UK Equipment and Protective Systems Intended for Use in Potentially Explosive Atmospheres Regulations 2016 on request.

4.3 Marking

Table 4: General marking

Description	Marking
Nominal size	DN ...
Nominal pressure class	PN ...
Manufacturer	KSB
Type series/Model	BOA-...
Year of construction	20..
Material
Flow direction arrow	→
Traceability of the material
CE marking	
Identification number of the notified body	0036
UKCA marking	
Identification number of the approved body	0168
Customer's marking	e.g. plant/system No., etc.
Factory marking	Inspector's stamp mark on the flange following the successful final inspection and testing of the valve

7525.82/07-EN

In accordance with the current regulations and directives for pressure equipment the valves are marked as shown in the following table:

Fluids in Groups 1 and 2



PN	DN									
	≤25	32	40	50	65	80	100	125	150	≥200
10										
16										
25										
≥40										

Fig. 2: CE marking



PN	DN									
	≤25	32	40	50	65	80	100	125	150	≥200
10										
16										
25										
≥40										

Fig. 3: UKCA marking

Fluid groups In accordance with the current regulations and directives for pressure equipment, Group 1 comprises all fluids posing physical or health hazards, e.g. fluids defined as

- Explosive
- Extremely flammable
- Highly flammable
- Flammable: The maximum allowable temperature is above flashpoint.
- Very toxic
- Toxic
- Oxidising

Fluid group 2 comprises all other fluids not referred to in Group 1.

4.4 Name plate

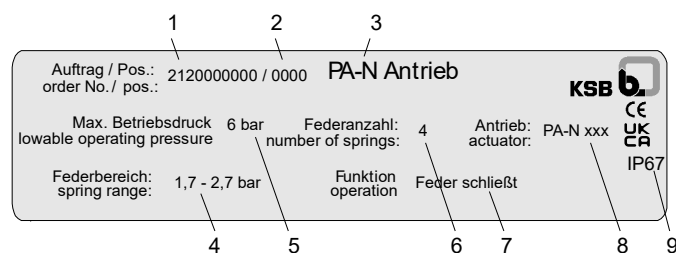


Fig. 4: Actuator name plate (example)

1	Order number	2	Order item number
3	Product name	4	Spring range
5	Maximum operating pressure	6	Number of springs
7	Function	8	Actuator size
9	Enclosure		

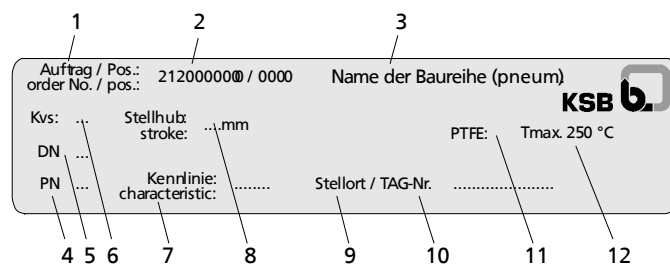


Fig. 5: Valve name plate (example)

1	Order number	2	Order item number
3	Product name	4	Nominal pressure class
5	Nominal size (DN)	6	Kvs value
7	Characteristic curve	8	Actuator stroke
9	Point of control	10	Tag number
11	Stem seal	12	Maximum application temperature [°C]

4.5 Design details

Design

Valves to type series booklet 7524.1

Control valve:

- Straight-way pattern with horizontal seat
- K_{vs} values: 2.5 to 630 m³/h
- Rangeability 50:1
- Parabolic plug or V-port plug with equal-percentage or linear characteristic
- Two-stage pressure reduction (valve plug combined with multi-hole cage)
- Reduced K_{vs} values
- Spring-loaded PTFE V-packing ≤ 250 °C
- Graphite gland packing ≤ 450 °C
- Flanges to DIN EN 1092-2 type 21 (EN-GJS-400-18-LT) or DIN EN 1092-1 type 21 (GP 240 GH)
- Leakage class IV to DIN EN 60534-4

Pneumatic actuators:

- Mechanical position indicator
- Short actuating times
- Actuating forces of up to 19.5 kN with spring-to-close design
- Actuating forces of up to 55 kN with air-to-close design

Variants

Control valve:

- Seat with PTFE gasket up to 250 °C, leakage class VI
- Anti-cavitation design
- Very low K_{vs} values from 0.1 to 2.1 m³/h
- Balanced plug from DN 65 (≤ 200 °C)
- Other flange designs
- High-temperature resistant paint (grey aluminium)
- Certification to customer specification

Pneumatic actuators:

- Electro-pneumatic positioner
- Pressure gauge block
- IY module
- Alarm module
- Limit switch, inductive (3-wire)
- Limit switch, mechanical
- 3/2-way solenoid valve
- Air filter/reducing station
- Manual override

4.6 Function

- Design** The control valve with pneumatic actuator consists of the pressure-retaining parts, i.e. body 100 and body bonnet 161, and the functional unit (stem 200 and valve disc 350).
- Function** The valve is operated by a pneumatic actuating element (actuator).
- Sealing** Body 100 and body bonnet 161 are joined by studs 902, and the joint is sealed to atmosphere by joint ring 411.
- On the standard valve design, the passage of stem 200 is sealed by means of either a PTFE V-packing or a graphite gland packing 461. The PTFE V-packing stem seal is maintenance-free.
- Design** The obturator is either a parabolic plug, V-port plug or perforated plug, defining the equal-percentage or linear characteristic curve as specified.

4.7 Scope of supply

The following items are included in the scope of supply:

- Control valve
- Valve operating manual
- Actuator operating manual




4.8 Noise characteristic

When operated within the operating conditions documented in the order confirmation and/or characteristic curves booklets, the valve will not exceed a sound pressure level of 80 dB in acc. with IEC 60534-8-4. Unfavourable piping layouts or off-design operating conditions may give rise to physical phenomena like cavitation, resulting in significantly higher sound pressure levels.




5 Installation at Site

5.1 General information/Safety regulations

The consultant, construction company or operator are responsible for positioning and installing the valves. Planning errors and installation errors may impair the reliable function of the valves and pose a substantial safety hazard.

	<div data-bbox="507 414 702 459"> WARNING</div> <div data-bbox="496 477 1024 506">Damage to pressure enclosure or add-on parts</div> <div data-bbox="496 512 917 542">Leakage from or rupture of the valve</div> <div data-bbox="496 548 877 577">Valve/add-on parts not functional</div> <div data-bbox="518 589 1197 696"> <ul style="list-style-type: none"> ▸ Check the valve for in-transit damage prior to installation. ▸ Check any add-on parts for in-transit damage. ▸ Do not install damaged valves. </div>
	<div data-bbox="507 741 638 772">CAUTION</div> <div data-bbox="496 799 1043 828">Welding in close proximity to soft-seated valves</div> <div data-bbox="496 835 884 864">Damage to the seat/disc interface!</div> <div data-bbox="518 875 1399 934"> <ul style="list-style-type: none"> ▸ Ensure that the valve is not heated beyond the specified temperature limits. (⇒ Section 6.2, Page 24) </div>

5.2 Installation position

	<div data-bbox="507 1048 702 1093"> WARNING</div> <div data-bbox="496 1111 1177 1140">Installation of the valve with the stem pointing downwards</div> <div data-bbox="496 1146 740 1176">Damage to the valve!</div> <div data-bbox="518 1187 1251 1256"> <ul style="list-style-type: none"> ▸ Install the valve with the stem pointing upwards or to the side. ▸ Observe the permissible installation position. </div>
	<div data-bbox="507 1299 638 1330">CAUTION</div> <div data-bbox="496 1357 1388 1386">Heavy actuators installed in an inclined position of 30° or more off the vertical</div> <div data-bbox="496 1393 903 1422">Damage to the valve from bending!</div> <div data-bbox="518 1433 841 1462"> <ul style="list-style-type: none"> ▸ Support actuators > 13 kg. </div>

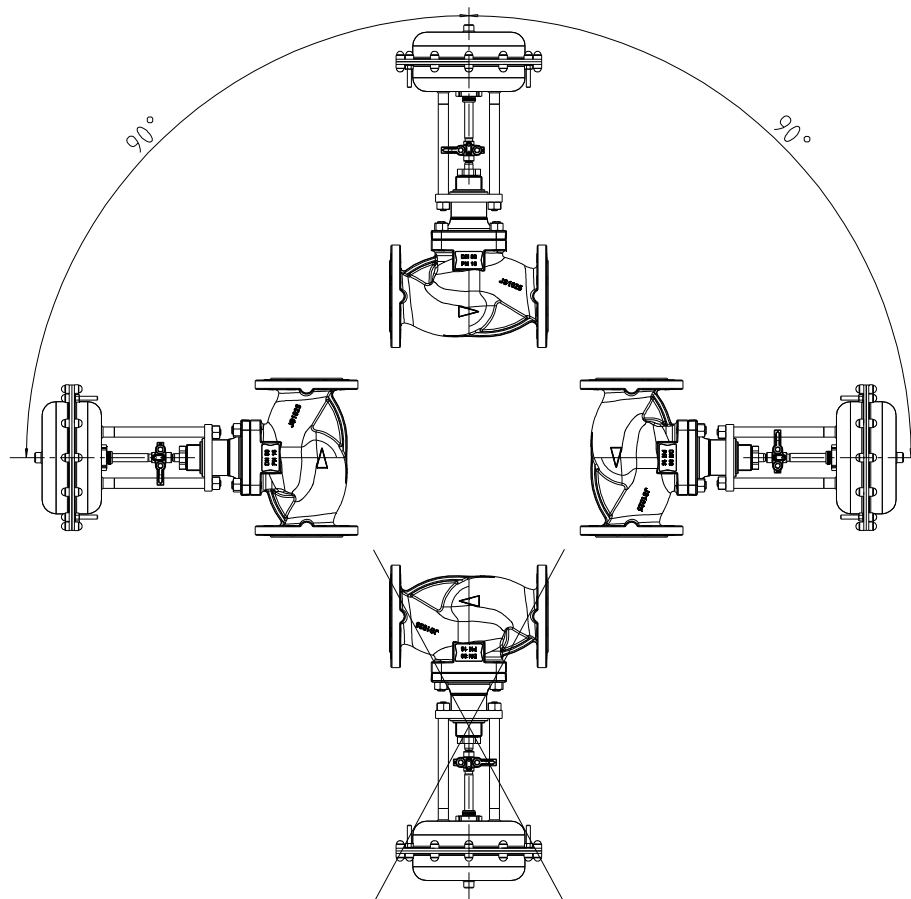


Fig. 6: PA-N 300 to PA-N 540

Install the actuator with sufficient clearance for removal.



NOTE

For the valves to reach the documented Kv values, the flow direction must correspond to the flow direction arrow.

5.3 Preparing the valve



CAUTION



Outdoor installation

Damage due to corrosion!

- ▷ Provide weather-proof protection to protect the valve against moisture.


1. Thoroughly clean, flush and blow through all vessels, piping and connections.
2. Remove the valve's flange covers before installing it in the piping.
3. Check that the inside of the valve is free from any foreign objects. Remove any foreign objects.
4. If required, install a strainer in the piping.

5.4 Piping


	<p>WARNING</p> <p>Impermissible piping forces Leakage from or rupture of the valve body!</p> <ul style="list-style-type: none"> ▷ Connect the pipes to the valve without transmitting any stresses or strains. ▷ Take structural measures to prevent any piping forces from being transmitted to the valve. ▷ Avoid mechanical loads beyond normal levels, e.g. piping forces, moments and vibrations.
	<p>CAUTION</p> <p>Painting pipes and actuator Valve function impaired!</p> <ul style="list-style-type: none"> ▷ Protect stem, plastic components and actuator elements prior to applying paint.

5.4.1 Flanged connection


Fasteners Only use fasteners (e.g. to DIN EN 1515-4) and flange gaskets (e.g. to DIN EN 1514) made of materials approved for the respective nominal valve size. Always use all flange bolt holes provided when connecting the valve to the pipe.

	<p>NOTE</p> <p>Exception: DN 65 PN 16 When using steel flanges to DIN EN 1092-1 in conjunction with cast iron valves with flanges machined to DIN EN 1092-2, ensure that for nominal size DN 65 classed PN 16 the mating flanges are fitted offset by 22.5°.</p>
--	--

Flange connection

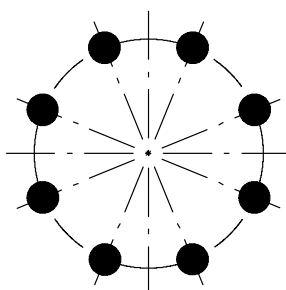

DN 65 PN 10/16 (steel/steel):
DIN EN 1092-1 with DIN EN 1092-1:
Bolts through 8 holes

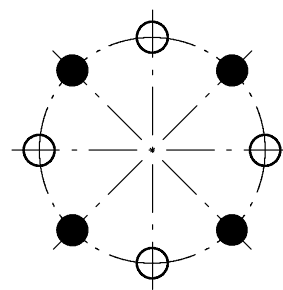



DN 65 PN 10/16 (steel/cast iron):
DIN EN 1092-1 with DIN EN 1092-2:
Bolt hole circle to DIN EN 1092-1 turned through 22.5°, bolts through 4 holes, 4 holes free

Fig. 7: Flange connections



- ✓ The mating flange faces are clean and undamaged.
- 1. Use an appropriate tool to evenly tighten the fasteners crosswise.

5.5 Insulation


	<p>WARNING</p> <p>Cold/hot piping and/or valve Risk of thermal injury!</p> <ul style="list-style-type: none"> ▷ Insulate the valve. ▷ Fit warning signs.
	<p>CAUTION</p> <p>Condensation forming in air-conditioning systems, cooling systems and refrigerating systems Ice forming! Actuating element blockage! Damage due to corrosion!</p> <ul style="list-style-type: none"> ▷ Insulate the valve to prevent diffusion.

6 Commissioning/Start-up/Shutdown

6.1 Commissioning/start-up

	<p>CAUTION</p> <p>Welding beads, scale and other impurities in the piping Damage to the valve!</p> <ul style="list-style-type: none"> ▷ Remove any impurities from the piping, e.g. by flushing the pipe with the valve in fully open position. ▷ If necessary, install a strainer.
	<p>DANGER</p> <p>All work performed on the actuator: Risk of injury!</p> <ul style="list-style-type: none"> ▷ Observe the actuator's operating manual.

6.1.1 Prerequisites for commissioning/start-up


	<p>DANGER</p> <p>Surge pressure/water hammer potentially occurring at high temperatures Danger to life caused by burns or scalds!</p> <ul style="list-style-type: none"> ▷ Do not exceed the valve's maximum permissible pressure. ▷ Use valves made of nodular cast iron or steel. ▷ The operator shall provide general safety measures for the system.
--	---


Before commissioning/start-up of the valve ensure that the following requirements are met:

- The valve has been connected to the piping at both ends.
- The actuator has been connected to the power supply in accordance with the actuator's operating manual.
- The piping has been flushed.
- For valves with electric or pneumatic actuators travel limits have been set.
- The material, pressure data and temperature data of the valve are compatible with the operating conditions of the piping. (⇒ Section 6.2, Page 24)
- The material's chemical resistance and stability under load have been checked.

6.1.2 Actuation/operation

The valve is operated by means of a pneumatic actuator.

	<p>WARNING</p> <p>Improper handling of pneumatic actuator Crushing of fingers! Damage to the actuator or the valve!</p> <ul style="list-style-type: none"> ▷ Ensure that any objects and parts of the body are removed from the actuator coupling area prior to starting the actuator.
---	---


	<div style="background-color: #FFD700; padding: 5px;">CAUTION</div> <p>Impermissible system parameters Excessive wear and/or damage to the valve by vibration and cavitation!</p> <ul style="list-style-type: none"> ▷ Change the system parameters. ▷ Consult KSB if special solutions need to be selected.
---	--

6.1.3 Functional check

Visual inspection The following functions must be checked:

After the valve has been subjected to load conditions or heated up for the first time check the joint between the body and the bonnet/cover established by bolting 902/920 and joint ring 411 for tightness.

If leakage occurs or bonnet/cover bolting 902/920 is loose, evenly re-tighten it crosswise. (⇒ Section 7.5, Page 38)

	<div style="background-color: #FF4500; padding: 5px;">! DANGER</div> <p>Failure to re-tighten bonnet/cover bolting after first loading Leakage of hot and/or toxic fluids!</p> <ul style="list-style-type: none"> ▷ Re-tighten bonnet/cover bolting 902/920 of valves operated at temperatures exceeding 200 °C.
---	---

6.2 Operating limits

6.2.1 Ambient temperature

Observe the following parameters and values during operation:

Table 5: Permissible ambient temperatures

Ambient condition	Value
Ambient temperature	-10 °C to +60 °C
Humidity	5 % to 95 % rH

6.2.2 Pressure/temperature ratings

Table 6: Test pressure and operating pressure: EN-GJS-400-18-LT

PN	Material	Shell test	Leak test (seat)	Permissible operating pressure [bar] ⁴⁾⁵⁾				
		With water						
		Tests P10 and P11 to DIN EN 12266-1	Test procedure 1 to DIN EN 60534-4	[°C]				
		[bar]	[bar]	-10 to +120	200	250	300	350
16	EN-GJS-400-18-LT	24	Δp	16	14,7	13,9	12,8	11,2
25	EN-GJS-400-18-LT	37,5	Δp	25	23	21,8	20	17,5

⁴ Intermediate temperatures can be derived by linear interpolation.

⁵ Static load

Table 7: Test pressure and operating pressure: GP 240 GH

PN	Material	Shell test	Leak test (seat)	Permissible operating pressure [bar] ⁴⁾⁵⁾									
		With water											
		Tests P10 and P11 to DIN EN 12266-1	Test procedure 1 to DIN EN 60534-4	[°C]									
		[bar]	[bar]	RT ⁶⁾	100	150	200	250	300	350	400	450	
40	GP 240 GH	60	Δp	40,0	37,1	35,2	33,3	30,4	27,6	25,7	23,8	13,1	

6.3 Shutdown

6.3.1 Measures to be taken for shutdown

During prolonged shutdown periods, ensure that the following conditions are met:

1. Drain fluids which change their physical condition due to changes in concentration, polymerisation, crystallisation, solidification, etc. from the piping.
2. If required, flush the piping with the valves fully opened.
3. Shut down the pneumatic actuator as specified in the actuator's operating manual.

6.4 Returning to service


For returning the equipment to service, observe the sections on commissioning/start-up and the operating limits (⇒ Section 6.2, Page 24) .

In addition, carry out all servicing/maintenance operations before returning the valve to service. (⇒ Section 7, Page 26)


⁶ RT: room temperature (-10 °C to +50 °C)


7 Servicing/Maintenance

7.1 Safety regulations


	⚠ DANGER
	<p>Valve under pressure Risk of injury! Leakage of hot and/or toxic fluids! Risk of burns!</p> <ul style="list-style-type: none"> ▷ Depressurise the valve and its surrounding system prior to any maintenance work and installation work. ▷ If there is fluid leakage, depressurise the valve. ▷ Allow the valve to cool down until the temperature of the fluid in all the valve's chambers is lower than the fluid's vaporisation temperature. ▷ Never vent the valve by removing the bonnet bolting or gland packing. ▷ Use original spare parts and appropriate tools, even in emergencies.

The operator ensures that maintenance, inspection and installation are performed by authorised, qualified specialist personnel who are thoroughly familiar with the manual.

	⚠ WARNING
	<p>Fluids handled, consumables and supplies which are hot and/or pose a health hazard Risk of injury!</p> <ul style="list-style-type: none"> ▷ Observe all relevant laws. ▷ When draining the fluid take appropriate measures to protect persons and the environment. ▷ Decontaminate valves used in fluids posing a health hazard.

	⚠ WARNING
	<p>Actuator parts moving due to pre-loaded springs when auxiliary energy supply fails Risk of injury!</p> <ul style="list-style-type: none"> ▷ Observe the actuator's operating manual.

A regular maintenance schedule will help avoid expensive repairs and contribute to trouble-free, reliable operation of the valve with a minimum of servicing/ maintenance expenditure and work.

	NOTE
	<p>Before removing the valve from the piping, ensure that the pipe has been taken out of service and released for repair/maintenance work.</p>

	NOTE
	<p>All maintenance work, service work and installation work can be carried out by KSB Service or authorised workshops. For contact details refer to the enclosed "Addresses" booklet or visit "www.ksb.com/contact" on the Internet.</p>

Never use force when dismantling and reassembling the valve.

Original spare parts are only ready for operation following assembly/installation and subsequent shell and leak testing of the valve.

7.2 Servicing/Maintenance

7.2.1 Supervision of operation

The service life can be extended by taking the following measures:

- Checking the function by actuating the valve at least twice a year
- Re-tightening the stuffing box screw to the specified in-service torque in good time (⇒ Section 7.5, Page 38)

7.2.2 Inspection work

7.2.2.1 Checking the PTFE V-packing

A PTFE V-packing set 416 comprises a base ring, three V-rings and a top ring.

The PTFE V-packing set is fitted together with a compression spring 950. It is self-adjusting, i.e. maintenance-free. If leakage is detected at the stem, the V-packing set is worn and must be replaced with a new one.



7.2.2.2 Checking the graphite gland packing

The graphite gland packing 461 comprises two packing rings fitted between two packing end rings. This stem seal design is not maintenance-free.

If regular inspection reveals leakage at stem 200 or a reduction in the tightening torque of stuffing box screw 45-6, the stuffing box screw must be re-tightened to the in-service torque specified (⇒ Section 7.5, Page 38) .


If re-tightening to the in-service torque does not restore seal integrity, the gland packing must be replaced. The same applies once stuffing box screw 45-6 rests on the neck of the bonnet, i.e. when the packing has already been re-tightened to maximum compression.



7.2.3 Valves with actuator

	<p>⚠ WARNING</p> <p>Work on the pneumatic actuator by unqualified personnel</p> <p>Risk of injury!</p> <ul style="list-style-type: none"> ▷ Always have repair and maintenance work performed by specially trained, qualified personnel.
	<p>⚠ WARNING</p> <p>Actuator parts moving due to pre-loaded springs when auxiliary energy supply fails</p> <p>Risk of injury!</p> <ul style="list-style-type: none"> ▷ Observe the actuator's operating manual.

7.3 Dismantling the valve

7.3.1 General information/Safety regulations

	<p>⚠ WARNING</p> <p>Hot surface</p> <p>Risk of injury!</p> <ul style="list-style-type: none"> ▷ Allow the valve to cool down to ambient temperature.
---	---

	<div style="background-color: #f4a460; padding: 5px; border: 1px solid black; margin-bottom: 5px;">  WARNING </div> <p>Unqualified personnel performing work on the valve</p> <p>Risk of injury!</p> <p>▷ Always have repair work and maintenance work performed by specially trained, qualified personnel.</p>
---	--

Always observe the safety instructions and information. (⇒ Section 7.2, Page 27)
In the event of damage you can always contact our service departments.

7.3.2 Preparing the valve

1. Interrupt power supply and make sure it cannot be switched on again unintentionally.
2. Depressurise and drain the valve.
3. Dismantle the pneumatic actuator as specified in the actuator's operating manual.

7.3.3 Removing the stem seal

7.3.3.1 Removing the PTFE V-packing

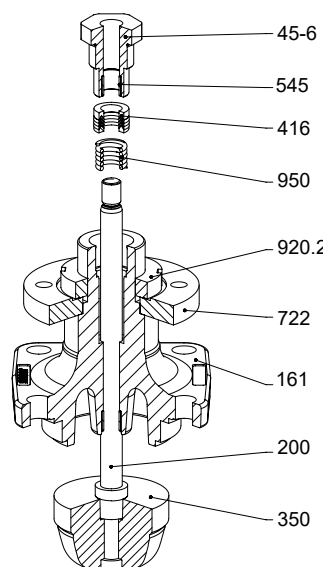


Fig. 8: Removing the PTFE V-packing

- ✓ The pneumatic actuator has been removed.
1. Undo and remove stuffing box screw 45-6.
 2. Undo bonnet nuts 920.3.
 3. Lift bonnet 161 off body 100.
 4. Pull stem/valve disc assembly 200/350 out of the bonnet.
 5. Remove the old stem seal and spring 950.

7.3.3.2 Removing the graphite gland packing

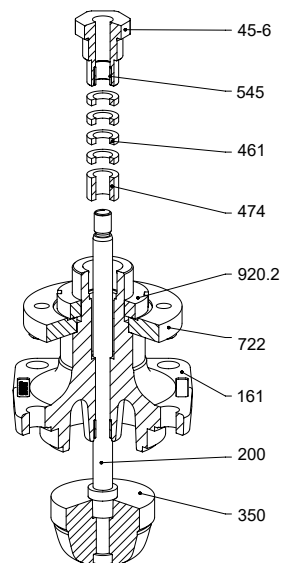


Fig. 9: Removing the graphite gland packing

✓ The pneumatic actuator has been removed.

1. Undo and remove stuffing box screw 45-6.
2. Undo bonnet nuts 920.3.
3. Lift bonnet 161 off body 100.
4. Pull the stem/valve disc assembly out of the bonnet.
5. Remove the old stem seal and spring 950.

7.3.4 Removing the trim components

7.3.4.1 Removing the valve disc and stem

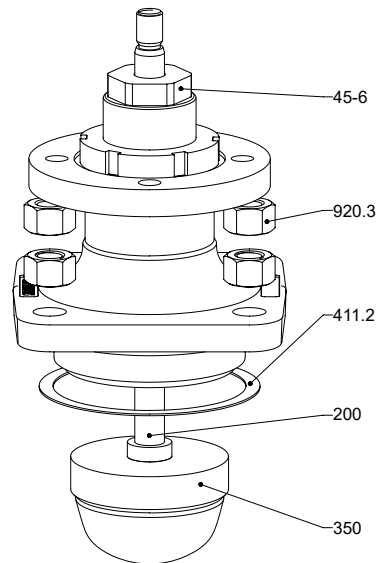


Fig. 10: Removing the valve disc and stem

- ✓ The pneumatic actuator has been removed.
- 1. Loosen stuffing box screw 45-6 by at least one turn.
- 2. Undo bonnet nuts 920.3.
- 3. Lift bonnet 161 off body 100.
- 4. Pull the stem/valve disc assembly carefully out of the bonnet.

7.3.4.2 Removing the seat ring and seat gasket

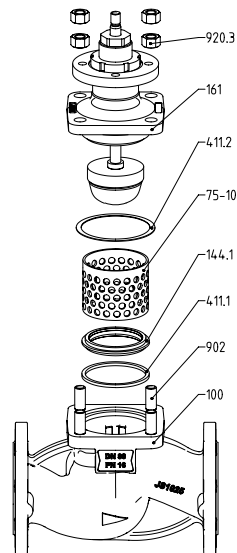


Fig. 11: Removing the seat ring and seat gasket

- ✓ The pneumatic actuator has been removed.
- 1. Undo bonnet nuts 920.3.
- 2. Lift bonnet 161 off body 100.
- 3. Remove multi-hole cage 75-10.

4. Use a suitable tool (e.g. puller) to remove seat ring 144 carefully from the valve body.
5. Remove compressed seat gasket 411.1.

7.3.4.3 Removing the U-ring on a balanced plug design

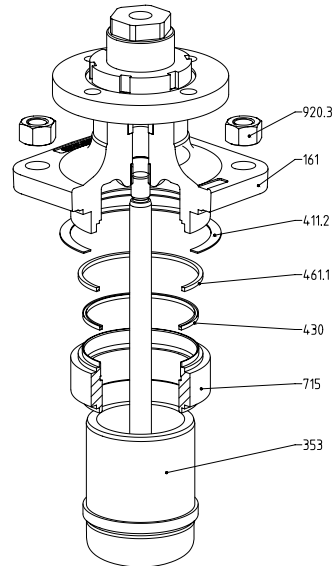


Fig. 12: Removing the U-ring

✓ The pneumatic actuator has been removed.

1. Undo bonnet nuts 920.3.
2. Lift bonnet 161 off body 100.
3. Remove guide tube 715.
4. Remove U-ring 430 from guide tube 715.

7.3.4.4 Removing the O-ring on a soft-seated valve design

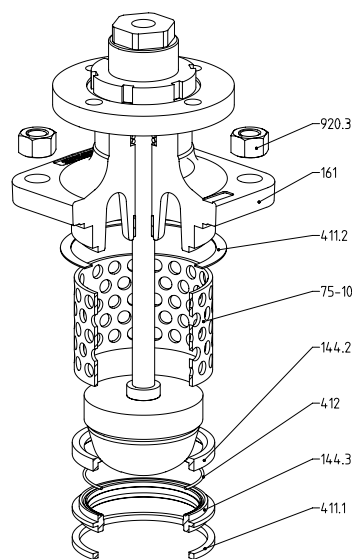



Fig. 13: Removing the O-ring

✓ The pneumatic actuator has been removed.

1. Undo bonnet nuts 920.3.
2. Lift bonnet 161 off body 100.
3. Remove multi-hole cage 75-10.
4. Remove upper seat component 144.2.
5. Remove O-ring 412.

7.4 Assembling the valve

7.4.1 General information/Safety regulations

	<p style="background-color: yellow; margin-top: 0;">CAUTION</p> <p>Improper reassembly Damage to the valve!</p> <ul style="list-style-type: none"> ▷ Reassemble the valve in accordance with the general rules of sound engineering practice. ▷ Use original spare parts only.
---	--

Bonnet gasket Always fit a new bonnet gasket 411.2 whenever a stem seal or a trim component is replaced. The bonnet gasket must be inserted into the body with the bonnet dismantled.

Tightening torques Use an appropriate tool to tighten the fasteners crosswise.

7.4.2 Fitting the stem seal

7.4.2.1 Fitting the PTFE V-packing

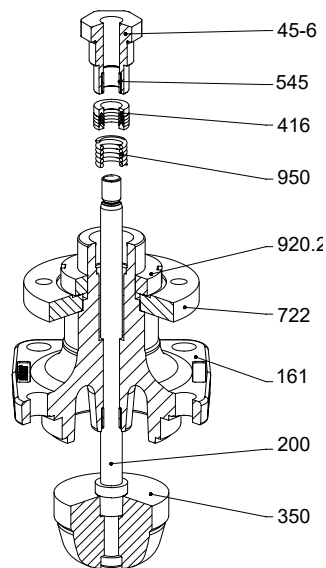


Fig. 14: Fitting the PTFE V-packing

- ✓ The spare parts required are available.
 - ✓ All dismantled parts have been cleaned and checked for wear.
 - ✓ Any damaged or worn parts have been replaced by original spare parts.
1. Check the stem surface. If the surface is damaged, the stem also needs to be replaced; otherwise the stem seal will soon start leaking again.
 2. Insert stem 200 into bonnet 161 from below.
 3. Place new spring 950 and V-packing set 416 onto stem 200 and insert into the gland packing chamber.
 4. Use stuffing box screw 45-6 to insert the complete V-packing set into the seal chamber and tighten by hand.
 5. Insert new bonnet gasket 411.2.
 6. Place assembled bonnet 161 onto the valve body.
 7. Tighten hexagon nuts 920.3 crosswise to the specified tightening torque (⇒ Section 7.5, Page 38) .
 8. Tighten stuffing box screw 45-6 up to the stop, applying a torque of 50 to 80 Nm.
 9. Mount the actuator.

7.4.2.2 Fitting the graphite gland packing

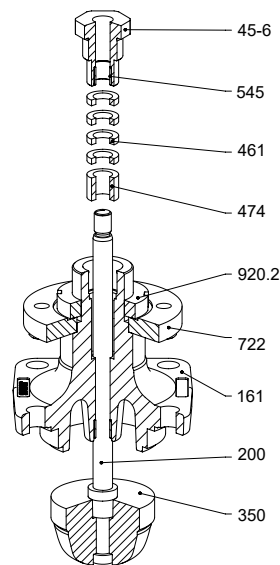


Fig. 15: Fitting the graphite gland packing

- ✓ The spare parts required are available.
 - ✓ All dismantled parts have been cleaned and checked for wear.
 - ✓ Any damaged or worn parts have been replaced by original spare parts.
1. Check the stem surface. If the surface is damaged, the stem also needs to be replaced; otherwise the stem seal will soon start leaking again.
 2. Insert stem 200 into bonnet 161 from below.
 3. Place sleeve 520 and gland packing 461 onto stem 200 and insert into the gland packing chamber.
 4. Use stuffing box screw 45-6 to insert the complete V-packing set into the seal chamber and tighten by hand.
 5. Insert new bonnet gasket 411.2.
 6. Place assembled bonnet 161 onto the valve body.
 7. Tighten bonnet nuts 920.3 crosswise to the specified tightening torque (⇒ Section 7.5, Page 38) .
 8. Tighten stuffing box screw 45-6 to the assembly torque (⇒ Section 7.5, Page 38) . After approx. one minute undo the stuffing box screw again and move the stem up and down several times. Then tighten the stuffing box screw to the in-service torque (⇒ Section 7.5, Page 38) .
 9. Mount the actuator.

7.4.3 Fitting the trim components

7.4.3.1 Fitting the valve disc and stem

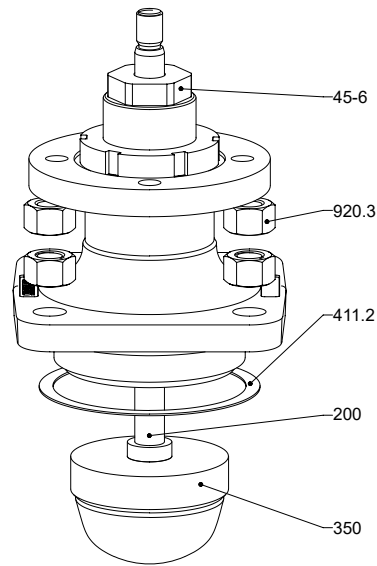


Fig. 16: Fitting the valve disc and stem

- ✓ The spare parts required are available.
 - ✓ All dismantled parts have been cleaned and checked for wear.
 - ✓ Any damaged or worn parts have been replaced by original spare parts.
1. Insert the new stem/valve disc assembly carefully into bonnet 161 from below.
 2. Insert new bonnet gasket 411.2.
 3. Place bonnet 161 onto the valve body.
 4. Tighten bonnet nuts 920.3 crosswise to the specified tightening torque .
 5. Tighten stuffing box screw 45-6, depending on the valve design.
 6. Mount the actuator.

7.4.3.2 Fitting the seat ring and seat gasket

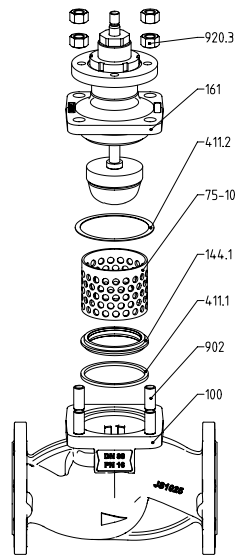


Fig. 17: Fitting the seat ring and seat gasket

- ✓ The spare parts required are available.
 - ✓ All dismantled parts have been cleaned and checked for wear.
 - ✓ Any damaged or worn parts have been replaced by original spare parts.
1. Insert new seat gasket 411.1.
 2. After reversing or replacing the parts, reassemble them in the correct sequence.
 3. Insert new bonnet gasket 411.2.
 4. Place assembled bonnet 161 onto body 100.
 5. Tighten bonnet nuts 920.3 crosswise to the specified tightening torque .
 6. Mount the actuator.

7.4.3.3 Fitting the U-ring on a balanced plug design

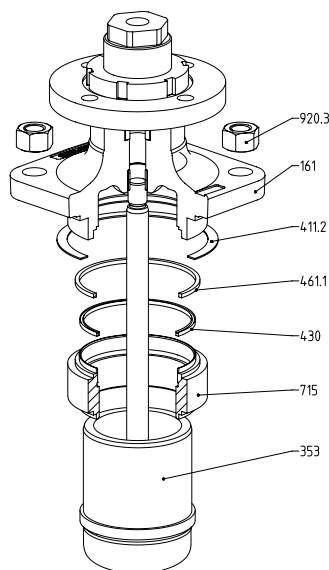


Fig. 18: Fitting the U-ring

- ✓ The spare parts required are available.
 - ✓ All dismantled parts have been cleaned and checked for wear.
 - ✓ Any damaged or worn parts have been replaced by original spare parts.
1. Press new U-ring 430 into the groove.
 2. Orientate the U-ring opening in the direction of the higher pressure.
 3. Fit guide tube 715 onto multi-hole cage 75-10.
 4. Insert bonnet gasket 411.2.
 5. Fit packing ring 461.2 on guide tube 715.
 6. Carefully place bonnet 161 onto body 100 ensuring that the packing ring does not slip and the valve disc runs smoothly in the guide tube.
 7. Tighten bonnet nuts 920.3 crosswise to the specified tightening torque crosswise.
 8. Mount the actuator.

7.4.3.4 Fitting the O-ring on a soft-seated valve design

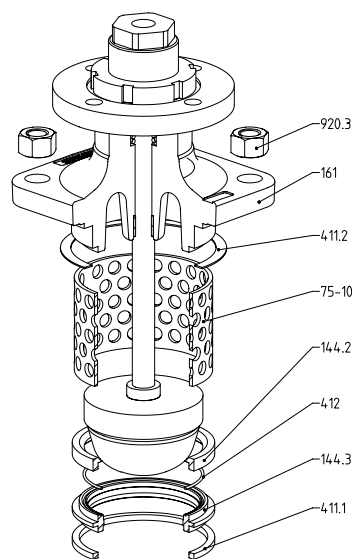


Fig. 19: Fitting the O-ring

- ✓ The spare parts required are available.
 - ✓ All dismantled parts have been cleaned and checked for wear.
 - ✓ Any damaged or worn parts have been replaced by original spare parts.
1. Insert O-ring 412 into the groove.
 2. Place upper seat component 144.2 onto lower seat component 144.3.
 3. Place multi-hole cage 75-10 in body 100.
 4. Insert bonnet gasket 411.2.
 5. Place bonnet 161 onto body 100.
 6. Tighten bonnet nuts 920.3 crosswise to the specified tightening torque .
 7. Mount the actuator.

7.5 Tightening torques

Bonnet nuts and actuator pillars

Table 8: Tightening torques for hexagon nuts [Nm]

Thread size	Tightening torque
M10	32
M12	56
M16	135
M20	250

Flange nuts

Table 9: Torques for hexagon nuts and slotted round nuts [Nm]

Thread size	Tightening torque
M39	750
M50	1100



7525.82/07-EN

Graphite gland packing

Table 10: Tightening torques for stuffing box screw [Nm]

DN	Assembly torque	In-service torque
20 - 50	10	3
65 - 100	15	4
125 - 150	18	5

8 Trouble-shooting

	 WARNING
	Improper remedial work on the valve Risk of injury! <p>► For any work performed in order to remedy faults on the valve observe the relevant information given in this operating manual and/or the product literature provided by the accessories manufacturers.</p>

Malfunctions e.g. caused by incorrect operation, lack of maintenance or improper use cannot be ruled out completely. All repair work and maintenance work must be performed by skilled, properly trained personnel using suitable tools and original spare parts.

If problems occur that are not described in the following table, consultation with the KSB service is required.

Table 11: Trouble-shooting

Fault	Possible cause	Remedy
Leakage at the bonnet	Defective bonnet/cover gasket	Replace bonnet/cover gasket.
	Unevenly tightened bonnet/cover bolts	Undo the bonnet/cover bolts, fit a new gasket and re-tighten the bolts as specified in the manual. <ul style="list-style-type: none"> Undo bonnet/cover bolting 902/920. Replace joint ring 411. Tighten bonnet/cover bolting 902/920 crosswise to the specified tightening torque .
Leakage at the stem	PTFE V-packing set is damaged.	Replace V-packing set.
	Insufficient stuffing box screw pressure on graphite gland packing	<ul style="list-style-type: none"> Tighten stuffing box screw 45-6 to the specified tightening torque . If leakage continues, replace the gland packing.
No throughflow	Valve is closed.	Open the valve.
	Closed shut-off valve in the piping	Open the shut-off valve.
Little throughflow	Piping clogged	Check piping.
	Kvs value selected incorrectly.	Re-calculate Kvs value, change parts as required.
Increased leakage rate	Worn seating surfaces on the valve disc	Replace the valve disc (IV) or the PTFE ring (VI).
	Worn seating surfaces on valve seat	Reverse the seat.
	Sealing elements of design variants are worn.	Fit new sealing elements.
	Actuator too weak	Check closing torque of actuator; use a stronger actuator if necessary.
	Contamination between valve disc and seat	Clean valve trim.
Jerky and/or extremely sluggish stem movement	Stuffing box bolting tightened too hard on graphite packings	Check tightening torque, loosen if required.
	Bearing damage	Replace defective parts.
	Valve disc has seized.	Replace valve disc and/or seat.
	Contamination between valve disc and seat	Clean valve trim.

9 Related Documents

9.1 General assembly drawing with list of components

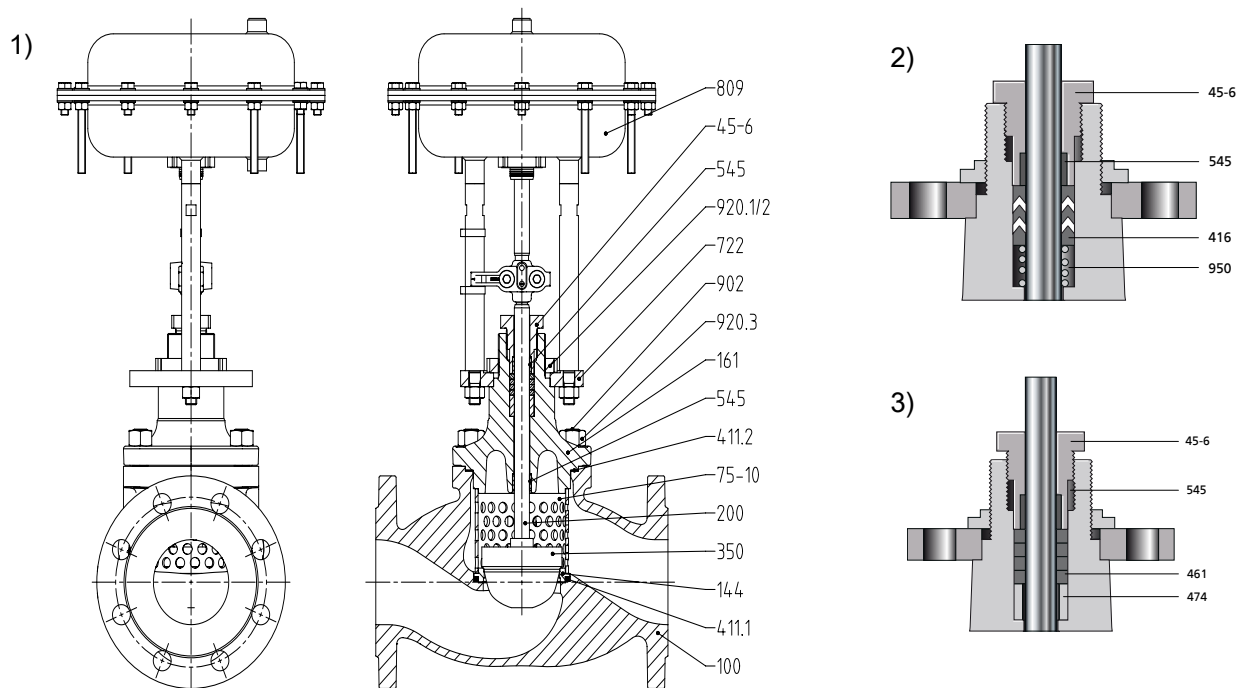


Fig. 20: Sectional drawings

1)	Control valve
2)	PTFE V-packing
3)	Graphite gland packing

Table 12: List of components

Part No.	Description	Material	Material number	Note
100	Body	EN-GJS-400-18-LT	5.3103	DN 20-150
		GP 240 GH	1.0619	DN 15-200
144	Seat	X6CrNiMoTi17-12-2	1.4571	-
161	Body bonnet	EN-GJS-400-18-LT	5.3103	DN 20-150
		GP 240 GH	1.0619	DN 15-200
200	Stem	X6CrNiMoTi17-12-2	1.4571	-
350	Valve disc	X6CrNiMoTi17-12-2	1.4571	-
		GX5CrNiMo 19-11-2	1.4408	DN 200
411.1	Seat gasket	Pure graphite	-	-
411.2	Bonnet gasket	CrNiSt/graphite	-	-
416	V-packing	Carbon PTFE	-	-
45-6	Stuffing box screw	X5CrNi18-10	1.4301	-
461	Gland packing	Graphite	-	-
474	Thrust ring	X5CrNi18-10	1.4301	-
545	Bearing bush	Sint A50	-	-
75-10	Multi-hole cage	X5CrNi18-10	1.4301	-
722	Actuator flange	Steel	-	-
809	Actuator	-	-	-
902	Stud	21CrMoV5-7	1.7709	-
920.1	Hexagon nut	Galvanised steel	-	-

Part No.	Description	Material	Material number	Note
920.2	Slotted round nut	Galvanised steel	-	-
920.3	Hexagon nut	25CrMo4	1.7218+QT+A2D	-
950	Spring	X5CrNi18-10	1.4301	-

9.2 Maximum permissible closing pressures

9.2.1 Spring-to-close

Table 13: Actuator data

Characteristic	Actuator											
	PA-N300						PA-N540					
Diaphragm area [cm ²]	300						540					
Max. control pressure [bar]	6						6					
Nominal stroke [mm]	20			32			32			45		
Spring range [bar]	0,5-0,8	1,1-1,6	1,6-2,4	0,5-0,9	1,1-1,8	1,6-2,8	0,7-1,0	1,4-2,1	2,0-3,2	0,7-1,2	1,4-2,4	2,0-3,7
Control pressure required [bar]	0,9	1,7	2,5	1,0	1,9	2,9	1,1	2,2	3,3	1,3	2,5	3,8
Actuating force [N]	1500	3300	4800	1500	3300	4800	3780	7560	10800	3780	7560	10800
Maximum stroke ⁷⁾ (unmounted) [mm]	32						50					

Table 14: Actuator data

Characteristic	Actuator									
	PA-N1080									
Diaphragm area [cm ²]	1080									
Max. control pressure [bar]	6									
Nominal stroke [mm]	32				45				60	
Spring range [bar]	0,6-0,8	1,2-1,6	1,8-2,3	0,6-0,9	1,2-1,7	1,8-2,5	0,6-0,9	1,2-1,8	1,8-2,7	
Control pressure required [bar]	0,9	1,7	2,4	1,0	1,8	2,6	1,2	1,9	2,8	
Actuating force [N]	6480	12960	19440	6480	12960	19440	6480	12960	19440	
Maximum stroke ⁷⁾ (unmounted) [mm]	80									

⁷⁾ Replacement actuators must be pre-loaded to the above-mentioned spring ranges during mounting on site.

Table 15: Maximum closing pressures⁸⁾ if fluid approaches the valve disc from the opposite direction of valve closure;
p₂ = 0 bar
Model with V-packing
Values [bar]

Seat diameter [mm]			4	8	12	15	20	25	32	40	50	65	80	100	125	150	200		
Stroke [mm]			20							32						45		60	
PA-N300	Spring range [bar]	Control pressure required [bar]	0,5-0,8	0,9	40,0	40,0	40,0	40,0	33,8	21,8									
			1,1-1,6	1,7	-	-	40,0	40,0	40,0	40,0									
			1,6-2,4	2,5	-	-	-	-	40,0	40,0									
			0,5-0,9	1,0								13,2	8,2	5,0	2,6	1,8	0,8		
			1,1-1,8	1,9								32,9	21,1	13,4	7,7	4,9	3,0		
			1,6-2,8	2,9								40,0	31,9	20,5	12,0	7,8	4,8		
PA-N540			0,7-1,0	1,1								38,1	24,6	15,7	9,1	5,8	3,6		
			1,4-2,1	2,2								40,0	40,0	33,4	19,8	13,0	8,2		
			2,0-3,2	3,3								-	40,0	40,0	28,9	19,1	12,2		
			0,7-1,2	1,3													2,1	1,4	
			1,4-2,4	2,5													3,7	3,5	
			2,0-3,7	3,8													7,7	5,3	
PA-N1080			0,6-0,8	0,9										16,7	10,9	6,9			
			1,2-1,6	1,7										35,0	23,2	14,8			
			1,8-2,3	2,4										-	35,4	22,7			
			0,6-0,9	1,0													4,3	2,9	
			1,2-1,7	1,8													9,4	6,4	
			1,8-2,5	2,6													14,5	10,0	
	0,6-0,9	1																1,5	
	1,2-1,8	1,9																3,5	
	1,8-2,7	2,8																5,5	

Table 16: Maximum closing pressures⁸⁾ if fluid approaches the valve disc from the opposite direction of valve closure;
p₂ = 0 bar
Model with gland packing
Values [bar]

Seat diameter [mm]			4	8	12	15	20	25	32	40	50	65	80	100	125	150	200		
Stroke [mm]			20							32						45		60	
PA-N300	Spring range [bar]	Control pressure required [bar]	0,5-0,8	0,9	40,0	40,0	40,0	31,1	17,6	11,0									
			1,1-1,6	1,7	-	-	40,0	40,0	40,0	40,0									
			1,6-2,4	2,5	-	-	-	-	40,0	40,0									
			0,5-0,9	1,0								6,4	3,7	2,1	0,5	0,1	-		
			1,1-1,8	1,9								26,1	16,6	10,5	5,5	3,5	2,1		
			1,6-2,8	2,9								40,0	27,4	17,5	9,8	6,3	3,9		
PA-N540			0,7-1,0	1,1								31,3	20,1	12,8	6,9	4,4	2,6		
			1,4-2,1	2,2								40,0	40,0	30,5	17,6	11,5	7,3		
			2,0-3,2	3,3								-	40,0	40,0	26,8	17,6	11,2		
			0,7-1,2	1,3													1,4	0,9	
			1,4-2,4	2,5													3,0	3,0	
			2,0-3,7	3,8													7,0	4,8	
PA-N1080	0,6-0,8	0,9										14,5	9,5	5,9					
	1,2-1,6	1,7										32,9	21,7	13,9					
	1,8-2,3	2,4										-	34,0	21,8					
	0,6-0,9	1,0													3,6	2,4			

⁸⁾ All values without balanced plug and based on leakage class IV (DIN EN 60534-4).

Seat diameter [mm]			4	8	12	15	20	25	32	40	50	65	80	100	125	150	200		
Stroke [mm]			20							32							45		60
PA- N1080	Spring range [bar]	1,2-1,7	Control pressure required [bar]	1,8											8,7	5,9			
		1,8-2,5		2,6											13,8	9,5			
		0,6-0,9		1													1,2		
		1,2-1,7		1,8													3,2		
		1,8-2,5		2,6													5,3		

9.2.2 Air-to-close

Table 17: Actuator data

Characteristic		Actuator												
		PA-N300						PA-N540						
Diaphragm area [cm²]		300						540						
Max. control pressure [bar]		6						6						
Nominal stroke [mm]		20			32			32			45			
Spring range [bar]		0,6-0,9	1,3-1,8	2,0-2,8	0,5-0,9	1,1-1,8	1,6-2,8	0,8-1,1	1,5-2,2	2,2-3,4	0,6-1,1	1,2-2,2	1,7-3,4	
Control pressure required [bar]		1,0	1,9	2,9	1,0	1,9	2,9	1,2	2,3	3,5	1,2	2,3	3,5	
Actuating force [N]	Control pressure [bar]	1,3	1200	-	-	1200	-	-	1080	-	-	1080	-	-
		2	3300	600	-	3300	600	-	4860	-	-	4860	-	-
		3	6300	3600	600	6300	3600	600	10260	4320	-	10260	4320	-
		4	9300	6600	3600	9300	6600	3600	15660	9720	3240	15660	9720	3240
		5	12300	9600	6600	12300	9600	6600	21060	15120	8640	21060	15120	7020
		6	15300	12600	9600	15300	12600	9600	26460	20520	14040	26460	20520	12420
Maximum stroke ⁹⁾ (unmounted) [mm]		32						50						

Table 18: Actuator data

Characteristic		Actuator									
		PA-N1080									
Diaphragm area [cm²]		1080									
Max. control pressure [bar]		6									
Nominal stroke [mm]		32			45			60			
Spring range [bar]		0,7-0,9	1,4-1,8	2,2-2,7	0,6-0,9	1,3-1,8	2,0-2,7	0,6-0,9	1,2-1,8	1,8-2,7	
Control pressure required [bar]		1,0	1,9	2,8	1,0	1,9	2,9	1,0	1,9	2,9	
Actuating force [N]	Control pressure [bar]	1,3	4320	-	-	4320	-	-	4320	-	-
		2	11880	2160	-	11880	2160	-	11880	2160	-
		3	22680	12960	3240	22680	12960	3240	22680	12960	3240
		4	33480	23760	14040	33480	23760	14040	33480	23760	14040
		5	44280	34560	24840	44280	34560	24840	44280	34560	24840
		6	55080	45360	35640	55080	45360	35640	55080	45360	35640
Maximum stroke ¹⁰⁾ (unmounted) [mm]		80									

⁹ Replacement actuators must be pre-loaded to the above-mentioned spring ranges during mounting on site.

¹⁰ Replacement actuators must be pre-loaded to the above-mentioned spring ranges during mounting on site.

Table 19: Maximum closing pressures¹¹⁾ if fluid approaches the valve disc from the opposite direction of valve closure; p₂ = 0 bar
Model with V-packing
Values [bar]

Seat diameter [mm]		4	8	12	15	20	25	32	40	50	65	80	100	125	150	200	
Stroke [mm]		20						32						45		60	
PA-N300	Control pressure required [bar]	1,3	40,0	40,0	40,0	40,0	26,0	16,6	9,9	6,0	3,6	1,8	1,0	0,4			
		2	-	-	40,0	40,0	40,0	40,0	32,9	21,1	13,4	7,7	4,9	3,0			
		3	-	-	-	-	-	40,0	40,0	40,0	27,5	16,2	10,6	6,7			
		4	-	-	-	-	-	-	40,0	40,0	40,0	24,7	16,3	10,3			
		5	-	-	-	-	-	-	-	-	40,0	33,2	21,9	14,0			
		6	-	-	-	-	-	-	-	-	-	40,0	27,6	17,7			
PA-N540	Control pressure required [bar]	1,3							8,6	5,2	3,0	1,4	0,7	0,3	-	-	
		2							40,0	32,3	20,7	12,1	7,9	4,9	3,0	2,0	
		3							-	40,0	40,0	27,4	18,1	11,5	7,3	5,0	
		4							-	-	-	40,0	28,3	18,1	11,5	7,9	
		5							-	-	-	-	38,5	24,7	15,8	10,9	
		6							-	-	-	-	-	31,3	20,0	13,9	
PA-N1080	Control pressure required [bar]	1,3										10,6	6,9	4,2	2,6	1,7	0,8
		2										32,0	21,1	13,5	8,5	5,8	3,2
		3										-	40,0	26,7	17,0	11,8	6,6
		4										-	-	-	25,6	17,7	9,9
		5										-	-	-	-	23,7	13,3
		6										-	-	-	-	-	-

Table 20: Maximum closing pressures¹¹⁾ if fluid approaches the valve disc from the opposite direction of valve closure; p₂ = 0 bar
Model with gland packing
Values [bar]

Seat diameter [mm]		4	8	12	15	20	25	32	40	50	65	80	100	125	150	200		
Stroke [mm]		20							32						45		60	
PA-N300	Control pressure required [bar]	1,3	40,0	40,0	28,0	18,0	9,8	5,8	3,1	1,6	0,7	-	-	-				
		2	-	-	40,0	40,0	40,0	40,0	26,1	16,6	10,5	5,5	3,5	2,1				
		3	-	-	-	-	-	40,0	40,0	38,2	24,6	14,0	9,1	5,7				
		4	-	-	-	-	-	40,0	40,0	38,6	22,5	14,8	9,4					
		5	-	-	-	-	-	-	-	40,0	31,0	20,5	13,1					
		6	-	-	-	-	-	-	-	-	39,5	26,1	16,7					
PA-N540	Control pressure required [bar]	1,3								1,8	0,7	0,1	-	-	-	-	-	
		2								40,0	27,9	17,8	10,0	6,4	4,0	2,3	1,5	
		3								-	40,0	40,0	25,2	16,6	10,6	6,5	4,5	
		4								-	-	-	40,0	26,8	17,2	10,8	7,4	
		5								-	-	-	-	37,0	23,8	15,0	10,4	
		6								-	-	-	-	-	30,3	19,3	13,4	
PA-N1080	Control pressure required [bar]	1,3											8,4	5,4	3,3	1,9	1,2	0,5
		2											29,8	19,7	12,5	7,8	5,3	2,9
		3											-	40,0	25,7	16,3	11,3	6,3
		4											-	-	38,9	24,8	17,2	9,6
		5											-	-	-	-	23,2	13,0
		6											-	-	-	-	-	-

¹¹⁾ All values without balanced plug and based on leakage class IV (DIN EN 60534-4).

9.3 Flow characteristics

9.3.1 Equal-percentage characteristics, rangeability 50:1

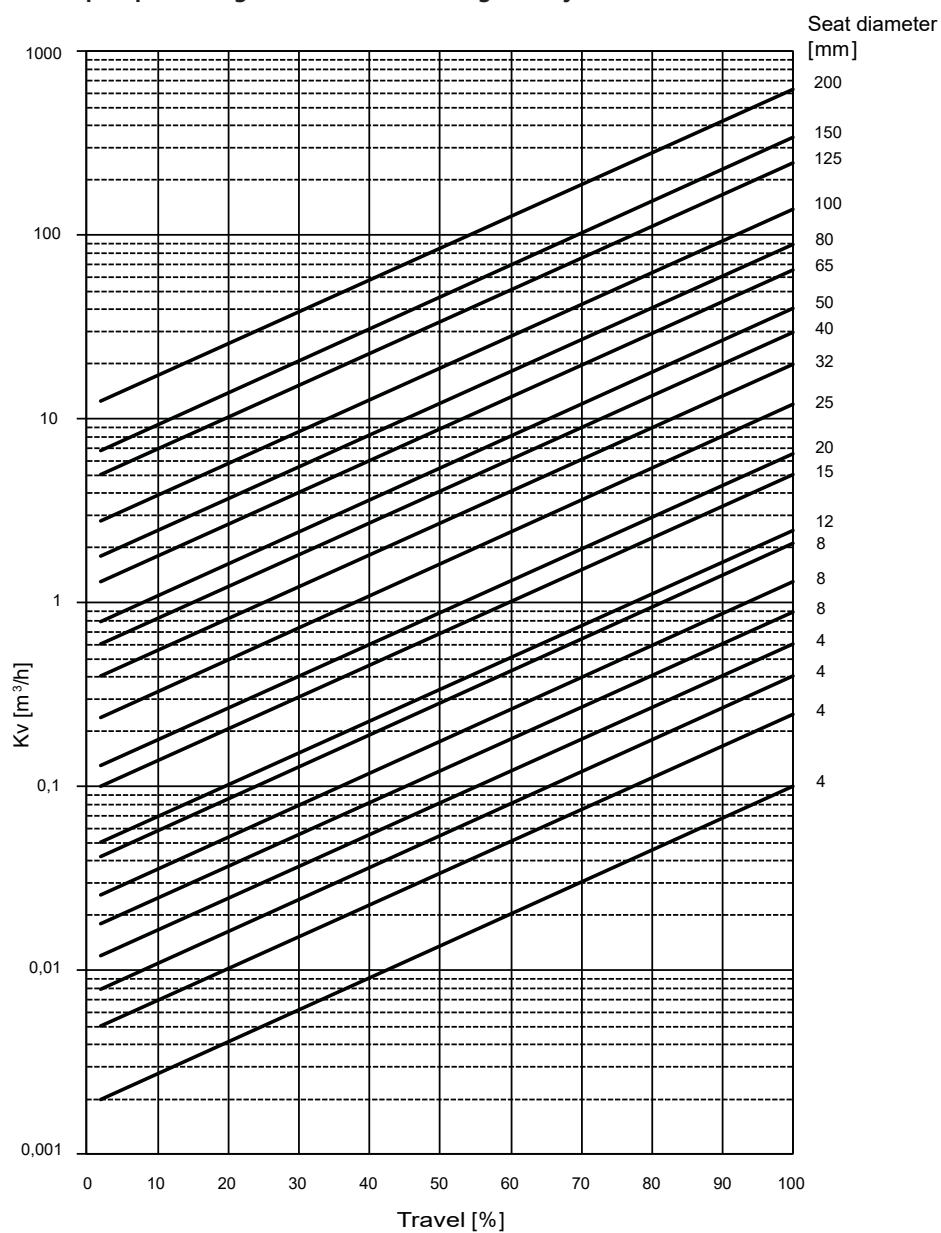


Table 21: Flow coefficients

Seat diameter [mm]	4				8			12	15	20	25	32	40	50	65	80	100	125	150	200
K_{vs} value [m^3/h]	0,10	0,25	0,40	0,60	0,90	1,30	2,10	2,50	5	6,5	12	20	30	40	65	90	140	250	340	630

9.3.2 Linear characteristics, rangeability 50:1

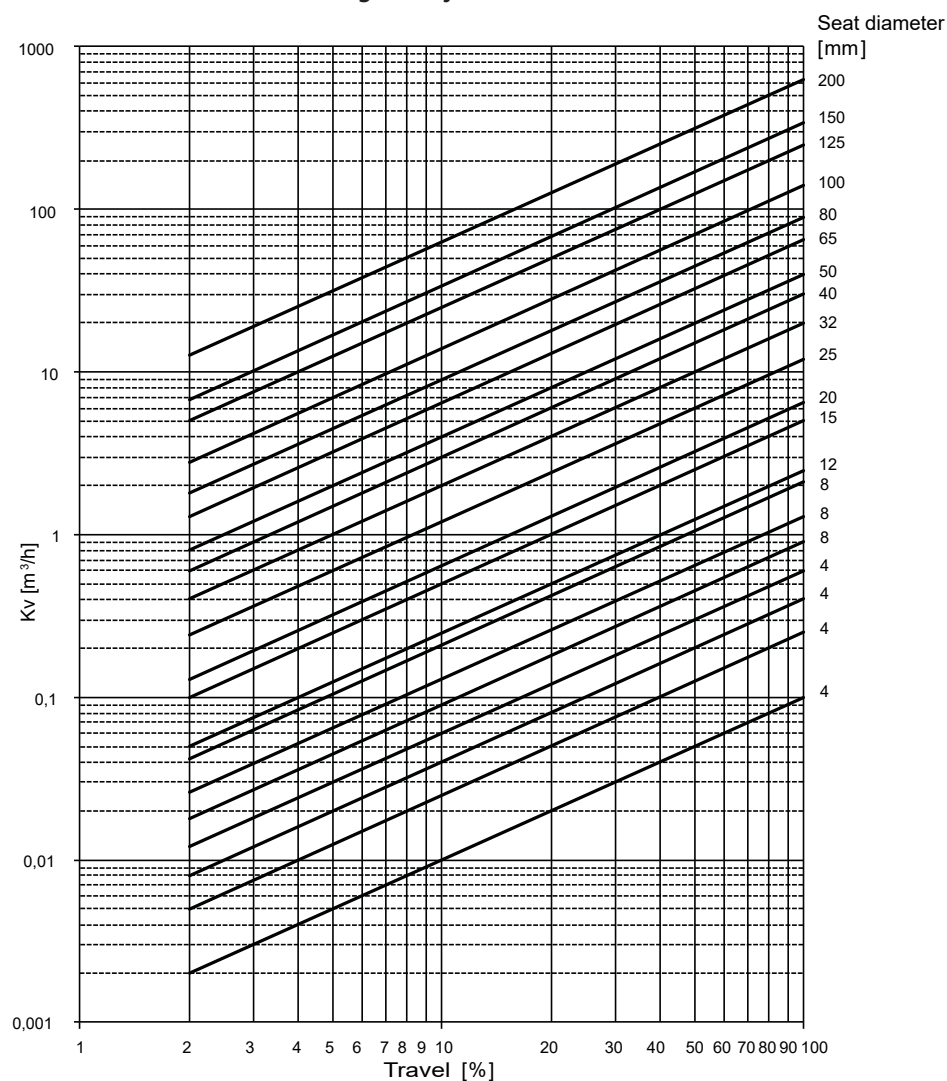


Table 22: Flow coefficients

Seat diameter [mm]	4				8			12	15	20	25	32	40	50	65	80	100	125	150	200
K _{vs} value [m³/h]	0,10	0,25	0,40	0,60	0,90	1,30	2,10	2,50	5	6,5	12	20	30	40	65	90	140	250	340	630

9.4 Dimensions and weights of BOA-CVP H control valve

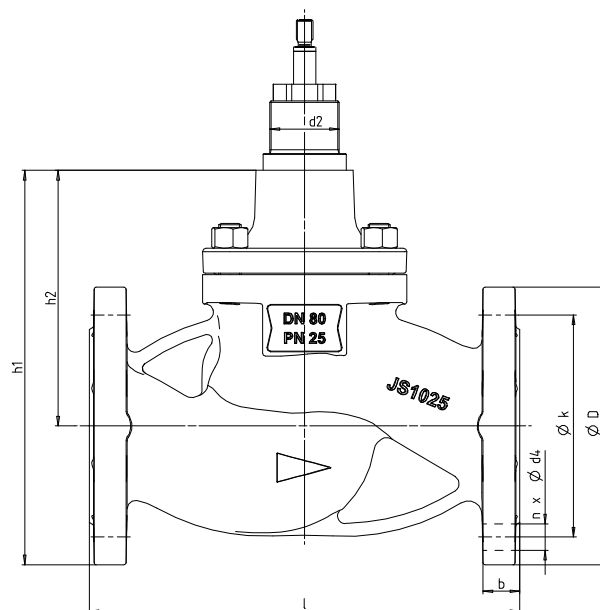


Fig. 21: Control valve without actuator

Table 23: Dimensions and weights

PN	DN	l	h ₁	h ₂	d ₂	D	b	k	n	d ₄	[kg]
		[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	
16	20	150	153,5	101,0	M39	105	16	75	4	14	6,3
	25	160	164,5	107,0	M39	115	16	85	4	14	6,9
	32	180	216,0	146,0	M39	140	18	100	4	19	10,4
	40	200	226,0	151,0	M39	150	18	110	4	19	11,6
	50	230	227,0	144,5	M39	165	20	125	4	19	13,8
	65	290	272,5	181,0	M50	185	20	145	4	19	22,3
	80	310	284,0	184,0	M50	200	22	160	8	19	28,4
	100	350	328,0	218,0	M50	220	24	180	8	19	38,4
	125	400	384,5	260,0	M50	250	26	210	8	19	60,5
	150	480	403,5	261,0	M50	285	26	240	8	23	83,0
25	20	150	153,5	101,0	M39	105	16	75	4	14	6,3
	25	160	164,5	107,0	M39	115	16	85	4	14	6,9
	32	180	216,0	146,0	M39	140	18	100	4	19	10,4
	40	200	226,0	151,0	M39	150	18	110	4	19	11,6
	50	230	227,0	144,5	M39	165	20	125	4	19	13,8
	65	290	272,5	181,0	M50	185	20	145	8	19	22,3
	80	310	284,0	184,0	M50	200	22	160	8	19	32,4
	100	350	335,5	218,0	M50	235	24	190	8	23	42,4
	125	400	394,5	260,0	M50	270	26	220	8	28	67,5
	150	480	411,0	261,0	M50	300	26	250	8	28	91,5
40	15	130	148,5	101,0	M39	95	16	65	4	14	6,4
	20	150	153,5	101,0	M39	105	18	75	4	14	7,0
	25	160	164,5	107,0	M39	115	18	85	4	14	7,6
	32	180	216,0	146,0	M39	140	18	100	4	18	11,0
	40	200	226,0	151,0	M39	150	18	110	4	18	12,4
	50	230	227,0	144,5	M39	165	20	125	4	18	17,5
	65	290	272,5	181,0	M50	185	22	145	8	18	27,0
	80	310	284,0	184,0	M50	200	24	160	8	18	35,0

PN	DN	l	h ₁	h ₂	d ₂	D	b	k	n	d ₄	[kg]
		[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	
40	100	350	335,5	218,0	M50	235	24	190	8	22	48,3
	125	400	394,5	260,0	M50	270	26	220	8	26	86,7
	150	480	411,0	261,0	M50	300	28	250	8	26	118,1
	200	600	507,5	320,0	M50	375	34	320	12	30	171,6

Mating dimensions as per standard

Face-to-face lengths:	DIN EN 558/1, ISO 5752/1
Flanges PN 16/25:	DIN EN 1092-2, flange type 21-2
Flanges PN 40:	DIN EN 1092-1, flange type 21-2
Raised face PN 10/16:	DIN EN 1092-2, type B
Raised face PN 40:	DIN EN 1092-1, type B

9.5 Dimensions and weights of actuator

For information on actuator dimensions and weights refer to the relevant operating manual.

10 EU Declaration of Conformity for BOA-CVE H, BOA-CVP H

Herewith we,

KSB SE & Co. KGaA
Johann-Klein-Straße 9
67227 Frankenthal (Germany)

declare that **the product:**

BOA-CVE H

PN16/25/40

DN 15 - 200

BOA-CVP H

PN16/25/40

DN 15 - 200

satisfies the safety requirements laid down in the European Pressure Equipment Directive 2014/68/EU.

In addition, the essential safety requirements of Machinery Directive 2006/42/EC, Annex 1, have been taken into account, and suitable action has been taken to prevent any hazards identified.

Applied harmonised European standards:

Globe valves

DIN EN 60534, DIN EN 12516, DIN EN 12266-1,
DIN EN 13789, DIN EN 1092-2, DIN EN 1092-1

Other standards/codes:

DIN 3840, AD 2000 code

Suitable for:

Fluids in Groups 1 and 2

Conformity assessment procedure:

Module H

Name and address of the notified body responsible for approval and surveillance:

TÜV SÜD Industrie Service GmbH
Westendstraße 199
80686 München (Germany)

Identification number of the notified body:

0036

Other applicable directives:

Electromagnetic compatibility:

Directive 2014/30/EU

Low-voltage Directive:

Directive 2014/35/EU

Valves \leq DN 25 comply with the European Pressure Equipment Directive 2014/68/EU, Article 4, Section 3. They must bear neither the CE marking nor the identification number of a notified body.

The EU Declaration of Conformity was issued in/on:

Frankenthal, 21 February 2022




Rainer Michalik
Head of Integrated Management Systems

Dieter Hanewald
Product Management and Product Development II
Frankenthal

11 UK Declaration of Conformity for BOA-CVE H, BOA-CVP H

Herewith we,

KSB SE & Co. KGaA
Johann-Klein-Straße 9
67227 Frankenthal (Germany)

declare that **the product:**

BOA-CVE H	PN 16/25/40	DN 15 - 200
BOA-CVP H	PN 16/25/40	DN 15 - 200

satisfies the safety requirements of the Pressure Equipment (Safety) Regulations 2016.

In addition, the essential safety requirements of the *Supply of Machinery (Safety) Regulations 2008* have been taken into account, and suitable action has been taken to prevent any hazards identified.

Applied harmonised European standards:

Globe valves
DIN EN 60534, DIN EN 12516, DIN EN 12266-1,
DIN EN 13789, DIN EN 1092-2, DIN EN 1092-1

Other standards/codes:

DIN 3840, AD 2000 code

Suitable for:

Fluids in Groups 1 and 2

Conformity assessment procedure:

Module H

Name and address of the UK-approved body:

TÜV SÜD BABT Unlimited
Octagon House
Concorde Way, Segensworth North
Fareham, Hampshire
PO15 5RL (United Kingdom)

Identification number of the UK-approved body:

0168


Other applicable regulations:

Electromagnetic compatibility:	Electromagnetic Compatibility Regulations 2016
Low-voltage Directive:	Electrical Equipment (Safety) Regulations 2016


Valves ≤ DN 25 comply with the Pressure Equipment (Safety) Regulations 2016, PART 1, para. 8 . They must bear neither the UKCA marking nor the identification number of a UK-approved body.

The UK Declaration of Conformity was issued in/on:

Frankenthal, 21 February 2022

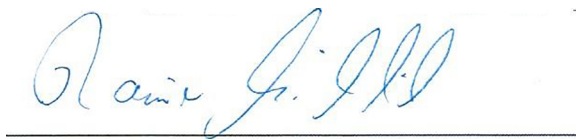

Rainer Michalik
Head of Integrated Management Systems

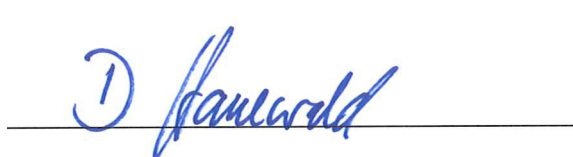

Dieter Hanewald
Product Management and Product Development II
Frankenthal

12 Certificate of Decontamination

Type:

Order number/

Order item number¹²:

Delivery date:

Field of application:

Fluid handled¹²:

Please tick where applicable¹²:


Corrosive



Oxidising



Flammable



Explosive



Hazardous to health



Seriously hazardous to health



Toxic



Radioactive



Hazardous to the environment



Safe

Reason for return¹²:

Comments:

.....

The product/accessories have been carefully drained, cleaned and decontaminated inside and outside prior to dispatch/ placing at your disposal.

We herewith declare that this product is free from hazardous chemicals and biological and radioactive substances.

- ☐ No special safety precautions are required for further handling.
- ☐ The following safety precautions are required for flushing fluids, fluid residues and disposal:

.....

.....

We confirm that the above data and information are correct and complete and that shipping is effected in accordance with the relevant legal provisions.

.....
Place, date and signature

.....
Address

.....
Company stamp

¹² Required fields

Index

C

CE marking 14
Certificate of Decontamination 53
Commissioning/start-up 23

D

Design 16
Design details 16
Dismantling 28
Disposal 13

E

Event of damage 6

F

Fitting the graphite gland packing 34
Fitting the O-ring 38
Fitting the PTFE V-packing 33
Fitting the seat gasket 36
Fitting the seat ring 36
Fitting the stem 35
Fitting the U-ring 37
Fitting the valve disc 35
Flow characteristics
 Equal-percentage 47
 Linear 48
Fluids in Group 1 15
Fluids in Group 2 15
Function 18

I

Installation position of actuator 20
Intended use 8

K

Key to safety symbols/markings 7

M

Maintenance 26
Marking 14
Materials 41

N

Name plate 15, 16
Noise characteristic 18

O

Operating limits 8, 24
Order number 6
Other applicable documents 6

P

Partly completed machinery 6
Piping 21
Preservation 12
Pressure/temperature ratings 24

R

Removing the O-ring 32
Removing the PTFE V-packing 28
Removing the seat gasket 30
Removing the seat ring 30
Removing the stem 30
Removing the U-ring 31
Removing the valve disc 30
Return to supplier 12
Returning to service 25

S

Safety 8
Safety awareness 9
Scope of supply 18
Shutdown 25
Storage 12

T

Tightening torques
 Actuator pillars 38
 Bonnet nuts 38
 Flange nuts 38
 Gland packing 39
Transport 11

U

UKCA marking 14

W

Warnings 7
Warranty claims 6



KSB SE & Co. KGaA

Johann-Klein-Straße 9 • 67227 Frankenthal (Germany)

Tel. +49 6233 86-0

www.ksb.com